

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.






IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

1.2 GENERAL SAFETY

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- WARNING!** Always wear approved eye protection when using the seal driver. Failure to do so may result in serious injury. *Normal spectacles are not adequate protection.*
- ✓ Familiarise yourself with the specific applications and limitations of the seal driver, as well as any potential hazards.
- ✓ If unsure of the applications or limitations of the seal driver contact your supplier.
- ✓ Ensure that the seal driver is the correct tool for the task. **DO NOT** use the seal driver for any purpose other than that for which it is designed.
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Ensure that the workpiece is stable and that there is adequate lighting.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Use the correct size and type of hammer for the task. The recommended diameter of hammer face is 10mm larger than tool head. Check that the hammer handle is in good order and is firmly secure in the hammer head. Note that for seal installation a soft-faced hammer should be adequate and will be less likely to damage the tool.
- ✓ Make sure that the face of the hammer and the head of the tool are clean and free from grease, oil, etc.
- ✓ Position the tool so that it is struck away from your body.
- ✓ Strike the driver squarely on the head - **DO NOT** hit the tool off centre or at an angle (fig.1).
- ✗ **DO NOT** use the seal driver if it is bent, chipped, has a mushroom head or is otherwise damaged (fig.2).
- ✗ **DO NOT** strike the side of the seal driver body (fig.3).
- ✓ Keep children and unauthorised persons away from the working area.
- ✗ **DO NOT** use seal driver if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** use the seal driver when you are tired, under the influence of alcohol, drugs or intoxicating medication.

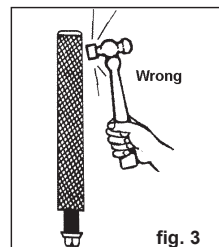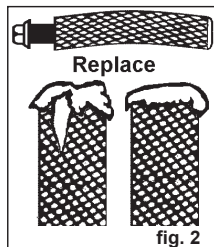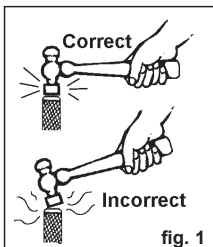

2. CONTENT & USE

2.1. Content

2.1.1. Check the content against the following list and contact your supplier if any items are missing or damaged.

• Handle with retaining screw • Back-up washer • 13 Plastic Adaptors • 3 Hooded Plastic Adaptors

2.1.2. Adaptor diameters - 33, 38, 41, 43, 49, 52, 54, 61.5, 65, 69.5, 76, 82, 85mm

Hooded Adaptor diameters - 62, 69.5, 88.5mm

2.2. Use


2.2.1. Remove screw (fig.4.A) from handle (fig.4.B). Place the steel back-up washer (fig.4.C) on the handle.

2.2.2. Select the adaptor (fig.4.D) which is slightly **smaller** than outside diameter of seal and place it on the handle.

2.2.3. Select a second adaptor (fig.4.E) which is slightly **larger** than inside diameter of seal and place it on handle.

2.2.4. Clamp all parts on the handle with the screw (fig.4.A).

2.2.5. Press the seal over the second adaptor (fig.4.E) and then tap into place in the housing (fig.5.F).

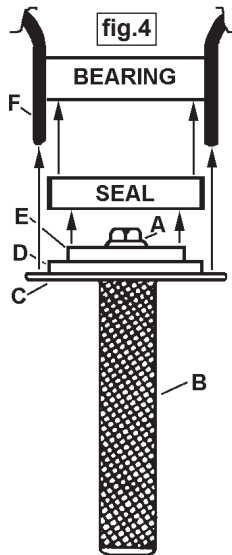

ALWAYS WEAR SAFETY GOGGLES AND GLOVES WHEN USING SEAL DRIVERS

Users of seal drivers are reminded that damage to the striking faces can take place and we recommend that safety goggles and gloves are worn when using this tool.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this equipment. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our latest catalogue and promotions, call us on 01284 757525 and leave your full name and address, including postcode.

SEALEY
AUTO SERVICE LINE

Professional
TOOLS

Sole UK Distributor
Sealey Group,
Bury St. Edmunds, Suffolk.



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk