

Model No's: YKSG20, YKSG30, YKSG50, YKSG75

Thank you for purchasing a Sealey Jack. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Regularly check guard for worn, loose, or damaged parts. If you find any of these conditions **DO NOT USE THE GUARD.** Failure to do so may cause severe injury!
 - ✓ Keep the guard free of dirt and debris.
 - ✗ **DO NOT** add to or modify any part of the guard. Doing so will void your warranty.
 - ✗ **DO NOT** use the guard for purposes other than those it was designed for.
 - ✓ Clean guard with water and mild detergent.
 - ✓ Always refer to the safety instructions provided in your floor press instruction manual.
- WARNING!** The warnings, cautions and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.



2. DESCRIPTION & SPECIFICATION

Lightweight aluminium frame with tough steel mesh. Adjustable guard protects the user and/or passer by from being injured if workpiece is accidentally dislodged under load. Bolts onto either side of the table and features five height increments, allowing the workpiece to be placed onto table with no obstruction. One way spring loaded locking clips then allow the guard to be pulled up quickly and snap straight into position for full protection.





3. ASSEMBLY / OPERATION

- 3.1 Choose which side of the floor press to fit the guard, fix the guard support brackets to the table using the pre-drilled holes and fixings provided. See Fig.1&2. Ensure the brackets are fitted with the locks on the outside and the correct way up as Fig.1.

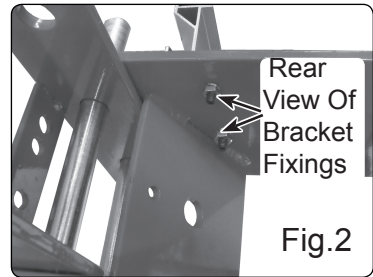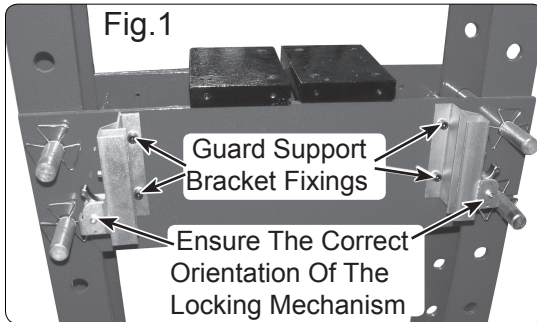

- 3.2 Take the guard and slide it into the brackets from above; the guard has a stop on either side at the top of the frame, this should be uppermost and facing towards the operator (Fig.3).

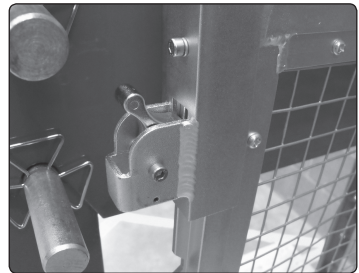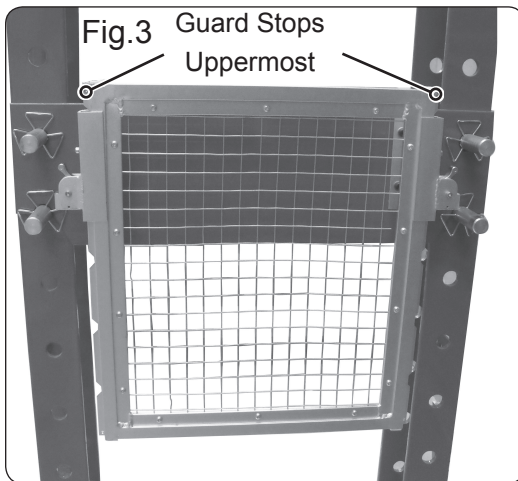

- 3.3 Pull the locks back on either side and lower the guard all the way down.

CAUTION! The guard will drop freely until it reaches the stops

- 3.4 To raise the guard to one of the five height increments, pull up the guard and the spring loaded locking clips will snap into position at the desired height.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

SEALY POWER PRODUCTS

Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

01284 757500

www.sealey.co.uk

01284 703534

sales@sealey.co.uk