





PARTS LIST FOR:
TELESCOPIC TRANSMISSION JACK
 Model: **800GTA.V2**

ITEM	PART NO.	DESCRIPTION
001	800GTA.V2/001	Hydraulic Unit
002	800GTA.V2/002	Pedal
003	800GTA.V2/003	Bush
004	800GTA.V2/004	Retainer Ring
005	800GTA.V2/005	Spring Cover
006	800GTA.V2/006	Piston
007	800GTA.V2/007	Spring
008	800GTA.V2/008	O-ring
009	800GTA.V2/009	Back-up Ring
010	800GTA.V2/010	Pin
011	800GTA.V2/011	Snap Ring
012	800GTA.V2/012	Pin
013	800GTA.V2/013	Screw
014	800GTA.V2/014	Handle
015	800GTA.V2/015	O-ring
016	800GTA.V2/016	Transit Screw
017	800GTA.V2/017	Air Bleed Screw
018	800GTA.V2/018	Support
019	800GTA.V2/019	Snap Ring
020	800GTA.V2/020	Pedal
021	800GTA.V2/021	Pin
022	800GTA.V2/022	Release Rod
023	800GTA.V2/023	O-ring
024	800GTA.V2/024	Release Valve
025	800GTA.V2/025	Spring
026	800GTA.V2/026	Nut
027	800GTA.V2/027	Washer, Brass
028	800GTA.V2/028	Ball Guide
029	800GTA.V2/029	Check Ball
030	800GTA.V2/030	Screw, Valve Cover
031	800GTA.V2/031	Washer, Brass
032	800GTA.V2/032	Separator Spring, Long
033	800GTA.V2/032	Separator Spring, Short
034	800GTA.V2/034	Check Ball
035	800GTA.V2/035	Overload Cover Screw
036	800GTA.V2/036	O-ring
037	800GTA.V2/037	Overload Spring
038	800GTA.V2/038	Ball Guide
039	800GTA.V2/039	Check Ball
040	800GTA.V2/040	Set Screw
041	800GTA.V2/041	Main Piston
042	800GTA.V2/042	Bypass Bush
043	800GTA.V2/043	O-ring
044	800GTA.V2/044	Back-up Ring
045	800GTA.V2/045	O-ring

ITEM	PART NO.	DESCRIPTION
046	800GTA.V2/046	Top Cap
047	800GTA.V2/047	Cup Seal
048	800GTA.V2/048	O-ring
049	800GTA.V2/049	Wiper
050	800GTA.V2/050	Main Piston
051	800GTA.V2/051	O-ring
052	800GTA.V2/052	Top Cap
053	800GTA.V2/053	Set Screw
054	800GTA.V2/054	Cup Seal
055	800GTA.V2/055	Wiper
101	800GTA.V2/101	Leg
102	800GTA.V2/102	Spring Washer
103	800GTA.V2/103	Screw
104	800GTA.V2/104	Castor
105	800GTA.V2/105	Screw
106	800GTA.V2/106	Spring Washer
107	800GTA.V2/107	Nut
201	800GTA.V2/201	Saddle Base, Lower
202	800GTA.V2/202	Saddle Base, Upper
203	800GTA.V2/203	Saddle Plate
204	800GTA.V2/204	Screw
205	800GTA.V2/205	Adjustment Pin
206	800GTA.V2/206	Snap Ring
207	800GTA.V2/207	Pin
208	800GTA.V2/208	Snap Ring
209	800GTA.V2/209	Tilt Screw
210	800GTA.V2/210	Tilt Screw
211	800GTA.V2/211	Adjustment Pin
212	800GTA.V2/212	Thrust Bearing
213	800GTA.V2/213	Nut
214	800GTA.V2/214	Cotter Pin
215	800GTA.V2/215	Saddle Angle (1)
216	800GTA.V2/216	Screw
217	800GTA.V2/217	Washer
218	800GTA.V2/218	Nut
219	800GTA.V2/219	Saddle Angle (2)
220	800GTA.V2/220	Saddle Angle (3)
221	800GTA.V2/221	Screw
222	800GTA.V2/222	Washer
223	800GTA.V2/223	Nut
224	800GTA.V2/224	Hook Bolt
225	800GTA.V2/225	Wing Nut
226	800GTA.V2/226	Chain Shackle
227	800GTA.V2/227	Chain
228	800GTA.V2/228	Shackle Screw

Issue: 1
 Date Issued: 190803