

3. MAINTENANCE

3.1. CHANGING THE TORCH BULB

WARNING! Ensure the torch is turned off and the lens has cooled prior to changing the bulb.

1. Turn the ring (fig 5A) anti-clockwise and remove it together with the glass lens.
2. Carefully lift out the reflector assembly.
3. Remove the old bulb.
4. Fit the new bulb into the housing, using a soft lint-free cloth to handle. Use only 6V 5W halogen bulb (see parts list).
5. Replace the reflector assembly.
6. Replace the glass lens and ring, tighten by turning the ring clockwise.



fig 5

3.2. CHANGING THE BATTERY

WARNING! Ensure you read, understand and apply safety instructions relating to the battery before changing.

1. Undo the torch body by removing the 4 screws (fig 6)
2. Carefully disconnect the wires (fig 7) from the battery.

WARNING! Beware of causing a short circuit.

3. Replace battery with genuine Sealey battery and install by reversing the above procedure.

Note: Take care not to pinch or cross-connect any wires.

4. Dispose of old batteries in accordance with local authority lead-acid battery regulations. **DO NOT** dispose of with regular refuse.


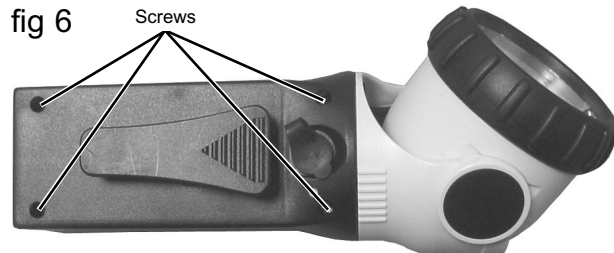


fig 6

fig 7

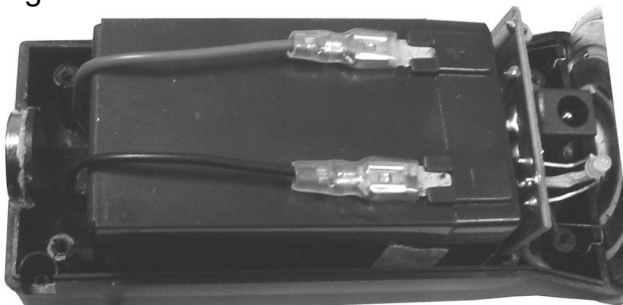

PARTS LIST FOR: AK432 RECHARGEABLE TORCH

Part No	Description	Part No	Description
AM042863C-1	Halogen bulb 6V 5W	AM042863C-2	Nylon bag
AM042863C-3	Rechargeable battery 6V 2.3Ah	AM042863C-4	Cigarette lighter cord DC 12V
AM042863C-5	Adaptor AC 230V W/BS approval	AM042863C-6	Belt clip

Version 1
Issue Date 130404

CE Declaration of Conformity

We, the sole importer into the UK, declare that the product listed here is in conformity with the following standards and directives. The construction file for this product is held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.

Rechargeable Torch
Model AK432

73/23/EEC Low Voltage Directive
89/336/EEC EMC Directive

Signed by Mark Sweetman

13 April 2004

For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Products.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this equipment.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

SEALEY POWER PRODUCTS

Sole UK Distributor, Sealey Group,
Bury St. Edmunds, Suffolk.

01284 757500

01284 703534

sales@sealey.co.uk

www.sealey.co.uk

**SEALEY
POWER
PRODUCTS**

INSTRUCTIONS FOR:

SWIVEL HEAD RECHARGEABLE TORCH

Model: **AK432**

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

1.1. GENERAL

- ✓ Ensure the torch is correctly charged before initial use.
- x **DO NOT** cover or block the lens during use.
- x **DO NOT** turn the torch on when it is being re-charged.
- x **DO NOT** shine directly into your, other person's or animal's eyes.
- x **DO NOT** stand the torch near any surface or item that may be adversely effected by the heat emitted from the lens.
- x **DO NOT** allow children to use the torch.
- x **DO NOT** handle or move the torch whilst it is being charged.
- x **DO NOT** use the torch if you suspect that the battery or the torch casing is damaged.
- x **DO NOT** handle lamp bulb with your fingers. Use a soft lint-free cloth.
- ✓ Ensure that genuine and correctly rated battery and bulb are used for replacements.
- ✓ When not in use, store the torch in a safe, dry, childproof location.

1.2. BATTERY SAFETY

DANGER! - BE AWARE, LEAD-ACID BATTERIES MAY BE DANGEROUS IF NOT HANDLED WITH CARE AND ACCORDING TO THESE INSTRUCTIONS.

- ✓ Before exposing the battery for replacement, remove personal metallic items such as rings, bracelets, necklaces and watches. A lead-acid battery can produce a short-circuit current high enough to weld a ring to metal, which would cause severe burns.
- x **DO NOT** smoke or allow a spark or flame in the vicinity of the battery.
- ✓ Ensure the charger is switched off and disconnected from the torch before attempting to open the lamp unit.
- ✓ If the batteries' terminals are corroded or dirty, clean them before replacing battery.
- x **DO NOT** dis-assemble the battery for any reason.
- **WARNING! DO NOT** allow metal tools to touch both battery terminals simultaneously. Arcing or short circuit will result.
- x **DO NOT** allow battery wires to touch each other or to make contact with any other metallic part.
- x **DO NOT** cross-connect wires to the battery as this will damage the unit. Ensure positive (+) (RED) is to positive and negative (-) BLACK is to negative.
- x **DO NOT** leave battery in a discharged state, recharge battery immediately. If the torch is not in use, recharge the battery every three months. Dispose of the old battery in accordance with local authority acid battery regulations. **DO NOT** dispose of with regular refuse.