


Parts Information:
Cordless Jigsaw 20V SV20 Series - Body Only
Model No: CP20VJS

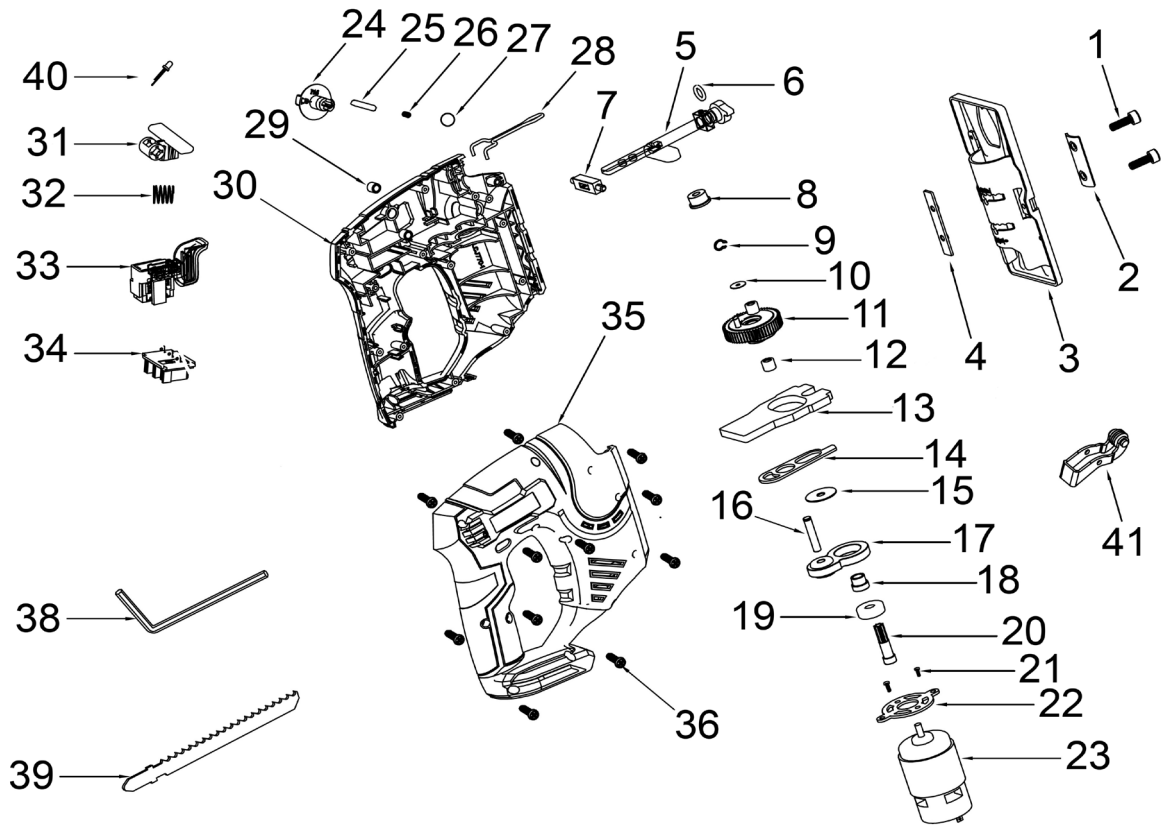

Item	Part No.	Description
1	CP20VJS.01	Bolt
2	CP20VJS.02	Base Plate Gasket
3	CP20VJS.03	Base Plate
4	CP20VJS.04	Base Plate Fixing
5	CP20VJS.05	Reciprocating Lever
6	CP20VJS.06	Sealing Ring
7	CP20VJS.07	Reciprocating Lever Support
8	CP20VJS.08	Drive Wheel
9	CP20VJS.09	Circlip
10	CP20VJS.10	Washer
11	CP20VJS.11	Transmission Gear
12	CP20VJS.12	Needle Bearing
13	CP20VJS.13	Balance Block
14	CP20VJS.14	Blade Adjustment Plate
15	CP20VJS.15	Gasket
16	CP20VJS.16	Needle Roller
17	CP20VJS.17	Centre Frame
18	CP20VJS.18	Balncer for Centre Frame
19	CP20VJS.19	Bearing
20	CP20VJS.20	Motor Gear Pinion

Item	Part No.	Description
21	CP20VJS.21	Screw
22	CP20VJS.22	Motor Support
23	CP20VJS.23	Motor
24	CP20VJS.24	Switch Button
25	CP20VJS.25	Adjustment Lever
26	CP20VJS.26	Spring
27	CP20VJS.27	Steel Ball
28	CP20VJS.28	Protective Spring
29	CP20VJS.29	Reciprocating Lever Support Seat
30	CP20VJS.30	Casing, Left Side
31	CP20VJS.31	Switch Lock Lever
32	CP20VJS.32	Switch Spring
33	CP20VJS.33	Switch
34	CP20VJS.34	Battery Contact Plate
35	CP20VJS.35	Casing, Right Side
36	CP20VJS.36	Tapping Screw
38	CP20VJS.38	Allen Key
39	CP20VJS.39	Wood Cutting Blade
40	CP20VJS.40	Led Light
41	CP20VJS.41	Blade Holder

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.