



Item	Part No.	Description
1	CP2440VHK.08	Housing Complete
2	CP2440VHK.02	Switch Ass'y
3	CP1835VHK.03	Switch Cover
4	CP2440VHK.04	Gear Box & Motor Ass'y
5	CP1835VHK.05	2-Speed Switch Knob
6	CP2440VHK.06	Top Cover & LCD Ass'y
7	CP1835VHK.07	Push Knob
8	CP2440VHK.08	Housing Complete
9	CP2440VHK.09	Handle Grip,Soft Grip
10	CP1835VHK.10	Self-Tapping Screw 3.5x12mm

Item	Part No.	Description
11	CP1835VHK.11	Self-Tapping Screw 3.5x18mm
12	CP1835VHK.12	Self-Tapping Screw 3.5x10mm
13	CP1835VHK.13	Screw 3.0x6mm
14	CP1835VHK.14	Hexagon Nut M3x0.5
15	CP1835VHK.15	13mm Keyless Chuck
16	CP1835VHK.16	Chuck Screw M5x23
17	CB2405	Cordless Power Tool Battery 24V
18	CP2440VHK.CH	Charger
19	CP2440VHK.19	Front Handle
20	CP2440VHK.20	Depth Rod

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.