


## STARTER/CHARGER PARTS LISTING FOR MODEL: ELECTROSTART 300

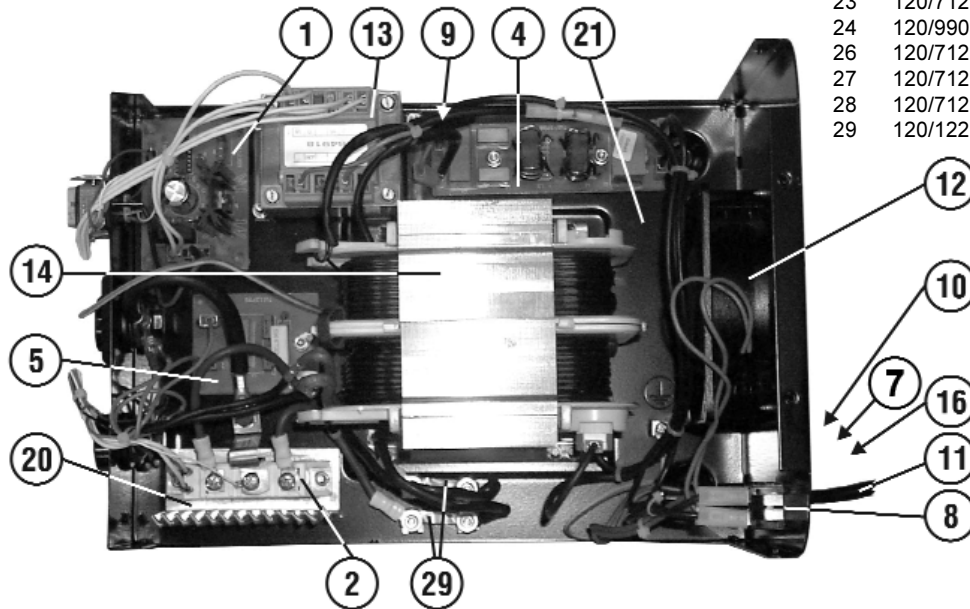

ITEM	PART NO.	DESCRIPTION
1	120/112399	STANDBY PCB
2	120/112624	SCR
3	120.990863	CONTROL CARD
4	120/112798	PRIMARY FILTER CARD
5	120/112799	SECONDARY FILTER CARD
6	120/120019	LIGHTER CONNECTION CABLE
7	120/122159	FUSE HOLDER
8	120/122381	SWITCH, GREEN ROCKER
9	120/122760	FUSE, 400mA (GLASS)
10	122/99.08.91	FUSE 16 AMP
11	MC3CX1.5	MAINS CABLE
12	120/152101	FAN
13	120/164918	AUXILIARY TRANSFORMER (SO)
14	120/164956	TRANSFORMER
16	120/322138	BUSHING, CABLE
17	120/322239	HANDLE
18	120/322242	CLIP
19	120/322472	FRONT PANEL (SO)
20	120/432255	RADIATOR
21	120.648731	BOTTOM COVER
22	120/655040	COVER
23	120/712035	DINSE SOCKET
24	120/990330	SOCKET, COMMAND LEAD (SO)
26	120/712001	CLAMP, EARTH (BLACK)
27	120/712002	CLAMP, POSITIVE (RED)
28	120/712039	DINSE PLUG
29	120/122350	FUSE 50AMP



**SEALEY POWER WELDERS**

Sole UK Distributor  
**Sealey Group,**  
 Bury St. Edmunds, Suffolk.

☎ 01284 757500  
 📠 01284 703534  
 ✉ sales@sealey.co.uk  
 🌐 www.sealey.co.uk

