



Item	Part No.	Description
1	IR16.01	Support Tank for Oil Tank
2	IR16.02	Connection Plate
3	IR19-03	Front Guard
5	IR16.05	Base
6	IR16.06	Cable Grip
7	IR19-07	Inside Plate
8	IR16.08	Left Side Plate
9	IR16.09	Exhaust Pipe Sleeve
10	IR16.10	Left Inside Plate
11	IR19-11	Top Cover
12	IR16.12	Pipe Clamp
13	IR16.13	Exhaust Pipe Seat
14	IR16.14	Protection Grille
15	IR16.15	Thermostat
16	IR16.16	Bracket for Electrical Box

Item	Part No.	Description
17	IR16.17	Pipe Bracket (A)
18	IR16.18	Pipe (Short)
19	IR16.19	Rear Panel
20	IR19-20	Heat Resistance Plate
21	IR16.21	Right Side Plate
22	IR16.22	Handle (for Side Door)
23	IR16.23	Decorative Cover
24	IR16.24	Label (for Control Panel)
25	IR16.25	Control Panel PCB
26	IR16.26	Control Box
27	IR16.27	Lock & Key
28	IR19-28	Front Panel
29	IR16.29	Power Control PCB
30	IR16.30	Base for Control Panel
31	IR16.31	Right Inside Panel

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Parts Information:
Industrial Infrared Diesel Heater 19kW
Model No: IR19

Item	Part No.	Description
32	IR16.32	Connection Plate (for Inside Panel)
33	IR16.33	Castor Wheel Plate
34	IR16-V2-34	Wheel, Swivel Castor, 4-Bolt Fixing, (D: 63 W: 30 B: 8 H: 80)
--	IR16-V2-34B	Wheel, Swivel Castor, 4-Bolt Fixing (w/ Brake) (D: 63 W: 30 B: 8 H: 80)
35	IR16.35	Oil Tank Assembly
36	IR19-36	Fuel Tank Assembly 70L
37	IR16.37	Tank Cap (c/w Oil Filter)
38	IR16.38	Decorative Plate
39	IR16.39	Vent Plug
40	IR16.40	Sensor
41	IR16.41	Pipe (Middle Section)
42	IR16.42	Lower Front Panel
43	IR16.43	Pipe Clamp
44	IR16.44	Pipe Bracket
45	IR16.45	Connection Plate
46	IR16.46	Muffler Plate
		Parts for Control Panel PCB (Not Shown)
--	IR16-25-02	Control Panel
--	IR16-25-03	Power Board
--	IR16-25-04	Socket Adaptor
--	IR16-25-05	Wire Assembly
--	IR16-25-06	Red PVC Wire Lead
--	IR16-25-07	Black PVC Wire Lead
--	IR16-25-08	Detection Wire Set

Item	Part No.	Description
--	IR16-25-09	Stop Detection Wire Set
--	IR16-25-10	Oil Float Assembly
--	IR16-25-11	Temperature Sensor Wire
		Parts for Oil Tank Assembly (Not Shown)
--	IR16-35-02	Electromagnetic Pump
--	IR16-35-03	Connector 4mm
--	IR16-35-05	Capacitor for Motor
--	IR16-35-06	Ignition Needle Assembly
--	IR16-35-07	High Voltage Package
--	IR16-35-08	Photocell Assembly
--	IR16-35-09	Electromagnetic Fuel Return Valve
--	IR16-35-10	Injector Nozzle Seat
--	IR19-35-11	Nozzle
--	IR16-35-12	Nozzle 0.30gph 60h
--	IR16-35-14	Fan Wheel
--	IR16-35-15	Copper Pipe (3-Way)
--	IR16-35-16	Flame Plate
--	IR16-35-17	Motor
--	IR16-35-18	Oil Filter Plug
--	IR16-35-19	Copper Pipe (OD 3.2mm x 159mm)
--	IR16-35-20	Temperature Control
--	IR16-47	Toolbox Lock (c/w Key) (Not Shown)
--	IR16-48	Elbow Funnel (Not Shown)
--	IR16-F	Filter (Not Shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk