


ITEM	PART NO.	DESCRIPTION
1	MGNT-20LA/1239	Cover
2	GN-30/1231	Screw
3	MGNT-20LA/1371	O-Ring
4	MGNT-20/1131	O-Ring
5	MGNT-20LA/1102	Piston guide
6	MGNT-20/1136	O-Ring
7	MGNT-20LA/1146	Piston
8	MGNT-20LA/1375	O-Ring
9	MGNT-20/1154	O-Ring
10	MGNT-20LA/1145	Piston
11	MGNT-20/1228	O-Ring
12	MGNT-10B/1371	O-Ring
13	MGNT-20/1148	O-Ring
14	MGNT-20LA/1105	Piston
15	MGNT-20/1461	Ring
16	MGNT-20/1164	O-Ring
17	ME-15001/1348	O-Ring
17.1	ME-10001/1136	O-Ring
18	MGNT-20/2201	Piston guide
19	MGNT-20/2202	O-Ring
21	MGNT-20/2201	Piston guide
22	MGNT-20/2202	O-Ring
25	MGNT-20LA/C25	Hyd.Unit.
26	M-75/1130	O-Ring
27	MG-100/1444	Screw
28	TR-2/1289	O-Ring
29	MB-22-A/1162	Spring
30	NS-1/1212	Ball
31	TR-2/1363	Ball
32	BMAP-1/C9	Safety valve
33	MGNT-20LA/2012	Valves
34	EF-200/1596	Screw
35	MGN-20/C42	L.C.S.
36	TJ-2/2100	Washer
37	ME-1501/1149	Ball
38	MGN-20/1223	O-Ring
39	MGNT-10B/1126	Nut
40	MGN-20/2218	O-Ring
41	MGN-20/1527	Spring
42	ME-1501/1132	O-Ring
43	MGN-20/1125	Axle
44	MGNT-20/1128	Ring
45	MGNT-20/1380	Washer
46	PF-8/1371	O-Ring
47	MGN-20/2097	Ret.ring
48	MGNT-20/2183	Cylinder
49	CH-12/1134	O-Ring
50	MGNT-20/1281	Piston
51	MGT-5/1136	O-Ring
52	MG-10/1131	O-Ring
53	MGNT-20/1492	U.cover
54	NS-1/1119	Washer
55	MG-50/1361	Ring
56	MGNT-20/1655	Nut
57	MGNT-20/2191	B.cover
58	M-40/1136	O-Ring
59	MGNT-20/1153	Air filter
60	GNT-30/1133	Seal
61	MGNT-20/1143	Bushing
62	MGNT-20/1114	Nut
63	MGNT-20/1241	Spring
64	MGNT-20/1609	Cylinder
65	MGNT-20/C8	PP.piston
66	MGNT-20/1616	Plug
67	MGNT-20/1613	Seal
68	MGNT-20/1615	Axle
69	MGNT-20/1611	Seal
70	MGNT-20/1610	Main piston
71	GNT-30/1614	O-Ring
72	M-40/1136	O-Ring
73	MGNT-20/1599	U.cover
74	MGNT-10/2053	Elbow
75	MGNT20LA/1237-D	Frame
76	MGNT-20LA/1237-I	BFrame
77	MGN-20/1716	Washer
78	MGN-20/1596	Screw
79	MB-21-B/1398	Nut
80	MGNT-20/2203	Bushing
81	MGNT-20/1259-I	Axle
82	MB-22-B/1377	Ret.ring
83	FC-51/1649	Washer
84	MGNT-20/1190	Axle
85	MGN-20/1213	Wheel
86	MGN-20/1277	Ret.ring
87	MGNT-20/1278	Axle
88	MB-21-B/1398	Nut
89	YMK-30/1674	Screw
90	MGNT-20/1259-I	Screw
91	MGNT-20/1346	Bushing
92	NS-1/1624	Screw
93	MGNT-10B/1197	Plastic p.
94	MGNT-20/C38	Extn holder
95	MGN-20/1866	Extension
96	MGNT-20/C28	Oil reserv.
97	MB-22-A/1289	O-Ring
98	MGNT-20/2014	Filler/dipstick
99	MGNT-20/2051	Connector

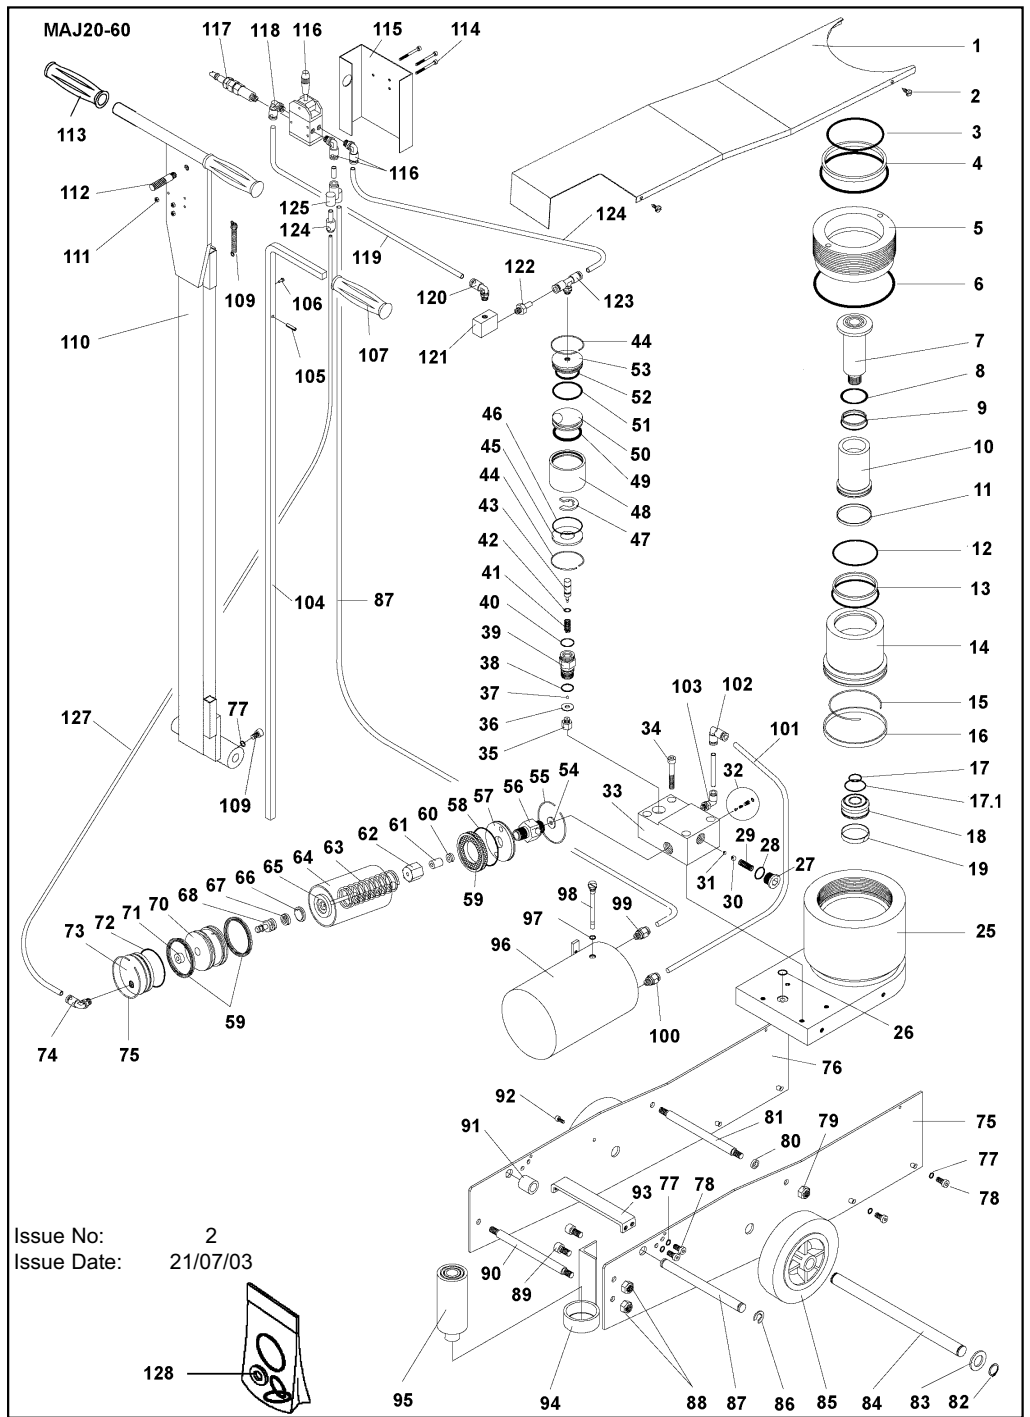

Issue No: 2
Issue Date: 21/07/03

100	MGNT-20/2210	Connector
101	MGNT-20/1675	Plastic p.
102	MGNT-20/2211	Elbow
103	MGNT-20/2050	Elbow
104	MGN-20/1704	Trigger
105	MGN-20/1584	Pin
106	MGN-20/1263	Screw
107	MGN-20/1452	Grip
108	PTM-1/1567	Spring
109	MB-22-B/1331	Screw
110	MGN-20/C21	Handle
111	MGN-20/1846	Nut
112	MGN-20/2200	Axle
113	BM-04/1452	Grip
114	MGN-20/1306	Screw
115	MGN-20/1305	Cover

116	MGN-20/2047	Valve
117	MGN-20/1804	Connector
118	MGN-20/2050	Elbow
119	D8 L 2060	Plastic p.
120	MGN-20/2050	Elbow
121	MGN-20/2194	Vacuum block
122	MGNT-14L/2197	Connector
123	MGN-20/2053	T.conn.
124	D8 L 2200	Plastic p.
125	Y 8-8	'Y' connector
126	REDUC 8-6	Reducer
127	D6 L 1750	Plastic p.
128	RMGNT-14LA	Repair kit.

(Repair kit contains parts: -3-4-6-8-9-11-12-13-14-15-16--17-17.1-19-26-28-36-38-40-42-44-46-49- 51-52-54-58-67-69-71-72-98

IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE MACHINE. Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK. **DO NOT RETURN JACKS TO US.** Please telephone us on 01284 757500 to obtain the address and phone number of your local agent. If Jack is under guarantee please contact your dealer. **NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.**

IMPORTANT: No liability is accepted for incorrect use of this product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** Call on 01284 757525 for a copy of our catalogue. Leave your full name, address & postcode.