

4. MAINTENANCE

□ WARNING! Be sure to disconnect the lamp from the mains power supply before carrying out any maintenance.

- 4.1 Keep the lamp clean.
- 4.2 Check cable for any signs of wear. If the plug and/or cable are worn/broken, remove the lamp from service immediately and have it repaired by a qualified electrician.
- 4.3 To change the fluorescent tube, unscrew the four cover retaining screws on the rear of the lamp casing.
- 4.4 Remove the retaining band from the top of the tube.
- 4.5 Holding the tube near the bottom, gently lever from side to side whilst applying an upward force.
- 4.6 Insert a new tube using a lint-free cloth to handle the new tube. Ensure that the tube is seated correctly.
- 4.7 Refit the retaining band.
- 4.8 Screw the cover back into place.

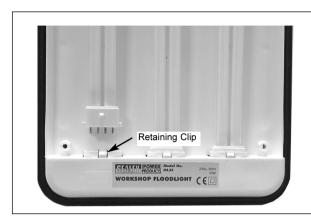

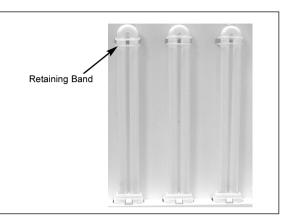

5. SPARE PARTS

Fluorescent tube: ML33B SPARE TUBE FOR ML33 11WATT

Parts Issue: 1 Issue Date: 07072004

6. DECLARATION OF CONFORMITY

33W WORKSHOP FLOODLIGHT 230V Model ML33

73/23/EEC Low Voltage Directive

89/336/EEC EMC Directive

93/68/EEC CE Marking Directive

Declaration of Conformity We, the sole importer into the UK, declare that the product listed here is in conformity with the following standards and directives.



Signed by Mark Sweetman



01 July 2004

The construction file for this product is held by the Manufacturer and may be inspected by a national authority upon request to Jack Sealey Ltd.

For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Products.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: Call 01284 757525 for our catalogue and promotions. Leave your full name, address and postcode.





