

## 4. MAINTENANCE

- ❑ **WARNING!** Before replacing the fluorescent tubes or performing any maintenance the unit must be unplugged from the mains. Allow the tubes to cool before touching them.
- ❑ **WARNING!** Do not turn the unit on with the transparent cover removed or with the tubes removed.

### 4.1 CHANGING THE FLUORESCENT TUBES

- 4.1.1 Replacement tubes must be the same type and rating as the original tubes supplied.  
Use Sealey replacement tubes PART NO. **ML36110F.FB.**
- 4.1.2 Remove the transparent cover by releasing the securing clips by first pulling the rear of the clip forward, then unlatching the clip from the front ridge (as shown in fig 1). Now carefully lift the cover off.
- 4.1.3 Each tube can be removed by rotating it in either direction until one of the connector pins appears at the top of the tube holder slot. Lift out the old tube and replace it with a new one. Push the new tube all the way into the tube holder slots at both ends and then rotate the tube a quarter of a turn in either direction.
- 4.1.4 Ensure that the tubes are correctly installed and seated before turning on.

### 4.2 CLEANING

- 4.2.1 Clean the unit with a damp cloth and a mild soapy solution. Do not use solvents or abrasive cleaners.