
3. MAINTENANCE

- 3.1 The ML48 requires very little by way of maintenance. Keep the unit clean with a moist cloth. DO NOT use solvents or abrasives.
- 3.2 Inspect the unit for damage before each use, especially if intending to use it outside. Should you suspect any damage/malfunction likely to cause a hazard (e.g. split case, bare wires, shattered tube), remove the unit from service immediately and contact your authorised Sealey dealer for advice/repairs.
- 3.3 Replacing the fluorescent tubes:
- 3.3.1 Remove the eight holding screws from the case (fig 2) and lift the cover on its hinge.
- 3.3.2 Remove the supporting rubber bands and carefully slide the tubes horizontally away from their respective bases.
- 3.3.3 Slot the new tubes into the bases with equal care, before replacing the rubber bands and lowering the cover.
- 3.3.4 Ensure the rubber seal is in place and remains undamaged, then replace the eight holding screws being sure not to overtighten them.

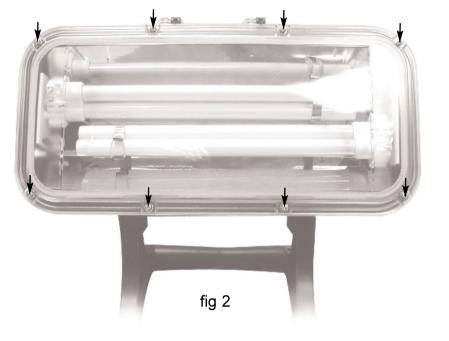

4. SPARE PARTS

Part No.: Description: ML48B SPARE TUBE FOR ML48 24WATT

5. DECLARATION OF CONFORMITY

 48W WORKSHOP FLOODLIGHT 230V
 Declaration of Conformity We, the sole importer into the UK, declare that the product listed here is in conformity with the following standards and directives.

 MODEL ML48
 73/23/EEC Low Voltage Directive
 Signed by Mark Sweetman
 19 July 2004

 89/336/EEC EMC Directive
 The construction file for this product is held by the Manufacturer and may be inspected by a national authority upon request to Jack Sealey Ltd.
 19 July 2004

 93/68/EEC CE Marking Directive
 For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Products.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

