



Item	Part No.	Description
1	PS01CC.01	SWITCH COVER
2	PS01CC.02	TOP COVER
3	PS01CC.03	SWITCH
4	PS01CC.04	PCB
5	PS01CC.05	MICRO SWITCH
6	PS01CC.06	AUTOMATIC POLE
7	PS01CC.07	TOP PAPER GUIDE

Item	Part No.	Description
8	PS01CC.08	MOTOR
9	PS01CC.09	MOTOR PAD (B)
10	PS01CC.10	MOTOR PAD (A)
11	PS01CC.11	SUPPORT
12	PS01CC.12	GEAR (2)
13	PS01CC.13	GEAR (3)
14	PS01CC.14	GEAR (4)
15	PS01CC.15	GEAR (5)
16	PS01CC.16	GEAR SUPPORT
17	PS01CC.17	CUTTER SHAFT
18	PS01CC.18	CUTTER SHAFT (SHORT)
19	PS01CC.19	CUTTER (B)
20	PS01CC.20	CUTTER (A)
21	PS01CC.21	BLADE RING
22	PS01CC.22	HEX NUT
23	PS01CC.23	SUPPORT RING
24	PS01CC.24	DELAY CAM
25	PS01CC.25	DELAY SPRING
26	PS01CC.26	SIDE PLATE
27	PS01CC.27	BOTTOM PAPER GUIDE
28	PS01CC.28	MICRO SWITCH
29	PS01CC.29	BOTTOM COVER
30	PS01CC.30	PAPER BIN

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.