



Item	Part No.	Description
1	PSI1000.01	SOCKET
2	PSI1000.02	INDICATOR LIGHT
3	PSI1000.03	SWITCH
4	PSI1000.04	SCREW FOR PANEL
5	PSI600.05	FRONT PANEL
6	PSI300.V2-06	LOWER PANEL
7	PSI300.V2-07	UPPER PANEL
8	PSI1000.08	SIDE COVER
9	PSI300.V2-09	FAN

Item	Part No.	Description
10	PSI300.V2-10	FAN COVER
11	PSI300.V2-11	SCREW
12	PSI1000.04	SCREW FOR PANEL
13	PSI600.13	TERMINAL (POSITIVE)
14	PSI600.14	TERMINAL (NEGATIVE)
15	PSI300.V2-15	CIRCUIT BOARD
16	PSI300.V2-16	USB PORT
--	PSI300.V2-17	CIGARETTE LIGHTER PLUG (NOT SHOWN)
--	PSI300.V2-18	FUSE 20AMP (NOT SHOWN)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.