



Pump Assembly - Part No: RE97.4-01

Item	Description
1	Handle, grip
2	Handle
3	Handle, socket
4	Pin socket
5	Retaining ring
6	Pin, piston
7	Piston
8	Pump
9	Washer
10	Seal
11	Seal
12	Copper Washer
13	Pump valve assembly
16	Nut
17	Pump foot
18	Base
19	Seal
20	Reservoir
21	Filter
22	Base
23	Ball
24	Screw
25	Retaining ring
26	O-Ring
27	Release rod
63	O-Ring
64	Screw
65	O-Ring
66	Screw
67	O-Ring
68	Bearing
69	Bar

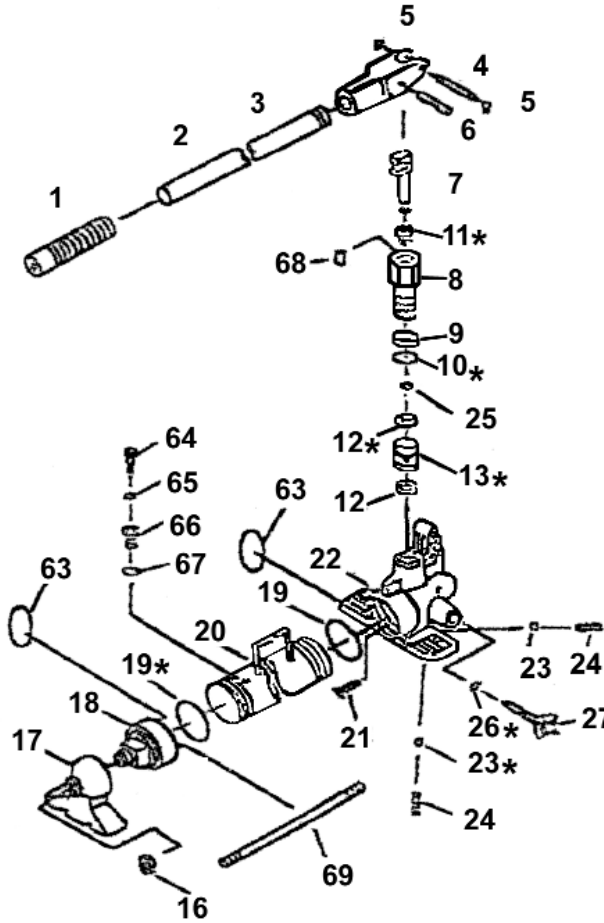


Ram Assembly - Part No: RE97.4-02

Item	Description
31	Connection nut
32	Cylinder base
33	Spring pin
34	Retaining pin
35	O-Ring
36	Cylinder
37	Screw
38	Protector ring
38	Spring pin
39	V-Ring
40	Sealing ring
41	O-Ring
42	Bushing
43	O-Ring
44	O-Ring
45	Retaining ring
46	Piston rod
47	Ring
49	Retaining ring
50	Cover
71	Washer

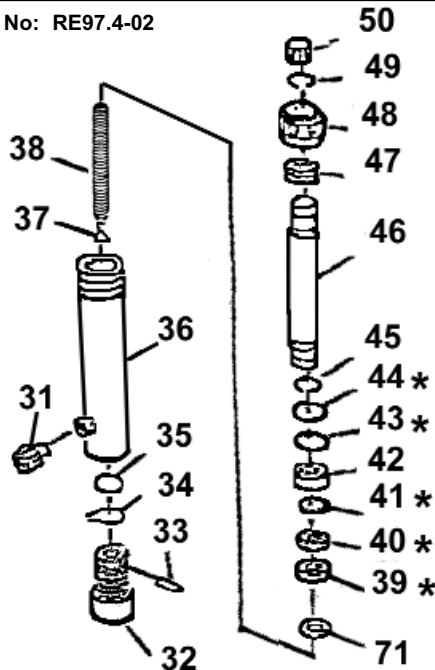


Hydraulic Spreader - Part No: RE97.4-A13

Item	Description
53	Seal
57	Seal
70	Seal

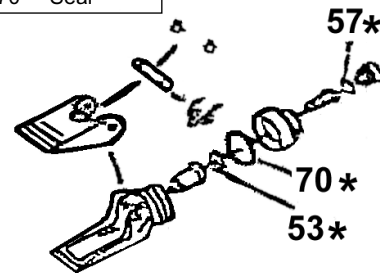

Hose Assembly - Part No: RE97.4-03

Item	Description
28	Hose
29	Coupling
30	Dust cap

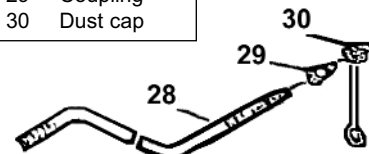

Issue: 1
Date: 060802

NOTE: Items marked with a "*" are available as a Repair Kit - Part No RE97.4-RK, which contains items, 10, 11, 12, 13, 19, 23, 26, 39, 40, 41, 43, 44, 53, 57, 63, 65, 67, & 70.