



2.25 TONNE LOW PROFILE TROLLEY JACK WITH ROCKET LIFT

MODEL NO: **2001LE.V3 SERIES**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.




Refer to instructions



Wear safety footwear

1. SAFETY

- ✓ The user shall work only in accordance with this instruction manual.
- ✓ The operator shall be provided with all necessary information about training and about pumping and translating forces.
- ✓ Ensure the jack is in sound condition and good working order.
- ✓ Take action for immediate repair or replacement of damaged parts. Use genuine parts only. **DO NOT** modify the jack. The use of non-genuine parts may be dangerous and will invalidate the warranty.
- ✓ Locate the jack in a suitable, well lit working area.
- ✓ Keep working area clean and tidy and free from unrelated materials. Use jack on level and solid ground, preferably concrete. Avoid tarmac as jack may sink in.
- ✓ Chock wheels of vehicle.
- ✓ Ensure the vehicle handbrake is engaged, engine is switched off and transmission is in gear (or "PARK" if automatic).
- ✓ Ensure minimum distance of 0.5m between vehicle and static objects such as doors, walls, etc. to allow for vehicle tilting.
- ✓ Ensure all non-essential persons keep a safe distance whilst the jack is in use.
- ✓ Ensure there are no passengers in the vehicle.
- ✓ It is necessary that the operator can watch the lifting device and the load during all movements.
- ✓ Place jack under only those lifting points recommended by vehicle manufacturer (see vehicle handbook).
- ✓ Check that the lifting point is stable and centred on the jack saddle.
- ✓ Ensure the jack wheels are free to move and that there are no obstructions.
- ✓ **▲ DANGER:** Use the jack for lifting only, **NOT** for supporting the lifted load.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before lowering.
- ✓ It is not allowed to work under the raised load until it is secured by suitable means. Use suitable axle stands under the vehicle before proceeding with any task.
- ✓ Use a qualified person to lubricate and maintain the jack.
- ✓ Ensure that only hydraulic jack oil is used in the jack.
- ✗ **DO NOT** operate the jack if damaged.
- ✗ **DO NOT** allow untrained persons to operate the jack.
- ✗ **DO NOT** operate the jack when tired or under the influence of drugs, alcohol or intoxicating medication.
- ✗ **DO NOT** exceed the rated capacity of the jack.
- ✗ **DO NOT** allow the vehicle to move during lifting or lowering, or use the jack to move the vehicle.
- ✗ **DO NOT** jack vehicle if there is a risk of spillage of fuel, battery acid, or other dangerous substances.
- ✗ **DO NOT** work under the vehicle until appropriately rated axle stands have been correctly positioned.
- ✗ **DO NOT** use the jack for purposes other than that for which it is intended.
- ✗ **DO NOT** top up hydraulic system with brake fluid. Use hydraulic jack oil only. (Sealey Part No: HJO500MLS or HJO5LS)
- ✗ **DO NOT** adjust the safety overload valve.
- ✓ When not in use store jack, fully lowered, in a safe, dry, childproof area.
- ✓ If more than 400N of effort is generated in lifting, the efforts shall be lowered by an additional person.

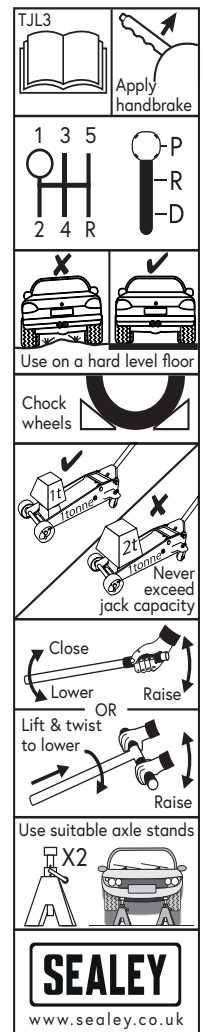

2. INTRODUCTION



Twin piston Rocket Lift feature brings saddle to maximum height in minimal strokes. Universal joint release mechanism allows safer, more controlled lowering of jack. Profiled lifting arm gives low clearance height of just 73mm making it suitable for sports and custom cars. Heavy-duty steel chassis provides stability and endurance. Fitted with an overload valve for added safety. Hydraulic oil bypass system protects ram from being overextended.

3. SPECIFICATION

Model:	2001LEHV.V3, LERE.V3, LEOR.V2, LEBL.V3	Maximum Chassis Height:	158mm
Capacity:	2.25tonne	Maximum Saddle Height:	495mm
Consumable Parts:	Replacement Rubber Jack Pad - JP30	Minimum Saddle Height:	73mm
Length:	734mm	Applicable Standard:	EN1494

4. ASSEMBLY

- 4.1. Insert the upper handle into the lower handle, until the push button locates in the lower handle hole (fig.1).
- 4.2. Undo the handle socket screw fig.1 (B) until it no longer protrudes into the handle socket.
- 4.3. Insert the pump handle into the handle socket, engaging the square drive of the release valve.
- 4.4. Ensure that the handle is correctly inserted into the socket, then tighten the handle socket screw (B).

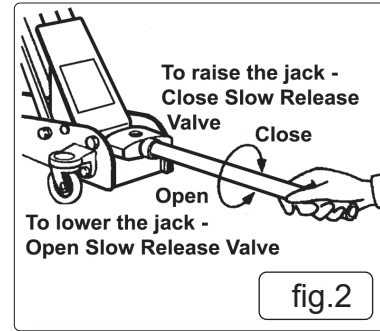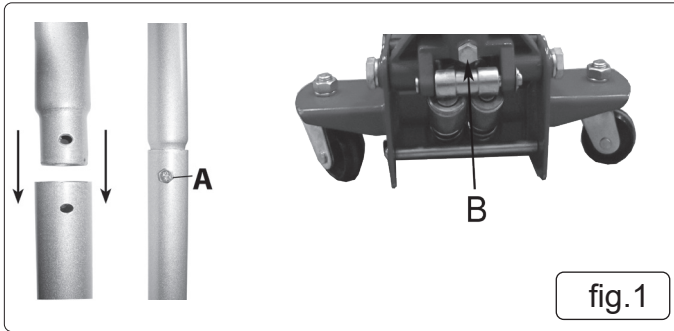

5. HYDRAULIC SYSTEM PURGE

- 5.1. Open the release valve by turning it two full turns counter-clockwise.
- 5.2. Pump the handle a minimum of ten full strokes.
- 5.3. Close the release valve by turning it clockwise.

6. OPERATION

- ❑ **WARNING!** Before use ensure you have read, understood and apply Section 1 Safety Instructions. **IMPORTANT:** Before use, the operator is to visually inspect the jack for cracked welds, damaged or missing parts and hydraulic leaks.

6.1. RAISING A VEHICLE

- 6.1.1. Ensure that the jack and the vehicle are on a hard, level surface.
- 6.1.2. Always ensure that the vehicle handbrake is engaged and that the vehicle wheels are chocked.
- 6.1.3. Consult the vehicle manual to determine the location of jacking points. Position the jack under a suitable lifting point.
- 6.1.4. Turn the release valve clockwise, to the closed position (fig.3). **DO NOT** over-tighten.
- 6.1.5. Raise the vehicle to the desired height by pumping the handle up and down.
- 6.1.6. Place axle stands beneath the locations recommended by the vehicle manufacturer.
- 6.1.7. Turn the release valve slowly counter-clockwise to lower the vehicle on to the axle stands.

6.2. LOWERING A VEHICLE

- 6.2.1. Turn the release valve clockwise to the closed position.
- 6.2.2. Pump the handle to raise the vehicle off the axle stands.
- 6.3. Remove the axle stands from beneath the vehicle.
- 6.3.1. Turn the release valve slowly counter-clockwise to lower the vehicle to the ground.

NOTE: When not in use, **ALWAYS** leave the saddle and ram fully retracted. Also be aware jack is now fitted with a slow release mechanism for controlled lowering.

7. MAINTENANCE

IMPORTANT: Only fully qualified personnel should attempt maintenance or repair.

- ✓ Jacks shall be maintained and repaired in accordance with the manufacturer's instructions. Such maintenance and repair shall be carried out by qualified persons.
- ✓ No modifications shall be carried out which adversely affect the compliance of the jack with the standard.
- ✓ Check the state of the markings and that the marking remain as the initial one.

7.1. MONTHLY MAINTENANCE

- 7.1.1. Lubrication is critical to jacks, since they support heavy loads. Any restriction due to dirt or rust can cause either slow jack movement, or extremely rapid jerks, causing damage to the internal components. To keep the jack well lubricated, carry out the following steps.
- 7.1.2. Lubricate the ram, the linkages and the saddle and pump mechanism with light oil.
- 7.1.3. Grease the wheel bearings and axles.
- 7.1.4. Keep all jack surfaces and warning labels clean.
- 7.1.5. Check and maintain the ram oil level (Section 7.3).

7.2. THREE MONTHLY MAINTENANCE

- 7.2.1. At three monthly intervals, check the ram for any signs of rust or corrosion. Clean the ram as required and wipe with an oil cloth.

7.3. CHECKING THE OIL LEVEL

- 7.3.1. Fully retract the ram by turning the release valve counter-clockwise.
- 7.3.2. Undo the four top plate retaining screws and pull off plate.
- 7.3.3. With the jack in the level position, remove the rubber oil filler plug. **DO NOT** touch the other two screws.
- 7.3.4. The oil should be level with the bottom of the oil filler hole. If it is not, top up with clean hydraulic jack oil (Sealey Part No: HJO500MLS or HJO5LS).
- 7.3.5. Replace the oil filler plug and check the jack operation.
- 7.3.6. Purge any air from the hydraulic unit as required. Refer to Section 5.
- 7.3.7. Replace the top plate and secure with the four screws.
- 7.3.8. **NOTE:** Always store the jack in the fully lowered position. This will protect critical areas from excessive corrosion.

- ❑ **IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE PRODUCT.**

- 7.3.9. Owing to their size and weight, hydraulic products should ideally be repaired by local service agents. We have service / repair agents in most parts of the UK. Before returning your product please call our technical helpline on 01284 757505 for advice and trouble shooting guidance. If the jack is under guarantee please contact your stockist.

7.4. DE-COMMISSIONING THE JACK

7.4.1. Should the jack become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

8. TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
Jack will not lift to full height	Oil Level Low	Check/Top up oil level
Jack will not hold the load	Release valve not closing	Contact authorised service agent
	Hydraulic jack oil is contaminated	
	Pump valves not sealing	
Lift arm will not lower	Cylinder ram binding	Contact authorised service agent
	Parts worn	
	Internal component damage	
	Broken or unhooked return spring	
	Lift arm linkage either bent or binding	
Jack feels spongy when lifting	System requires purging	Refer to air purge procedure in section 5



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

sales@sealey.co.uk

www.sealey.co.uk