

Your new Jack is produced and manufactured to a high standard of dependability and will, if used according to these instructions and properly maintained, give you years of trouble free performance.

**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.**

## 1. SAFETY PRECAUTIONS

- ✓ Ensure the jack is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts. *Use genuine parts only. The use of improper parts may be dangerous and will invalidate the warranty.*
- ✓ Locate the jack in a suitable, well lit working area.
- ✓ Keep working area clean and tidy and free from unrelated materials.
- ✓ Use jack on level and solid ground, preferably concrete. *Avoid tarmac/adam as jack may sink in.*
- ✓ Chock wheels of vehicle.
- ✓ Ensure the vehicle handbrake is engaged, engine is switched off and transmission is in gear (or "PARK" if automatic).
- ✓ Ensure minimum distance of 0.5m between vehicle and static objects such as doors, walls, etc., to allow for vehicle tilting.
- ✓ Ensure all non-essential persons keep a safe distance whilst the jack is in use.
- ✓ Ensure there are no passengers in the vehicle.
- ✓ Place jack under only those lifting points recommended by vehicle manufacturer (*see vehicle handbook*).
- ✓ Check that the lifting point is stable and centred on the jack saddle.
- ✓ Ensure the jack wheels are free to move and that there are no obstructions.
- ☐ **DANGER:** Use the jack for lifting only, **NOT** for supporting the lifted load.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before lowering.
- ✓ Use suitable axle stands under the vehicle before proceeding with any task.
- ✓ Use a qualified person to lubricate and maintain the jack.
- ✓ Ensure that only **hydraulic jack oil** is used in the jack.
- x **DO NOT** operate the jack if damaged.
- x **DO NOT** allow untrained persons to operate the jack.
- x **DO NOT** exceed the rated capacity of the jack.
- x **DO NOT** allow the vehicle to move during lifting or lowering, or use the jack to move the vehicle.
- x **DO NOT** jack vehicle if there is a risk of spillage of fuel, battery acid, or other dangerous substances.
- x **DO NOT** work under the vehicle until appropriately rated axle stands have been correctly positioned.
- x **DO NOT** use the jack for purposes other than that for which it is intended.
- x **DO NOT** top up hydraulic system with brake fluid. Use hydraulic jack oil only. (Sealey Part No: HJO500MLS or HJO5LS)
- x **DO NOT** adjust the safety overload valve.
- ✓ When not in use store jack, fully lowered, in a safe, dry, childproof location.



## 2. INTRODUCTION / SPECIFICATION

Twin piston 'Rocket Lift' feature brings lifting arm straight into contact with the jacking point in 1-2 strokes. Universal joint release mechanism allows safer, more controlled lowering of the jack. Profiled lifting arm gives low clearance height of just 95mm x 390mm deep making this unit suitable for sports and custom cars. Heavy-duty chassis with strengthening flanges along the top edge for extra torsional rigidity under load. Fitted with heavy-duty one-piece hydraulic unit with pump-through action preventing handle locking at maximum ram extension. Large sized saddle aids positioning under vehicle and safety valve prevents overloading. Supplied with foam jacking sleeve to prevent damage to vehicles bodywork and integral saddle pad.

Model No: .....	<b>3075LE</b>
Capacity .....	3tonne
Minimum saddle height.....	95mm
Maximum saddle height.....	540mm
Maximum chassis height .....	135mm
Length.....	685mm
Weight.....	44.5kg

## 3. ASSEMBLY

- 3.1 ASSEMBLY**
- 3.1.1 The jack comprises the following parts:  
 Steel chassis.  
 Two-part pumping handle with M6x35 bolt.
- 3.1.2 Insert the upper handle into the lower handle. Secure the two pieces together with the bolt (A). (Fig.1).
- 3.1.3 Undo the handle socket screw (B) until it no longer protrudes into the handle socket (Fig.2).
- 3.1.4 Insert the pump handle into the handle socket hole, engaging the hexagonal drive of the release valve.
- 3.1.5 Ensure that the handle is correctly inserted into the socket, then tighten the handle socket screw (B).

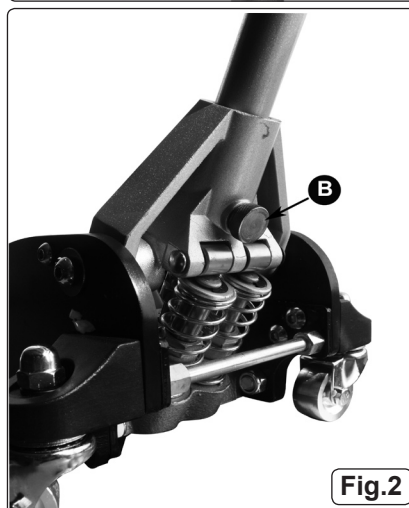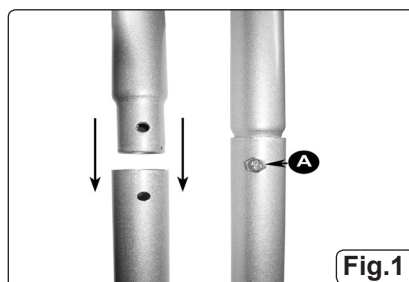

## 4. HYDRAULIC SYSTEM PURGING

- 4.1 Open the release valve by turning it two full turns counter-clockwise.
- 4.2 Pump the handle a minimum ten full strokes.
- 4.3 Close the release valve by turning it clockwise.

## 6. MAINTENANCE

**IMPORTANT:** Only fully qualified personnel should attempt maintenance or repair.

### 6.1 Monthly Maintenance

Lubrication is critical to jacks, since they support heavy loads. Any restriction due to dirt or rust can cause either slow jack movement, or extremely rapid jerks, causing damage to the internal components. To keep the jack well lubricated, carry out the following steps.

- 6.1.1 Lubricate the ram, the linkages and the saddle and pump mechanism with light oil.
- 6.1.2 Grease the wheel bearing and axles.
- 6.1.3 Keep all jack surfaces and warning labels clean.
- 6.1.4 Check and maintain the ram oil level (Section 6.3).

### 6.2 Three Monthly Maintenance

- 6.2.1 At three monthly intervals, check the ram for any signs of rust or corrosion. Clean the ram as required and wipe with an oil cloth.

### 6.3 Checking the Oil Level

- 6.3.1 Fully retract the ram by turning the release valve counter-clockwise.
- 6.3.2 Undo the four top plate retaining screws and remove the top plate.
- 6.3.3 With the jack in the level position, remove the oil filler plug.
- 6.3.4 The oil should be level with the bottom of the oil filler hole. If it is not top up with clean hydraulic jack oil. (Sealey Part No: HJO500MLS or HJO5LS)
- 6.3.5 Replace the oil filler plug (C) and check the jack operation.
- 6.3.6 Purge air from the hydraulic unit as required. Refer to Section 4.
- 6.3.7 Replace the top plate and secure with the four screws.

**NOTE:** Always store the jack in the fully lowered position. This will protect critical areas from excessive corrosion.

**IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THIS PRODUCT.**

Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.


**DO NOT RETURN JACKS TO US.**

Please telephone us on 01284 757500 to obtain the address and phone number of your local agent. If jack is under guarantee you can also contact your local dealer.

### De-commissioning the Jack

Should the jack become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to [www.sealey.co.uk](http://www.sealey.co.uk), email [sales@sealey.co.uk](mailto:sales@sealey.co.uk) or phone 01284 757500.

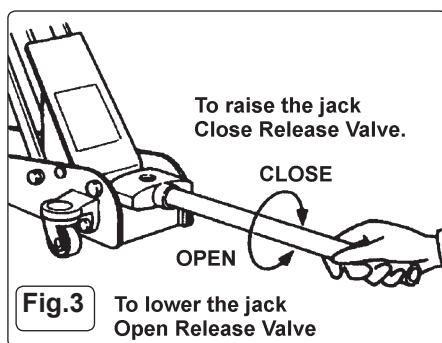

**Fig.3** To lower the jack Open Release Valve

## 5. OPERATING INSTRUCTIONS

- ❑ **WARNING!** Before use ensure you have read, understood and apply Section 1 safety instructions. **IMPORTANT:** Before use, the operator is to visually inspect the jack for cracked welds, damaged or missing parts or hydraulic leaks.

### 5.1 Raising a Vehicle

- 5.1.1 Ensure that the jack and the vehicle are on a hard, level surface.
- 5.1.2 Always ensure that the vehicle handbrake is engaged and that the vehicle wheels are chocked.
- 5.1.3 Consult the vehicle manual to determine the location of jacking points. Position the jack under a suitable lifting point.
- 5.1.4 Turn the release valve clockwise, to the closed position (Fig.3). **DO NOT** over-tighten.
- 5.1.5 Raise the vehicle to the desired height by pumping the handle up and down.
- 5.1.6 Place axle stands beneath the locations recommended by the vehicle manufacturer.
- 5.1.7 Turn the release valve slowly counter-clockwise to lower the vehicle on to the axle stands.

### 5.2 Lowering a Vehicle

- 5.2.1 Turn the release valve clockwise to the closed position.
- 5.2.2 Pump the handle to raise the vehicle off the axle stands.
- 5.2.3 Remove the axle stands from beneath the vehicle.
- 5.2.4 Turn the release valve slowly counter-clockwise to lower the vehicle to the ground.

**NOTE:** When not in use, **ALWAYS** leave the saddle and ram fully retracted.

## 7. TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
Jack will not lift to full height	Oil level low	Check / top up oil level
Jack will not hold the load	Release valve not closing Hydraulic jack oil is contaminated Pump valves not sealing	Contact authorised service agent
Lift arm will not lower	Cylinder ram binding Parts worn Internal component damage Broken or unhooked return spring Lift arm linkage either bent or binding	Contact authorised service agent
Jack feels spongy when lifting	System requires purging	Refer to air purge procedure at Section 4

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,  
Kempson Way, Suffolk Business Park,  
Bury St. Edmunds, Suffolk,  
IP32 7AR



01284 757500



[www.sealey.co.uk](http://www.sealey.co.uk)



01284 703534



[sales@sealey.co.uk](mailto:sales@sealey.co.uk)