


baridi

Built-In 60cm 28 Bottle Wine Cooler

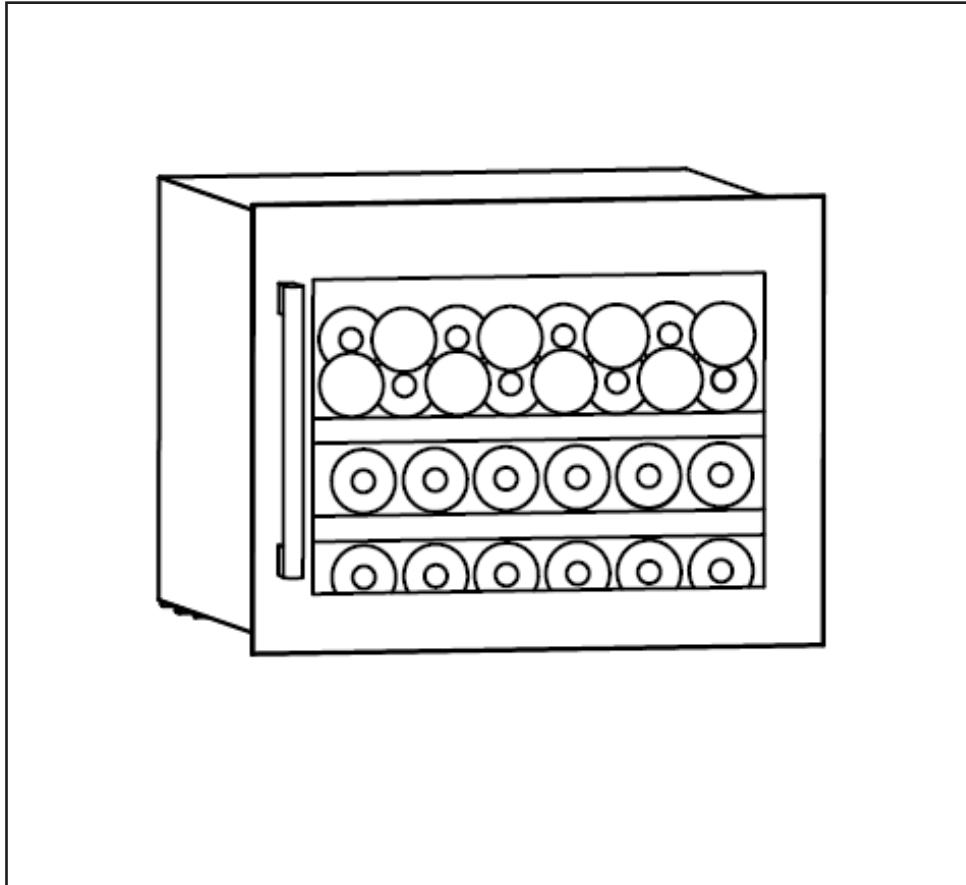

Model No. DH205.V2

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to
instructions



Indoor use
only



Warning:
flammable
material

SPECIFICATION

- Capacity: 28 bottle
- Climate Class: **SN/N/ST**
- Electrical Class: Class I
- Energy Efficiency Class: G
- Energy Rating: G
- Frequency: 50Hz
- Internal Dimensions (W x D x H): 47 x 44.5 x 36.5cm
- **IP** Rating: **IPX0**
- Maximum Bottle Height: 33cm
- Plug Type: 3-Pin **BS**
- Power Cable Length: 1.5m
- Rated Current: 0.8A
- Refrigerant: R600a (18g)
- Temperature Range: 5 - 20°C
- Voltage: 230V
- Volume: 62L

SAFETY

• ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:
- Check all electrical equipment and appliances to ensure that they are safe before using.
- Inspect power supply leads, plugs and all electrical connections for wear and damage.
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- **DO NOT** use worn or damaged cables, plugs or connectors.
- Ensure that any faulty item is repaired or replaced immediately by a Dellonda qualified technician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- Dellonda recommend that an **RCD** (Residual Current Device) is used with all electrical products.
- **Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
- **DO NOT** pull or carry the appliance by the power cable.
- **DO NOT** pull the plug from the socket by the cable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• GENERAL SAFETY

- Children shall **NOT** play with the appliance.
- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- This piece of equipment is solely designed for use by a responsible adult/professional user who has received adequate training on its operation and safety risks.
- This appliance is intended to be used exclusively for the storage of wine.
- This refrigeration appliance is intended to be used at ambient temperature ranging from 10°C to 32°C.



• REFRIGERATION SAFETY

- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- This appliance is intended to be used in household and similar applications such as – staff kitchen areas in shops, offices and other working environments; – farm houses and by clients in hotels, motels and other residential type environments; – bed and breakfast type environments; – catering and similar non-retail applications.
- **WARNING!** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- To avoid contamination of food, please respect the following instructions:
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

INSTALLATION

- The unit is designed to be installed into a cabinet space. See fig.1 for dimensions required. This will maximise the efficiency, performance and the life of the fridge and also ensure that there is sufficient space for the hinge to operate effectively.
- Allow for disconnection of the appliance from the mains supply after installation, unless appliance has an incorporated switch.
- **WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING! DO NOT** locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- The appliance shall not be exposed to rain.
- **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.


- **WARNING! DO NOT** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING! DO NOT** damage the refrigerant circuit.
- Locate the unit away from direct sunlight or sources of heat i.e. radiator, stove etc. Extreme or cold ambient temperatures may also prevent the unit working effectively.
- **DO NOT** locate the unit in a damp or moist location.
- Ensure that the floor surface is strong and stable enough to support the unit when it is fully loaded.
- Level the unit when in location by using the adjustable levelling feet in each corner.
- Once in position allow the unit to rest for an hour before turning it on.
- Allow the unit 2-3 hours to reach set temperature after switching on before placing any items in the compartment.
- **WARNING! DO NOT** use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

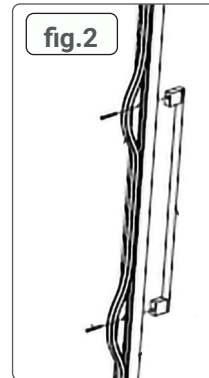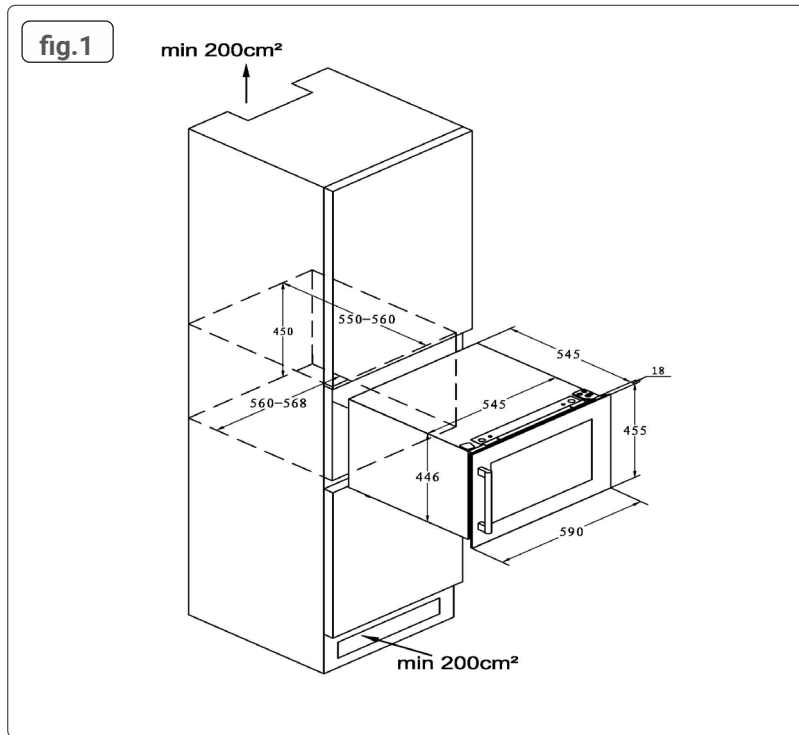

- **INSTALLING DOOR HANDLE** (fig.2)
- **NOTE:** The handle is delivered in a separate package with screws included in the carton.
- Reveal two small holes on the door frame from inner side by pulling out a bit the door seal (fig.2).
- Align the handle to the holes in the door frame and insert and fix the screws from the inside of the unit. Replace the door seal.
- **INSTALLATION USING SPACER BRACKETS** (If required) (fig.3)
- The appliance is equipped with a pair of spacing brackets at the top and bottom at the front of the unit.
- This pair of brackets might not be needed and can be removed as per your actual installation when you build the appliance into your kitchen unit.
- If the opening size of your kitchen unit is larger than the appliance, you could fix 4 screws (4.0x13mm) (packed separately in a plastic bag) into the kitchen unit.
- In this way, the appliance will be built-in and fixed tight within the kitchen unit.
- **NOTE:** Dellonda does not bear responsibility for any damages to the door, kitchen unit or other parts during operation if the end-user does not follow this instruction to fix the appliance within the kitchen unit if required.


OPERATION

- **1. CLEAN THE COMPARTMENT**
- Before powering on, clean inside of the appliance and check the drainage pipe has a good connection. For details, please refer to the Maintenance section.
- **2. PLACEMENT**
- Before powering on for the first time, keep fridge static at least 30 minutes.
- **3. POWER ON**
- The appliance start operation and it will cool down inside after 1 hour, otherwise check the power connection.

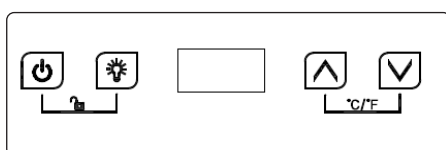

- **ON / OFF**

- Press for 3 seconds for normal working.
- Press for further 3 seconds to power down and enter standby mode.

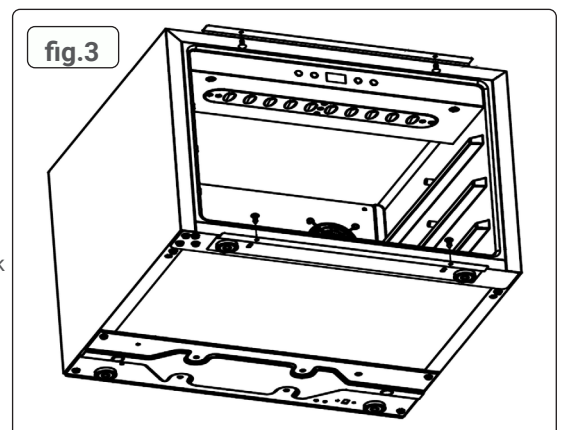

• LIGHT

- To turn on / turn off internal **LEDs**, press this control. **NOTE:** in Standby mode this key is invalid.

• UP ADJUSTMENT

- Press once to show current setting. Press again to increase the temperature setting (+1°C per step). Release to set value.

• DOWN ADJUSTMENT

- Press once to show current setting. Press again to decrease the temperature setting (-1°C per step). Release to set value.

• CHILD LOCK

- To lock controls, press and hold both buttons simultaneously for 3 seconds. To unlock controls, press and hold both buttons simultaneously for 3 seconds.

• °F / °C UNITS

- To switch display from Centigrade to Fahrenheit press and hold both buttons simultaneously for 3 seconds.

• STORAGE GUIDELINES

- Each shelf is designed to carry 1 or 2 layers of bottles. More than 2 layers of bottles on one shelf is not recommended.
- Each shelf pulls out partly to store wine bottles easily.
- Open the door straight enough before pulling out shelves.
- The shelf in front of the fan should be avoided if possible, to avoid blocking the air inlet and affecting the cooling efficiency.
- If the wine cooler is empty for a period, it is recommended to turn it off, clean and dry it carefully and open the door for ventilation.
- Below table is the recommended temperature for wine storage.

• Red Wine	15 -18°C
• White Wine	9 -14°C
• Rose Wine	10 -11°C
• Champagne & Sparkling Wine	5 - 8°C

TIPS

- It is intended to be used exclusively for the storage of wine.
- This refrigerating appliance is not suitable for the freezing of foodstuffs.
- The wine cooler is designed to run between 5 and 20°C.
- The shelves placed in factory mode is the most efficient use of energy for the refrigerating appliances.
- When the surrounding temperature is 25°C and the wine cooler has no bottles loaded, it will take around 30 minutes to increase the wine cooler's temperature from 5°C to 12°C. Under the same circumstances, it will take around one hour to decrease the wine cooler's temperature from 12°C to 5°C. The less the temperature span is, the less time it will take.
- The wine cooler factory temperature setting is 12°C.

MAINTENANCE

- Remove the power plug from the supply when performing cleaning or maintenance.
- **DO NOT** use abrasive or chemical cleaning materials on any surface of the unit.
- Wipe interior and exterior surfaces with a damp cloth and dry thoroughly with a clean dry cloth.
- For more soiled surfaces use a neutral detergent, wipe down with a clean damp cloth and dry thoroughly with a clean dry cloth.
- **DO NOT** use organic solvents, alkaline detergent, boiling water, washing powder or acid liquid etc.
- **DO NOT** flush the compartment of the appliance.

TROUBLESHOOTING

• The appliance makes lots of noise?	• Adjust the front foot to keep the appliance level. • Keep the appliance spaced away from walls if free standing.
• Liquid flowing sound inside the cabinet?	• It is normal because of the refrigerant working inside.
• The appliance does not start?	• Make sure the appliance is connected to the power properly. • Make sure to switch on the power. • The compressor re-starts after 5 minutes for a power cut.

• Compressor runs continuously?	• If cooling is evident, call Dellonda.
• Door does not seal tightly?	• After long time use, the door seal might get stiff & partially distorted. • Heat the door seal with hot-air gun or hot towel. Once seal is softened close the door.
• The appliance does not cool sufficiently?	• Adjust temperature setting. • Keep the appliance away from sunlight or heat. • Do not open the door frequently.
• Unpleasant smells inside cabinet?	• A light plastic smell for a new unit is normal and will disappear after a short time. • Clean the compartment and ventilate it for a few hours.
• Condensate on the glass door?	• Please do not open the door frequently or for a long time. • Please do not set the temperature too low. • High ambient temperature and humidity would cause condensation.
• The light is not working?	• Check the power supply. • Call the Dellonda if the light is broken.

- An audible alarm will sound when a system malfunction occurs. Press any key on the control panel to cancel the alarm sound.

• **ERROR CODES:**

- When the temperature sensor of upper zone failure occurs, error code displays: E1 for open circuit; E2 for short circuit.
- When the defrost sensor failure occurs, error code displays: E3 for open circuit; E4 for short circuit.
- When the temperature sensor of lower zone failure occurs, error code displays: E5 for open circuit; E6 for short circuit.

END OF LIFE

- At the end of its working life this appliance needs to be recycled according to regulations in force.

Environment Protection and Waste Protection and Electrical Equipment Regulations (WEEE)

Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of it in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. Under the Waste Batteries and Accumulators Regulations 2009, Dellonda would like to inform the user that this product contains one or more batteries. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Product Information Sheet. Refrigerating Appliances

SUPPLIER_NAME_OR_TRADEMARK Dellonda EU Ltd. DELEGATED_ACT EU/2019/2016
 MODEL_IDENTIFIER DH205
 Baridi 28 Bottle Built-In Wine Cooler with Beech Wood Shelves & Internal LED Light
 ADDRESS Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
 PHONE_NUMBER 01284 757 500
 EMAIL_ADDRESS TechnicalCompliance@dellonda.co.uk
 Parameter Verification tolerances

Low-noise appliance	No	Design type	Built-in
Wine storage appliance	No	Other refrigerating appliance	No

General product parameters

Height mm	455	Total volume. Litres.	62
Width mm	590	Compartment volume. Litres.	NA
Depth mm	565	0-star to 4-star / Variable Volume. Litres.	62
EEL	167	Energy efficiency class	G
Airborne acoustical noise emissions (dB(a) re 1 pW)	39	Airborne acoustical noise emission class	C
Annual energy consumption kWh/a	135	Climate class	SN/N/ST

SN = extended temperate(10-32°C)

N = temperate 16-32°C

ST = subtropical 16-38°C

T = tropical 16-43°C]

Minimum ambient temperature (°C) for which the refrigerating appliance is suitable.	10	Maximum ambient temperature (°C) for which the refrigerating appliance is suitable.	38
Winter setting	No		

Compartment type

Volume.
Litres.

Recommended temperature setting for optimised food storage

Freezing capacity
(kg/24 h)

Defrosting type
(auto = A Manual = D)

Pantry	No			—	
Wine storage appliance	Yes	NA	NA	—	NA
Beverage / Beer cooler	No			—	
Cellar	No			—	
Fresh food	No			—	
Chill	No			—	
0-star or ice-making	No			—	
1-star	No			—	
2-star	No			—	
3-star	No			—	
4-star	No			—	
2-star section	No			—	
Variable temperature compartment	No			—	

4-star compartments

Light source parameters

Fast freeze facility	No	Type of light source	LED
		Energy efficiency class	exempt
		Minimum duration of guarantee (years)	1

Suppliers website <https://www.dellonda.co.uk/>