



# 10MM REVERSIBLE AIR DRILL WITH KEYLESS CHUCK

MODEL No: **GSA241**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear eye protection



Wear protective gloves



Wear ear protection



Wear a mask

## 1. SAFETY

- ✓ Follow workshop Health & Safety rules, regulations and conditions when using drill.
- ❑ **WARNING!** Disconnect from air supply before changing accessories or servicing.
- ✓ Maintain the drill in good condition and replace any damaged or worn parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ❑ **WARNING!** Check correct air pressure is maintained and not exceeded. We recommended 90psi.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use and ensure that all connections are secure.
- ✓ Wear approved safety gloves, eye and ear protection. If dust is generated wear respiratory protection.
- ✓ Keep drill bits clean and sharp for best and safest performance.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Secure unstable workpiece with a clamp, vice or other suitable holding device.
- ✓ Ensure the chuck is securely fastened to the spindle and the drill bit is secure in the chuck.
- ✓ Avoid unintentional starting.
- ✓ Keep children and unauthorised persons away from the work area.
- ✗ **DO NOT** hold the workpiece by hand. Use clamps or a vice to secure the workpiece.
- ✗ **DO NOT** use the drill for a task it is not designed to perform.
- ❑ **WARNING! DO NOT** use drill if damaged or thought to be faulty. Contact your local service agent.
- ✗ **DO NOT** use drill unless you have been instructed in its use by a qualified person.
- ✗ **DO NOT** drop, throw or abuse the drill.
- ✗ **DO NOT** carry the drill by the air hose, or pull the hose from the air supply.
- ✗ **DO NOT** operate drill if you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** carry drill with your hand on the trigger in order to avoid unintentional starting.
- ✗ **DO NOT** direct air from the air hose at yourself or others.
- ✓ When not in use disconnect from air supply and store in a safe, dry, childproof location.

## 2. INTRODUCTION

Fully polished finish with exhaust through handle base for reduced noise emission. Unit features enclosed twin gear drive assembly. Rotor runs on high quality ball bearings for long life and reliability. Fully reversible drive with fingertip control set above trigger. Fitted with Ø10mm Jacobs keyless chuck for fast bit changes. Contoured soft grip handle gives added comfort and control.

## 3. SPECIFICATION

Model No:.....	<b>GSA241</b>
Free speed:.....	2200rpm
Air consumption:.....	4.5cfm
Operating pressure:.....	90psi
Air inlet size:.....	¼" BSP
Weight:.....	1.2kg
Noise power:.....	106dB(A)
Noise pressure:.....	95dB(A)
Vibration:.....	1.73m/s <sup>2</sup>
Uncertainty:.....	0.67m/s <sup>2</sup>

## 4. PREPARATION



- 4.1. **AIR SUPPLY** (Recommended hook-up is shown in fig. 1.)
  - 4.1.1. Ensure drill air valve (or trigger) is in the "off" position before connecting to the air supply.
  - 4.1.2. You will require an air pressure of 90psi and an air flow of 4.5cfm.
  - 4.1.3. ❑ **WARNING!** Ensure the air supply is clean and does not exceed 90psi. Too high an air pressure or unclean air will shorten the life of the drill due to excessive wear, and may be dangerous, causing damage and/or personal injury.
  - 4.1.4. Drain the air tank daily. Water in the air line will damage the drill.
  - 4.1.5. Clean compressor air inlet filter weekly.

4.1.6. Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose size should be 1/4" I.D. and fittings must have the same internal bore.

4.1.7. Keep hose away from heat, oil and sharp edges. Check hose for wear and make certain that all connections are secure.

#### 4.2. COUPLINGS

Vibration may cause failure if a quick change coupling is connected directly to the drill. To overcome this, connect a leader hose to the drill. A quick change coupling may then be used to connect the leader hose to the air line recoil hose. (See figs. 1 & 2)

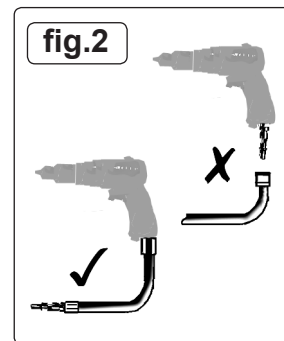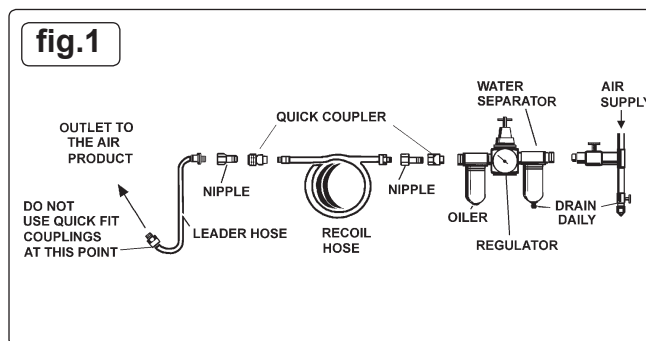

## 5. OPERATION

☐ **WARNING! Ensure you read, understand and apply safety instructions before use.**

5.1. Open the chuck.

5.2. Insert drill bit and rotate front part of chuck until it starts to grip the drill bit. Grip rear part of the chuck and turn front part of the chuck clockwise until the bit is firmly locked in place. Rotate whole chuck to check that bit is running true.

5.3. Connect the drill to the air hose as in Section 4.

5.4. The drill direction is changed by switching the reverse lever behind the trigger from side to side. Check that the drill is set to operate in the required direction.

5.5. Depress the trigger to operate the drill. **DO NOT** allow drill to free run for an extended period of time as this will cause accelerated wear.

## 6. MAINTENANCE

☐ **WARNING! Disconnect drill from air supply before changing accessories, servicing or performing maintenance. Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.**

6.1. If the air system does not include an oiler, lubricate the drill daily with a few drops of Sealey air tool oil dripped into the air inlet.

6.2. Clean the drill after use.

6.3. Loss of power or erratic action may be due to the following:

a) Excessive drain on the air line. Moisture or restriction in the air pipe. Incorrect size or type of hose connectors. To remedy, check the air supply and follow instructions in Section 4.

b) Grit or gum deposits in the drill. If your model has an air filter (located in the area of the air inlet), remove and clean it. Flush the drill out with gum solvent oil or an equal mixture of SAE No 10 oil and paraffin. Allow to dry before use.

6.4. For a full service contact your local Sealey service agent.

6.5. When not in use, disconnect from air supply, clean and store in a safe, dry, childproof location.

### ENVIRONMENT PROTECTION



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk

## WARNING! – Risk of Hand Arm Vibration Injury.

**This tool may cause Hand Arm Vibration Syndrome if its use is not managed adequately.**

This tool is subject to the vibration testing section of the Machinery Directive 2006/42/EC.

This tool is to be operated in accordance with these instructions.

**Measured vibration emission value (a): . . . . .1.73 m/s<sup>2</sup>**

**Uncertainty value (k): . . . . .0.67 m/s<sup>2</sup>**

*Please note that the application of the tool to a sole specialist task may produce a different average vibration emission. We recommend that a specific evaluation of the vibration emission is conducted prior to commencing with a specialist task.*

A health and safety assessment by the user (or employer) will need to be carried out to determine the suitable duration of use for each tool.

**NB:** Stated Vibration Emission values are type-test values and are intended to be typical.

Whilst in use, the actual value will vary considerably from and depend on many factors.

Such factors include; the operator, the task and the inserted tool or consumable.

**NB:** ensure that the length of leader hoses is sufficient to allow unrestricted use, as this also helps to reduce vibration.

*The state of maintenance of the tool itself is also an important factor, a poorly maintained tool will also increase the risk of Hand Arm Vibration Syndrome.*

### **Health surveillance.**

We recommend a programme of health surveillance to detect early symptoms of vibration injury so that management procedures can be modified accordingly.

### **Personal protective equipment.**

We are not aware of any personal protective equipment (PPE) that provides protection against vibration injury that may result from the uncontrolled use of this tool. We recommend a sufficient supply of clothing (including gloves) to enable the operator to remain warm and dry and maintain good blood circulation in fingers etc. Please note that the most effective protection is prevention, please refer to the Correct Use and Maintenance section in these instructions. Guidance relating to the management of hand arm vibration can be found on the HSE website [www.hse.gov.uk](http://www.hse.gov.uk) - Hand-Arm Vibration at Work.