

SEALY Professional
TOOLS
Auto Service Line

VS8801

EOBD CODE READER (WITH LIVE DATA)



INTRODUCTION:

Save time and money, plus take the guess-work out of your fault-finding and diagnosis with CAN enabled Sealey EOBD diagnostic tools - essential for the vehicle technician. Allows interrogation of the vehicle's ECU to determine the performance of essential emission-based information, to read and clear Diagnostic Trouble Codes (DTCs) and to obtain vital performance data from the vehicle's engine. The competitively priced Model No.VS8801 is the next generation of code reader, the size of which belies its power. Unlike many other budget tools, which give only a code, this model gives a full definition on the colour backlit LCD screen. Features freeze frame and live data, also includes a patented One-Click I/M Readiness button to eliminate drive cycle guesswork using colour coded LEDs and audible tone. These characteristics are usually only found on scanners costing many times that of Model No.VS8801.

CONTENTS

	Page
1. SAFETY PRECAUTIONS	1
2. GENERAL INFORMATION	2
2.1 On Board Diagnostics (OBD II/EOBD).....	2
2.2 Diagnostic Trouble Codes (DTCs).....	2
2.3 Location of the Data Link Connector (DLC).....	3
2.4 EOBD Readiness Monitors.....	4
2.5 EOBD Monitor Readiness Status.....	5
2.6 EOBD Definitions.....	6
2.7 EOBD Modes of Operation.....	7
3. USING THE CODE READER	10
3.1 Tool Description.....	10
3.2 Specifications.....	11
3.3 Accessories Included.....	11
3.4 Navigation characters.....	12
3.5 Keyboard.....	12
3.6 Power.....	12
3.7 System Setup.....	12
3.8 About.....	21
3.9 Vehicle Coverage.....	21
3.10 Product Troubleshooting.....	22
4. EOBD DIAGNOSTICS	24
4.1 Reading Codes.....	25
4.2 Erasing codes.....	28
4.3 Live Data.....	30
4.4 Viewing Freeze Frame Data.....	31
4.5 Retrieving I/M Readiness Status.....	32
4.6 Viewing Vehicle Information.....	39
4.7 Exiting the EOBD Test.....	40
5. READY TEST	41
5.1 General Information.....	41
5.2 Test Tool Application.....	41
5.3 LED and Tone Interpretation.....	44
6. WARRANTY AND SERVICE	46
6.1 Limited One Year Warranty.....	46
6.2 Service procedures.....	46

We the sole importers into the UK, hereby declare that the equipment described below

Description and Function: **EOBD Code Reader with Live Data**

Model/Type: **VS8801**

Manufacturing Date / Serial number (optional):

Manufacturer's authorised representative within the EC: **Jack Sealey Ltd. Kempson Way, Suffolk Business Park, Bury St. Edmunds, Suffolk, IP32 7AR**

Conforms to the requirements of the following Directives, as indicated.

- | | |
|--|---|
| <input type="checkbox"/> 2006/42/EC Machinery Directive | <input type="checkbox"/> 2000/14/EC Outdoor Noise Emissions Directive |
| <input type="checkbox"/> 2006/95/EC Low Voltage Directive | <input checked="" type="checkbox"/> 2002/96/EC WEEE Directive |
| <input checked="" type="checkbox"/> 2004/108/EC EMC Directive | <input checked="" type="checkbox"/> 2002/95/EC RoHS Directive |
| <input type="checkbox"/> 93/68/EEC CE Marking Directive | <input type="checkbox"/> 97/23/EC Pressure Equipment Directive |
| <input type="checkbox"/> 2009/105/EC the Simple Pressure Vessels Directive | |

And the following harmonised standard(s)

.....
.....
.....
.....

Additional technical standards and specifications (if applicable):

.....

Technical file compiled by: **Jack Sealey Ltd.**

Signed: 

Date: **24-Apr-2012**

Place: **Bury St. Edmunds.**

Name: **Tim Thompson**

Position: **Commercial Director**

Being the responsible person appointed by the manufacturer.



Sealey Power Products, Kempson Way,
Suffolk Business Park, Bury St. Edmunds,
Suffolk, IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY PRECAUTIONS.

- ✓ Wear safety eye protection that meets ANSI standards.
- ✓ Operate the vehicle to be tested in a well ventilated area. Exhaust gases are poisonous. If necessary connect the vehicle exhaust to a fume extraction system.
- ✓ Place chocks in front of the drive wheels and never leave the vehicle unattended whilst testing is in progress.
- ✓ Be extra cautious when working in close proximity to the ignition coil, distributor cap, ignition wires and spark plugs. These components create hazardous voltages when the engine is running.
- ✓ Ensure that the handbrake is on and the gearbox is in neutral or 'Park' for automatic transmissions.
- ✓ Keep fire extinguishers nearby suitable for gasoline/ chemical/ electrical fires.
- ✓ Keep the code reader clean and in good condition.
- ✓ Remain vigilant when using the code reader on, or near, machinery where there are rotational parts such as belts, pulleys and fans.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings, and other loose jewellery, and contain and/or tie back long hair.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep Product Surfaces Clean and Dry.
- ✗ **DO NOT** attempt to connect or disconnect any test equipment whilst the ignition is on or the engine is running.
- ✗ **DO NOT** use the code reader if damage is suspected. If suspected damage occurs with the device, have it inspected by qualified service personnel before using it again.
- ✗ **DO NOT** get the code reader wet or use in damp or wet locations or areas where there is condensation.
- ✗ **DO NOT** use the code reader for any purpose other than for which it is designed.
- ✗ **DO NOT** allow untrained persons to use code reader.
- ✗ **DO NOT** use the code reader when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** operate in a potentially explosive environment/atmosphere.
- WARNING:** The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempton Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk.
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk

2. General Information

2.1 On-Board Diagnostics (OBD) II / EOBD


The first generation of On-Board Diagnostics (called OBD I) was developed by the California Air Resources Board (ARB) and implemented in 1988 to monitor some of the emission control components on vehicles. As technology evolved and the desire to improve the On-Board Diagnostic system increased, a new generation of On-Board Diagnostic system was developed. This second generation of On-Board Diagnostic regulations is called "OBD II". The European version of OBDII is commonly referred to as EOBD and has protocols developed for the European vehicle market.

The EOBD system is designed to monitor emission control systems and key engine components by performing either continuous or periodic tests of specific components and vehicle conditions. When a problem is detected, the EOBD system turns on a warning lamp (MIL) on the vehicle instrument panel to alert the driver typically by the phrase of "Check Engine" or "Service Engine Soon". The system will also store important information about the detected malfunction so that a technician can accurately find and fix the problem. Here below follow three pieces of such valuable information:

- 1) Whether the Malfunction Indicator Light (MIL) is commanded 'on' or 'off';**
- 2) Which, if any, Diagnostic Trouble Codes (DTCs) are stored;**
- 3) Readiness Monitor status.**

2.2 Diagnostic Trouble Codes (DTCs)


EOBD Diagnostic Trouble Codes are codes that are stored by the on-board computer diagnostic system in response to a problem found in the vehicle. These codes identify a particular problem area and are intended to provide you with a guide as to where a fault might be occurring within a vehicle. EOBD Diagnostic Trouble Codes consists of a five-digit alphanumeric code. The first character, a letter, identifies which control system sets the code. The other four characters, all numbers, provide additional information on where the DTC originated and the operating conditions that caused it to set. Here below is an example to illustrate the structure of the digits:

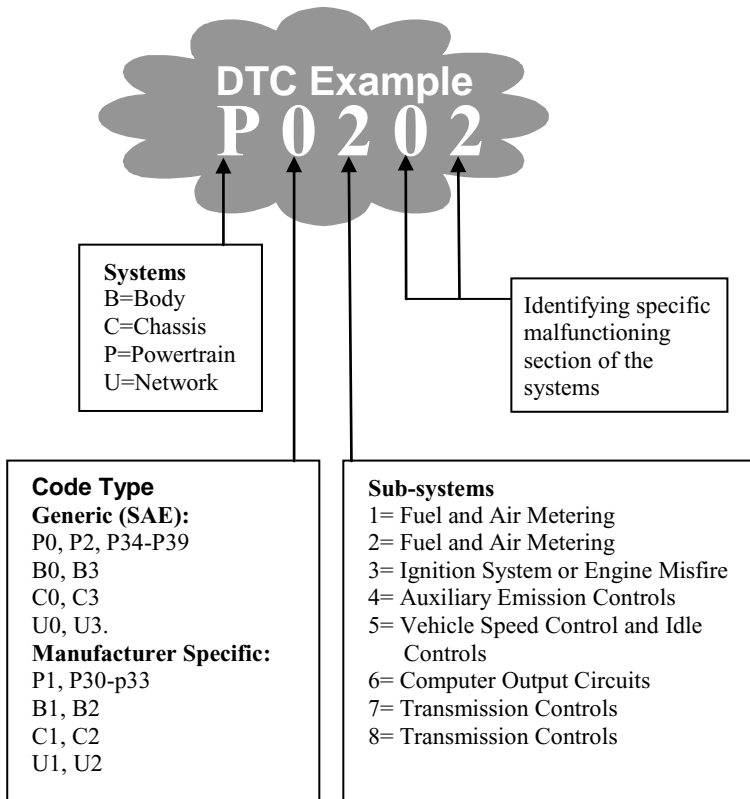

2.3 Location of the Data Link Connector (DLC)

The DLC (Data Link Connector or Diagnostic Link Connector) is the standardized 16-cavity connector where diagnostic code readers interface with the vehicle's on-board computer. The DLC is usually located 12 inches from the center of the instrument panel (dash), under or around the driver's side for most vehicles. If Data Link Connector is not located under dashboard, a label should be there telling location. For some Asian and European vehicles, the DLC is located behind the ashtray and the ashtray must be removed to access

the connector. If the DLC cannot be found, refer to the vehicle's service manual for the location.

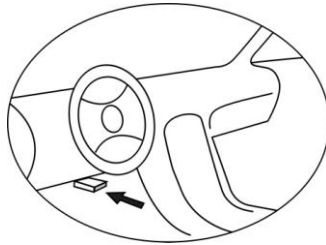

2.4 EOBD Readiness Monitors

An important part of a vehicle's EOBD system is the Readiness Monitors, which are indicators used to find out if all of the emissions components have been evaluated by the EOBD system. They are running periodic tests on specific systems and components to ensure that they are performing within allowable limits.

Currently, there are eleven EOBD Readiness Monitors (or I/M Monitors). Not all monitors are supported by all vehicles and the exact number of monitors in any vehicle depends on the motor vehicle manufacturer's emissions control strategy.

Continuous Monitors -- Some of the vehicle components or systems are continuously tested by the vehicle's EOBD system, while others are tested only under specific vehicle operating conditions. The continuously monitored components listed below are always ready:

1) **Misfire**

2) **Fuel System**

3) **Comprehensive Components (CCM)**

Once the vehicle is running, the EOBD system is continuously checking the above components, monitoring key engine sensors, watching for engine misfire, and monitoring fuel demands.

Non-Continuous Monitors -- Unlike the continuous monitors, many emissions and engine system components require the vehicle to be

operated under specific conditions before the monitor is ready. These monitors are termed non-continuous monitors. For different ignition type engines, the available monitors are different too.

The following monitors are to be used for spark ignition engines only:

- 1) **EGR System**
- 2) **O2 Sensors**
- 3) **Catalyst**
- 4) **Evaporative System**
- 5) **O2 Sensor Heater**
- 6) **Secondary air**
- 7) **Heated Catalyst**

The following monitors are to be used for compression ignition engines only:

- 1) **EGR System**
- 2) **NMHC Catalyst**
- 3) **NOx aftertreatment**
- 4) **Boost pressure system**
- 5) **Exhaust gas sensor**
- 6) **PM filter**

2.5 EOBD Monitor Readiness Status

EOBD systems must indicate whether or not the vehicle's PCM's monitor system has completed testing on each component. Components that have been tested will be reported as "Ready", or "Complete", meaning they have been tested by the EOBD system. The purpose of recording readiness status is to allow inspectors to determine if the vehicle's EOBD system has tested all the components and/or systems.

The power-train control module (PCM) sets a monitor to "Ready" or "Complete" after an appropriate drive cycle has been performed. The drive cycle that enables a monitor and sets readiness codes to "Ready" varies for each individual monitor. Once a monitor is set as "Ready"

or “Complete”, it will remain in this state. A number of factors, including erasing of diagnostic trouble codes (DTCs) with a code reader or a disconnected battery, can result in Readiness Monitors being set to “Not Ready”. Since the three continuous monitors are constantly evaluating, they will be reported as “Ready” all of the time. If testing of a particular supported non-continuous monitor has not been completed, the monitor status will be reported as “Not Complete” or “Not Ready.”

In order for the EOBD monitor system to become ready, the vehicle should be driven under a variety of normal operating conditions. These operating conditions may include a mix of highway driving and stop and go, city type driving, and at least one overnight-off period. For specific information on getting your vehicle’s EOBD monitor system ready, please consult your vehicle owner’s manual.

2.6 EOBD Definitions

Power-train Control Module (PCM) -- EOBD terminology for the on-board computer that controls engine and drive train.

Malfunction Indicator Light (MIL) -- Malfunction Indicator Light (Service Engine Soon, Check Engine) is a term used for the light on the instrument panel. It is to alert the driver and/or the repair technician that there is a problem with one or more of vehicle's systems and may cause emissions to exceed federal standards. If the MIL illuminates with a steady light, it indicates that a problem has been detected and the vehicle should be serviced as soon as possible. Under certain conditions, the dashboard light will blink or flash. This indicates a severe problem and flashing is intended to discourage vehicle operation. The vehicle onboard diagnostic system can not turn the MIL off until necessary repairs are completed or the condition no longer exists.

DTC -- Diagnostic Trouble Codes (DTC) that identify which section of the emission control system has malfunctioned.

Enabling Criteria -- Also termed Enabling Conditions. They are the vehicle-specific events or conditions that must occur within the engine before the various monitors will set, or run. Some monitors

require the vehicle to follow a prescribed “drive cycle” routine as part of the enabling criteria. Drive cycles vary among vehicles and for each monitor in any particular vehicle.

EOBD Drive Cycle -- A specific mode of vehicle operation that provides conditions required to set all the readiness monitors applicable to the vehicle to the “ready” condition. The purpose of completing an EOBD drive cycle is to force the vehicle to run its onboard diagnostics. Some form of a drive cycle needs to be performed after DTCs have been erased from the PCM’s memory or after the battery has been disconnected. Running through a vehicle’s complete drive cycle will “set” the readiness monitors so that future faults can be detected. Drive cycles vary depending on the vehicle and the monitor that needs to be reset. For vehicle specific drive cycle, consult the vehicle’s Owner’s Manual.

Freeze Frame Data -- When an emissions related fault occurs, the EOBD system not only sets a code but also records a snapshot of the vehicle operating parameters to help in identifying the problem. This set of values is referred to as Freeze Frame Data and may include important engine parameters such as engine RPM, vehicle speed, air flow, engine load, fuel pressure, fuel trim value, engine coolant temperature, ignition timing advance, or closed loop status.

2.7 EOBD Modes of Operation

Here is a basic introduction to the EOBD communication protocol.

Mode byte: The first byte in the stream is the mode number. There are 9 modes for diagnostic requests, so this first byte is from 1 to 9. The first byte in the response data bytes is this same number plus 64. For example, a mode 1 request would have the first data byte = 1, and the response would have the first data byte = 65. Here is a brief description of the modes:

Mode \$01 - Identifies the Powertrain information and shows current data available to the code reader. This data includes: DTCs set, status of on-board tests and vehicle data such as engine RPM, temperatures, ignition advance, speed, air flow rates, and closed loop status for fuel system.

Mode \$02 - Displays Freeze Frame data. Same data as in mode 1, but it was captured and stored when a malfunction occurred and a DTC was set. Some of the PIDs for mode one are not implemented in this mode.

Mode \$03 - Displays the type of powertrain or emission related DTCs stored by a 5 digit code identifying the faults. There may be more than one response message if there are more trouble codes than will fit in the data bytes of the response message, or if there are more than one ECU computer responding.

Mode \$04 - Used to clear DTCs and Freeze Frame data. This clears all diagnostic trouble codes that may be set including freeze frame data and readiness monitors.

Mode \$05 - Oxygen Sensor Test Results. This mode displays the oxygen sensor monitor screen and the test results gathered about the oxygen sensor.

There are ten numbers available for diagnostics:

1. \$01 Rich-to-Lean O2 sensor threshold voltage
2. \$02 Lean-to-Rich O2 sensor threshold voltage
3. \$03 Low sensor voltage threshold for switch time measurement
4. \$04 High sensor voltage threshold for switch time measurement
5. \$05 Rich-to-Lean switch time in ms
6. \$06 Lean-to Rich switch time in ms
7. \$07 Minimum voltage for test
8. \$08 Maximum voltage for test
9. \$09 Time between voltage transitions in ms

Mode \$06 - Non-Continuously Monitored Systems test results. There are typically a minimum value, a maximum value, and a current value for each non-continuous monitor. This data is optional, and it is defined by a given vehicle make if it's used.

Mode \$07 - Request for DTCs (pending) from Continuously Monitored Systems after a single driving cycle has been performed to determine if repair has fixed a problem. This is

used by service technicians to verify repair was performed properly and after clearing diagnostic trouble codes.

Mode \$08 - This Special Control Mode requests control of the on-board system, test, or component bi-directionally (where applicable). This mode is manufacturer specific.


Mode \$09 - Reports vehicle information. This information includes vehicle VIN number and calibration information stored in the vehicle ECUs.






Mode \$0A -- Request Emission-Related Diagnostic Trouble Codes with Permanent Status. This mode is required for all emissions-related DTCs. The presence of permanent DTCs at an inspection without the MIL illuminated is an indication that a proper repair was not verified by the on-board monitoring system.

3. Using the Code Reader

3.1 Tool Description



- ① **EOBD CONNECTOR** - Connects the code reader to the vehicle's Data Link Connector (DLC).
- ② **LCD DISPLAY** - Indicates test results.
- ③  **GREEN LED** - Indicates that engine systems are running normally (The number of monitors on the vehicle which are active and performing their diagnostic testing is in the allowed limit, and no DTC's are present).

- ④  **YELLOW LED** – Indicates there is a possible problem. A “Pending” DTC is present and/or some of the vehicle’s emission monitors have not run their diagnostic testing.
- ⑤  **RED LED** – Indicates there is a problem in one or more of the vehicle’s systems. The red LED is also used to show that DTCs are present. DTCs are shown on the Code Reader’s display. In this case, the MIL lamp on the vehicle’s instrument panel will light steady on.
- ⑥  **One-Click I/M Readiness Key** – Quick-checks State Emissions readiness and drive cycle verification.
- ⑦  **ENTER/EXIT BUTTON** – Confirms a selection (or action) from a menu. Or returns to previous menu.
- ⑧  **SCROLL BUTTON** – Scrolls through menu items.
- ⑨ **USB CONNECTOR** – Connects the code reader to the PC for upgrading.

3.2 Specifications

- 1) Display: TFT color display (220 x 176 dpi)
- 2) Operating Temperature: 0 to 60°C (32 to 140 F°)
- 3) Storage Temperature: -20 to 70°C (-4 to 158 F°)
- 4) External Power: 8.0 to 18.0 V power provided via vehicle battery
- 5) Dimensions:

Length	Width	Height
117 mm (4.61”)	72 mm (2.83”)	18 mm (0.71”)
- 6) NW: 0.18kg (0.39lb), GW: 0.21 kg(0.46lb)

3.3 Accessories Included

- 1) **User’s Manual** -- Instructions on code reader operations.

- 2) **EOBD cable** -- Provides power to code reader and communicates between code reader and vehicle.
- 3) **USB cable** -- Allows easy update via a PC and an internet connection.

3.4 Navigation Characters

Characters used to help navigate the code reader are:

- 1) **“#”** -- Identifies the control module number from which data is retrieved.
- 2) **“Pd”** – Identifies a pending DTC when viewing DTCs.

3.5 Keyboard

No solvents such as alcohol are allowed to clean the keypad or display. Use a mild nonabrasive detergent and a soft cotton cloth. Do not soak the keypad as the keypad is not waterproof.

3.6 Power

The code reader is powered via the vehicle Data Link Connector (DLC). Just follow the steps below to turn on the scan tool:

- 1) Locate DLC on vehicle.
 - *A plastic DLC cover may be found for some vehicles and you need to remove it before plugging the EOBD cable.*
- 2) Plug the tool's EOBD cable to the vehicle's DLC.

3.7 System Setup

The code reader allows you to make the following adjustments and settings:

- 1) **Language:** Selects the desired language.
- 2) **Configure Monitors:** Sets the monitors you want to test.
- 3) **Unit of measure:** Sets the unit of measure to English or Metric.
- 4) **Key Beep Set:** Turns on/off key-press beep.
- 5) **Status Beep Set:** Turns on/off the I/M Readiness Status beep.

- 6) **Tool Self-test:** Checks if the LCD display, LED lamps and keyboard are working normally.
- 7) **Update Mode:** Accesses the Update Mode.
- *Settings of the unit will remain until change to the existing settings is made.*

To enter the Setup menu

When the code reader is powered on, it displays a **Main Screen**. (Figure 3.1)

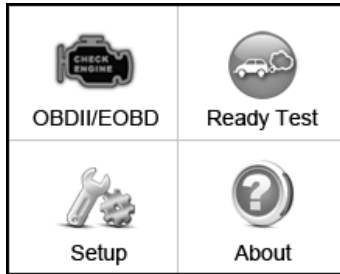


Figure 3.1

From the **Main Screen:** Use the **SCROLL** button to select **Setup**, and press the **ENTER/Exit** button. Follow the instructions to make adjustments and settings as described in the above setup options. (Figure 3.2)

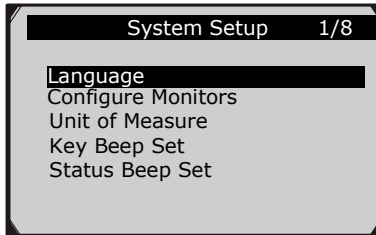


Figure 3.2

Language Setup

- *English is the default language.*
- 1) From **System Setup** screen, use the **SCROLL** button to select **Language**, and press the **ENTER/Exit** button.
 - 2) Use the **SCROLL** button to select the desired language and press the **ENTER/Exit R** button to save your selection and return to previous screen. We provide three language options currently. (Figure 3.3)

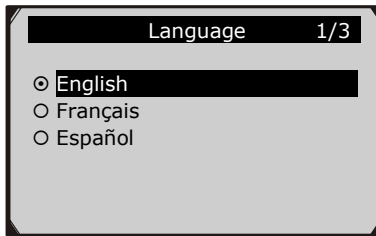


Figure 3.3

Configure Monitors

From **System Setup** screen, use the **SCROLL** button to select **Configure Monitors**, and press the **ENTER/Exit** button.

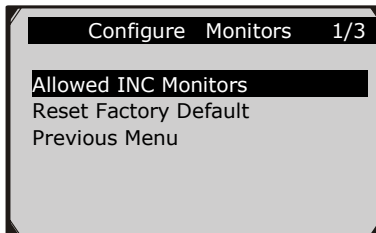


Figure 3.4

In this menu, you could configure the number of monitors to pass diagnosis, and restore the default settings.

1) Allowed INC Monitors

From **Configure Monitors** screen, use the **SCROLL** button to select **Allowed INC Monitors**, and press the **ENTER/Exit** button.

Emissions tests vary depending on the geographic or regional area in which the vehicle is registered. So the code reader provides a more flexible way to meet different standards, which allows the user to select 0, 1, 2, 3 'not complete' monitors in test.

2) Reset Factory Default

From **Configure Monitors** screen, use the **SCROLL** button to select **Reset Factory Default**, and press the **ENTER/Exit** button.

It will restore the default configuration settings in the **Configure Monitors** menu, and delete any customized settings. In this case, the **Allowed INC Monitors** will be set to 1.

The tool will display an information message to ask for your confirmation. Select **Yes** to proceed and **No** to exit without change.

Unit of Measure

- *Metric is the default measurement unit.*

- 1) From **System Setup** screen, use the **SCROLL** button to select **Unit of Measure** and press the **ENTER/Exit** button.
- 2) From **Unit of Measure** screen, use the **SCROLL** button to select the desired unit of measurement. (Figure 3.5)

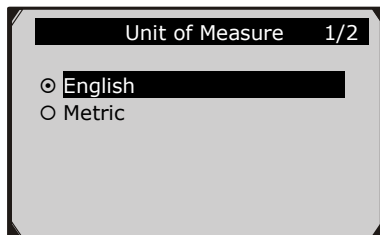


Figure 3.5

- 3) Press the **ENTER/Exit** button to save your selection and return to previous menu.

Key Beep Set

This function allows you to turn on/off the build-in speaker for key pressing.

- *The default setting is Beep On.*

- 1) From **System Setup** screen, use the **SCROLL** button to select **Key Beep Set** and press the **ENTER/Exit** button.
- 2) From **Key Beep Set** menu, use the **SCROLL** button to select **Beep ON** or **Beep OFF** to turn on/off the beep.

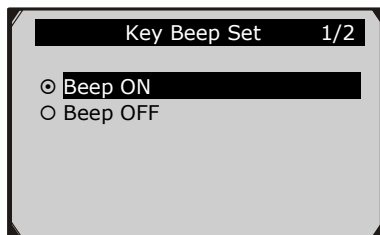


Figure 3.6

- 3) Press the **ENTER/Exit** button to save your selection and return to previous menu.

Status Beep Set

- *The default setting is Beep On.*

This function allows you to turn on/off the build-in speaker for the LEDs in diagnostic testing. Different audio tone corresponds to different LED lamp. This function is invaluable when working in bright areas where LED illumination alone is not sufficient.

- 1) From **System Setup** screen, use the **SCROLL** button to select **Status Beep Set** and press the **ENTER/Exit** button.
- 2) From **Status Beep Set** menu, use the **SCROLL** button to select **Beep ON** or **Beep OFF** to turn on/off the beep.

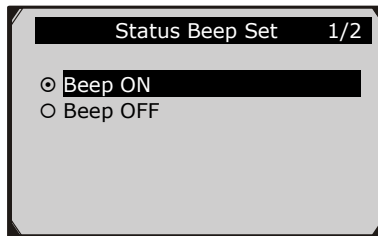


Figure 3.7

- 3) Press the **ENTER/Exit** button to save your selection and return to previous menu.

Tool Self-test

The Tool Self-test function checks if the display, LED lamps and keyboard are working properly.

A. Display test

The **Display Test** function checks if the LCD display is working normally.

- 1) From **System Setup** screen, use the **SCROLL** button to select **Tool Self-test**, and press the **ENTER/Exit** button.

- 2) Select **Display Test** from **Tool Self-test** menu and press the **ENTER/Exit** button to start test.

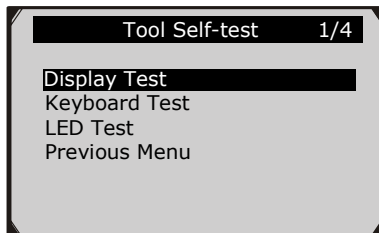


Figure 3.8

- 3) Look for missing spots in the red, green, blue, black and white LCD display.
- 4) When completed, press the **ENTER/Exit** button to exit.

B. Keyboard Test

The **Keyboard Test** function verifies if the keys are functioning properly.

- 1) Use the **SCROLL** button to select **Keyboard Test** from the **Tool Self-test** menu, and then press the **ENTER/Exit** button.
- 2) Press any key to start test. When you press a key, the key name should be observed on the display. If the key name does not show up, then the key is not functioning properly.

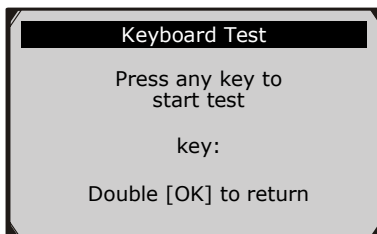


Figure 3.9

- 3) Double press **ENTER/Exit** to return to previous menu.

C. LED Test

The **LED Test** function verifies if the I/M Readiness LED indicator lamps are functioning properly.

- 1) Use the **SCROLL** button to select **LED Test** from the **Tool Self-test** menu, and then press the **ENTER/Exit** button.
- 2) In the **LED Self-test** menu, use the **SCROLL** button to select one or more LED lamps to check. The LED should turn on or off according to the selected commands.



Figure 3.10

- 3) When completed, press the **ENTER/Exit** button to exit.

Update Mode

This function allows you to update the code reader software and DTC library through a computer.

- *To update your code reader, you need the following items.*

The Code Reader VS8801

A PC or laptop with USB ports

A USB cable

- 1) Download the programs to be updated to your computer.
- 2) Run the MaxiLink Tool Kit in your computer. (Figure 3.11)
- 3) Connect the code reader to your computer through the USB cable provided.

- 4) From the **System Setup** screen in the code reader, use the **SCROLL** button to select **Update Mode**, and press the **ENTER/Exit** button.
- 5) Select the programs to be updated in your computer. There are two types of programs: operating system and DTC library. (Figure 3.11)
- 6) Click **Update** in the MaxiLink Tool Kit window to begin updating.



Figure 3.11

- 7) During the update procedure, the code reader displays a message “**Update Program. Please wait...**”.
- 8) When the update has finished, the code reader will display a message “**Program Update has been done!**”
- 9) Restart the code reader to finish the whole update.

NOTE: When you made a wrong choice and the code reader is unable to work properly, you may need to update the programs. By holding the ENTER/Exit button and powering on the code reader, you will enter the Update Mode forcibly. Then follow the update procedure to refresh the program.

To exit the Setup menu

Use the **SCROLL** button to select **Previous Menu** from the **System Setup** screen, and press the **ENTER/Exit** button to return to **Main Screen**.

3.8 About

The **About** function allows viewing of some important information such as serial number and software version number of the code reader.

- 1) From **Main Screen**, use the **SCROLL** button to select **About** and press the **ENTER/Exit** button; wait for the **About** screen to appear. (Figure 3.1)
- 2) View tool information on screen.



Figure 3.12

3.9 Vehicle Coverage

The VS8801 EOBD Code Reader is specially designed to work with all EOBD compliant vehicles, including those equipped with next-generation protocol -- Control Area Network (CAN).

A small number of 1996 and newer petrol vehicles are EOBD compliant. To verify the vehicle is EOBD compliant, check

the Vehicle Emissions Control Information (VECI) Label which is located under the bonnet or by the radiator of most vehicles. If the vehicle is EOBD compliant, the label will designate “EOBD Certified”. Additionally, Government regulations mandate that all EOBD compliant vehicles must have a “common” sixteen-pin Data Link Connector (DLC).

For your vehicle to be EOBD compliant it must have a 16-pin DLC (Data Link Connector) under the dash and the Vehicle Emission Control Information Label must state that the vehicle is EOBD compliant.

3.10 Product Troubleshooting

This part describes problems that you may encounter while using the code reader.

Vehicle Linking Error

A communication error occurs if the code reader fails to communicate with the vehicle’s ECU (Engine Control Unit). You need to do the following to check up:

- ✓ Verify that the ignition is ON.
- ✓ Check if the code readers’s EOBD connector is securely connected to the vehicle’s DLC.
- ✓ Verify that the vehicle is EOBD compliant.
- ✓ Turn the ignition off and wait for about 10 seconds. Turn the ignition back to on and continue the testing.
- ✓ Verify the control module is not defective.

Operating Error

If the code reader freezes, then an exception occurs or the vehicle’s ECU (Engine Control Unit) is too slow to respond to requests. You need to do the following to reset the code reader:

- ✓ Reset the code reader.
- ✓ Turn the ignition off and wait for about 10 seconds. Turn the ignition back to on and continue the testing.

Code reader doesn't power up

If the code reader won't power up or operates incorrectly in any other way, you need to do the following to check up:

- ✓ Check if the code reader's EOBD connector is securely connected to the vehicle's DLC;
- ✓ Check if the DLC pins are bent or broken. Clean the DLC pins if necessary.
- ✓ Check vehicle battery to make sure it is still good with at least 8.0 volts.

LED lamps not working

If you turn on the code reader and perform the I/M Readiness test but the LED lamps are not working, there may be several possible causes, including bad connection and ignition off. In this case, follow these steps to check the code reader.

- Make sure the EOBD cable is connected to the DLC securely.
- Verify the ignition key is in the KOER position.
- Run the **LED Test** in the **System Setup** menu. (*see 3.7 System Setup*). If the code reader did not pass this test, there is a problem with the LED lamp. Please contact Sealey or your local distributor.


4. EOBD Diagnostics

When more than one vehicle control module is detected by the scan tool, you will be prompted to select the module where the data may be retrieved. The most often to be selected are the Power train Control Module [PCM] and Transmission Control Module [TCM].

CAUTION: *Don't connect or disconnect any test equipment with ignition on or engine running.*

- 1) Turn the ignition off.
- 2) Locate the vehicle's 16-pin Data Link Connector (DLC).
- 3) Plug the code reader's cable connector into the vehicle's DLC.
- 4) Turn the ignition on. Engine can be off or running.
- 5) Turn on the code reader. Use the **SCROLL** button to select **EOBD** from the **Main Screen**.(Figure 3.1)
- 6) Press the **ENTER/Exit** button to wait for the Menu to appear. A sequence of messages displaying the EOBD protocols will be observed on the display until the vehicle protocol is detected.
 - *If the code reader fails to communicate with the vehicle's ECU (Engine Control Unit) more than three times, a "LINKING ERROR!" message shows up on the display.*
 - ✓ Verify that the ignition is ON;
 - ✓ Check if the code reader's EOBD connector is securely connected to the vehicle's DLC;
 - ✓ Verify that the vehicle is EOBD compliant;
 - ✓ Turn the ignition off and wait for about 10 seconds. Turn the ignition back to on and repeat the procedure from step 5.
 - *If the "LINKING ERROR" message does not go away, then there might be problems for the code reader to communicate with the vehicle. Contact your local distributor or the manufacturer's customer service department for assistance.*


- 7) View a summary of system status (MIL status, DTC counts, Monitor status) on screen. (Figure 4.1) Wait a few seconds or press any key for **Diagnostic Menu** (Figure 4.3) to come up.

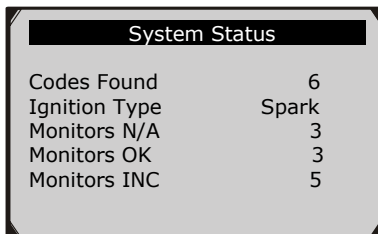

System Status	
Codes Found	6
Ignition Type	Spark
Monitors N/A	3
Monitors OK	3
Monitors INC	5

Figure 4.1

- If more than one module is detected, you will be prompted to select a module before testing. (Figure 4.2)

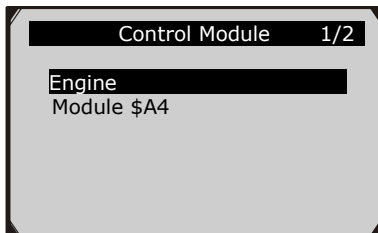

Control Module	1/2
Engine	
Module \$A4	

Figure 4.2

- Use the **SCROLL** button to select a module and press the **ENTER/Exit** button to confirm.

4.1 Reading Codes

- ◆ *Reading Codes can be done with the key on engine off (KOEO) or with the key on engine running (KOER).*
- ◆ *Stored Codes are also known as “hard codes”, which are fault codes, or trouble codes that have been stored in the vehicle computer memory because the faults have reoccurred for more than a specified amount of key-cycles. These codes will cause*

the control module to illuminate the malfunction indicator light (MIL) when emission-related fault occurs.

- ◆ *Pending Codes are also referred to as “maturing codes” or “continuous monitor codes”. They indicate problems that the control module has detected during the current or last driving cycle but are not considered serious yet. Pending Codes will not turn on the malfunction indicator lamp (MIL). If the fault does not occur within a certain number of warm-up cycles, the code clears from memory.*
 - ◆ *Permanent Codes are DTCs that are "confirmed" and are retained in the non-volatile memory of the computer until the appropriate monitor for each DTC has determined that the malfunction is no longer present and is not commanding the MIL on. Permanent DTC shall be stored in non-volatile memory and may not be erased by any diagnostic services or by disconnecting power to ECU.*
- 1) Use **SCROLL** button to select **Read Codes** from **Diagnostic Menu** and press **ENTER/Exit** button.

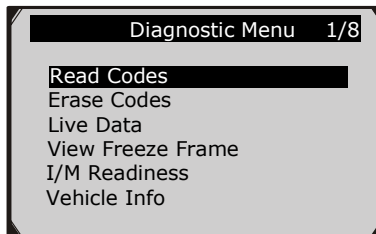


Figure 4.3

- 2) Use the **SCROLL** button to select **Stored Codes** or **Pending Codes** from the **Read Codes** menu and press the **ENTER/Exit** button.

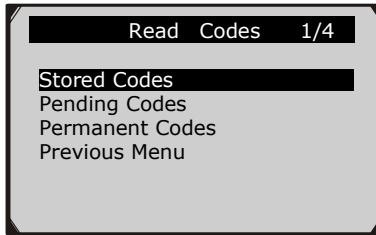


Figure 4.4

- If there is not any Diagnostic Trouble Code, the display indicates “**No (pending) codes are stored in the module!**” Wait a few seconds or press any key to return to previous screen.

NOTE: Permanent Codes function is available for merely vehicles supporting the CAN protocols.

- 3) View DTCs and their definitions on screen. Press **ENTER/Exit** button to return to previous screen.

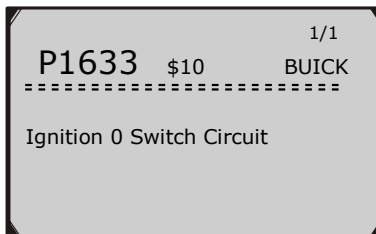


Figure 4.5

- The control module number, sequence of the DTCs, total number of codes detected and type of codes (Generic or Manufacturer specific, Stored or Pending codes) will be observed on the upper right hand corner of the display.
- 4) If more than one DTC is found, use the **SCROLL** button to check all the codes.
 - If retrieved DTCs contain any manufacturer specific or enhanced codes, a “**Manufacturer specific codes are found!**”

Press any key to select vehicle make!” message comes up prompting you to select vehicle manufacturer to view DTC definitions. Use **SCROLL** button to select manufacturer and then press **ENTER/Exit** button to confirm.

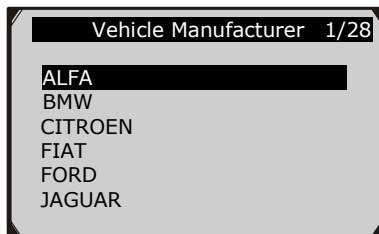


Figure 4.6

- If the manufacturer of your vehicle is not listed, use the **SCROLL** button to select **Other** and press the **ENTER/Exit** button.
- 5) Select **Previous Menu** from the **Read Codes** screen, and press **ENTER/Exit** button to return to previous menu.

4.2 Erasing Codes

CAUTION: Erasing the Diagnostic Trouble Codes may allow the code reader to delete not only the codes from the vehicle's on-board computer, but also "Freeze Frame" data and manufacturer specific enhanced data. Further, the I/M Readiness Monitor Status for all vehicle monitors is reset to Not Ready or Not Complete status. Do not erase the codes before the system has been checked completely by a technician.

NOTE: Erasing codes does not mean that trouble codes in ECU have been eliminated completely. As long as there is fault with the vehicle, the trouble codes keep on presenting.

- ◆ This function is performed with key on engine off (KOEO). Do not start the engine.

- 1) Use the **SCROLL** button to select **Erase Codes** from **Diagnostics Menu** and press the **ENTER/Exit** button. (Figure 4.3)
- 2) A warning message comes up asking for your confirmation.

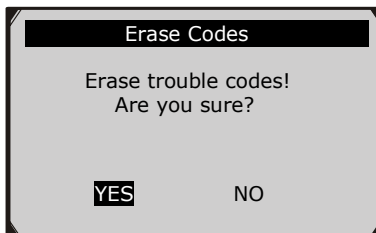


Figure 4.7

- If you do not want to proceed with erasing codes, use **SCROLL** button to select **NO** to exit. A message of **“Command Cancelled!”** show ups. Wait a few seconds or press any key to return to **Diagnostics Menu**.
- 3) Press the **ENTER/Exit** button to confirm.
 - If the codes are cleared successfully, an **“Erase Done!”** confirmation message shows on the display.

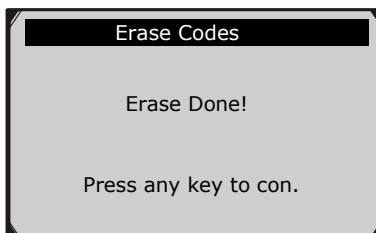


Figure 4.8

- If the codes are not cleared, then an **“Erase Failure. Turn Key on with Engine off!”** message appears.

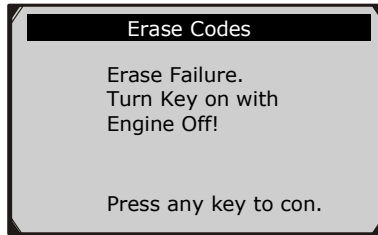


Figure 4.9

4.3 Live Data

The function allows viewing of live or real time PID data of vehicle's computer module(s).

- 1) To view live data, use the **SCROLL** button to select **Live Data** from **Diagnostic Menu** and press the **ENTER/Exit** button. (Figure 4.3)
- 2) Wait a few seconds while the code reader validates the PID MAP.

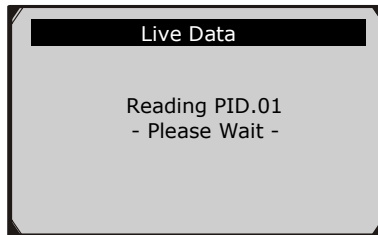


Figure 4.10

- 3) To view complete set of data, use **SCROLL** button to select **Complete Data Set** from **View Data** menu and press the **ENTER/Exit** button.

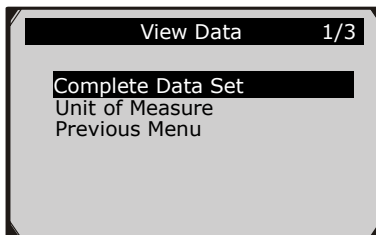


Figure 4.11

- 4) View live PIDs on the screen. Use the **SCROLL** button for more PIDs if additional information is available on more than one page.

 A screenshot of a diagnostic tool's 'Live Data' screen. At the top, a black header bar contains the text 'Live Data' on the left and '6' on the right. Below the header, a list of engine parameters is displayed in a table format. The parameter 'SHRTFT1 (%)' is highlighted with a black background.

DTC_CNT	0
FUELSYS1	0L
FUELSYS2	--
LOAD_PCT (%)	0.0
ETC(°C)	-40
SHRTFT1 (%)	99.2

Figure 4.12


- The number “x” to the right of the screen indicates sequence of the highlighted item.
- 5) Press the **ENTER/Exit** button to return to previous menu.
 - 6) Select **Previous Menu** from the **Read Codes** screen, and press **ENTER/Exit** button to return to previous menu

4.4 Viewing Freeze Frame Data

Freeze Frame Data allows the technician to view the vehicle’s operating parameters at the moment a DTC (Diagnostic Trouble Code) is detected. For example, the parameters may include engine speed (RPM), engine coolant temperature (ECT), or vehicle speed sensor

(VSS) etc. This information will aid the technician by allowing the parameters to be duplicated for diagnostic and repair purposes.

- 1) To view freeze frame data, use the **SCROLL** button to select **View Freeze Frame** from **Diagnostic Menu** and press the **ENTER/Exit** button. (Figure 4.3)
- 2) Wait a few seconds while the code reader validates the PID MAP.
- 3) If retrieved information covers more than one screen, use the **SCROLL** button, as necessary, until all the data have been shown up.

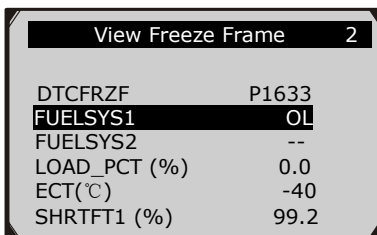

View Freeze Frame 2	
DTCFRZF	P1633
FUELSYS1	OL
FUELSYS2	--
LOAD_PCT (%)	0.0
ECT(°C)	-40
SHRTFT1 (%)	99.2

Figure 4.13

- If there is no freeze frame data available, an advisory message “**No freeze frame data stored!**” shows on the display.
- 4) Press **ENTER/Exit** button to return to previous screen.

4.5 Retrieving I/M Readiness Status

I/M Readiness function is used to check the operations of the Emission System on EOBD compliant vehicles. It is an excellent function to use prior to having a vehicle inspected for MOT Testing.

CAUTION - By clearing trouble codes you also clear the readiness status for the individual emission system readiness tests. In order to reset these monitors, the vehicle must be driven through a

complete drive cycle with no trouble codes in memory. Times for reset vary depending on vehicle.

Some latest vehicle models may support two types of **I/M Readiness** tests:

- A. ***Since DTCs Cleared*** - indicates status of the monitors since the DTCs are erased.
- B. ***This Drive Cycle*** - indicates status of monitors since the beginning of the current drive cycle.

An I/M Readiness Status result of “NO” does not necessarily indicate that the vehicle being tested will fail the state I/M inspection. For some states, one or more such monitors may be allowed to be “Not Ready” to pass the emissions inspection.

- **“OK”** -- Indicates that a particular monitor being checked has completed its diagnostic testing.
- **“INC”** -- Indicates that a particular monitor being checked has not completed its diagnostic testing.
- **“N/A”** -- The monitor is not supported on that vehicle.

There are two ways to retrieve I/M readiness status.

A. Retrieve I/M Readiness status with One-Click I/M Readiness Key

By simply pressing the **One-Click I/M Readiness Key**, you can retrieve the I/M readiness status. The screen will show as below. (Figure 4.14) According to different readiness status, the color LEDs will illuminate and different audio tones will be heard.

I/M Readiness			
MIL		IGN	Spark
DTC	5	Pd DTC	3
MIS	✓	EVAP	✗
FUE	✓	AIR	✗
CCM	✓	O2S	⊘
CAT	✓	HRT	⊘
HCAT	✓	EGR	⊘

Figure 4.14

✓ “OK” -- Indicates that a particular monitor being checked has completed its diagnostic testing.

✗ “INC” -- Indicates that a particular monitor being checked has not completed its diagnostic testing.

⊘ “N/A” -- The monitor is not supported on the vehicle.

The green, yellow and red LEDs provide a quick way to help you determine if a vehicle is ready for an Emission Test.

The LED and audio tone indications are interpreted as below:

LED Interpretation

- 1) **GREEN LED** – Indicates that engine systems are “OK” and operating normally (the number of Monitors supported by the vehicle which have run and performed their self-diagnostic testing is in the allowed limit. MIL is off.).There are no stored and pending DTCs. The vehicle is ready for an Emissions Test, and there is a good possibility that it can be certified.
- 2) **YELLOW LED** – With MIL off, there may be three possible conditions to cause the yellow LED to light.

- ✧ If a “Stored” Diagnostic Trouble Code is causing the Yellow LED to light, it is still possible that the vehicle will be allowed to be tested for emissions and certified.
- ✧ If a “Pending” Diagnostic Trouble Code is causing the Yellow LED to light, it is still possible that the vehicle will be allowed to be tested for emissions and certified.
- ✧ If the illumination of the Yellow LED is being caused by monitors that have not completed their diagnostic testing, then the issue of the vehicle being ready for an Emissions Test depends on the emissions regulations and laws of your local area.

NOTE: From the code retrieval procedure, determine the status of each Monitor. Take this information to an emissions professional to determine (based on your test results) if your vehicle is ready for an Emissions Test.

- 3) **RED LED** – Indicates there is a problem with one or more of the vehicle’s system. A vehicle displaying a red LED is definitely not ready for an Emissions Test. The red LED is also an indication that there are DTCs present. The MIL lamp on the vehicle’s instrument panel will light steady. The problem that is causing the red LED to light must be repaired before an Emissions Test can be performed. It is also suggested that the vehicle be inspected/repared before driving the vehicle further.

If the RED LED was obtained, there is a definite problem present in the system(s). In these cases, you have the following options:

- ✧ Repair the vehicle yourself. If you are going to perform the repairs yourself, proceed by reading the vehicle service manual and following all its procedures and recommendations.

- ✧ Take the vehicle to a professional to have it serviced. The problem(s) causing the red LED to light must be repaired before the vehicle is ready for an Emissions Test.

Audio Tone Interpretation

The audio tone is configured according to the I/M Readiness Status. This function is invaluable when performing diagnostics and driving at the same time, or working in bright areas where LED illumination alone is not sufficient.

Different audio tone with different LED light indicates different I/M Readiness Status.

LED Light	Audio Tone	Beep Interval
Green LED	Two long beeps	5 seconds
Yellow LED	short, long, short beep	5 seconds
Red LED	Four short beeps	5 seconds

After you have read the information, press **ENTER/Exit** to exit. The other buttons are disabled to prevent misoperation.

B. Retrieve I/M Readiness status in typical way

- 1) Use the **SCROLL** button to select **I/M Readiness** from **Diagnostic Menu** and press **ENTER/Exit** button. (Figure 4.3)
- 2) Wait a few seconds while the code reader validates the PID MAP.
- 3) If the vehicle supports both types of tests, then both types will be shown on the screen for selection.

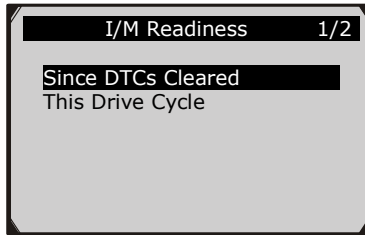


Figure 4.15

- 4) Use the **SCROLL** button, as necessary, to view the status of the MIL light (“**ON**” or “**OFF**”) and the following monitors.

For spark ignition engines:

- **MIS** -- Misfire Monitor
- **FUEL** -- Fuel System Monitor
- **CCM** -- Comprehensive Component Monitor
- **EGR** -- EGR System Monitor
- **O2S** -- O2 Sensors Monitor
- **CAT** -- Catalyst Monitor
- **EVAP** -- Evaporative System Monitor
- **HTR** -- O2 Sensor Heater Monitor
- **AIR** -- Secondary Air Monitor
- **HCAT** -- Heated Catalyst Monitor

For compression ignition engines:

- **MIS** -- Misfire Monitor
- **FUEL** -- Fuel System Monitor
- **CCM** -- Comprehensive Component Monitor
- **EGR** -- EGR System Monitor
- **HCCAT** -- NMHC Catalyst Monitor
- **NCAT** -- NOx Aftertreatment Monitor
- **BP** -- Boost Pressure System Monitor
- **EGS** -- Exhaust Gas Sensor Monitor
- **PM** -- PM Filter Monitor

Since DTCs Cleared		1
MIL Status	OFF	
Misfire Monitor	OK	
Fuel System Mon	OK	
Comp. Component	OK	
Catalyst Mon	INC	
Htd Catalyst	N/A	

Figure 4.16

- 5) If the vehicle supports readiness test of “**This Drive Cycle**”, a screen of the following displays:

This Drive Cycle		1
MIL Status	OFF	
Misfire Monitor	OK	
Fuel System Mon	N/A	
Comp. Component	OK	
Catalyst Mon	INC	
Htd Catalyst	N/A	

Figure 4.17

- 6) The LEDs and audio tone corresponding to different monitor status will be activated as below.

LED Light	Audio Tone	Beep Interval
Green LED	Two long beeps	2 minutes
Yellow LED	short, long, short beep	2 minutes
Red LED	Four short beeps	2 minutes

- 7) Use the **SCROLL** button for more PIDs if additional information is available on more than one page.
- 8) Press the **ENTER/Exit** button to return to **Diagnostic Menu**.

4.6 Viewing Vehicle Information

The **Vehicle Info.** function enables retrieval of **Vehicle Identification No. (VIN)**, **Calibration ID Nos. (CINs)**, **Calibration Verification Nos. (CVNs)** and **In-use Performance Tracking on 2000 and newer vehicles that support Mode 9.**

- 1) Use **SCROLL** button to select **Vehicle Info.** from the **Diagnostic Menu** and press **ENTER/Exit** button. (Figure 4.3)
- 2) An advisory message comes up to remind you. Wait a few seconds or press any key to continue.

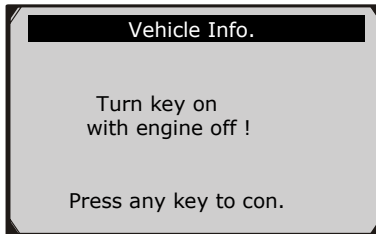


Figure 4.18

- 3) Wait a few seconds while the code reader reads vehicle information.

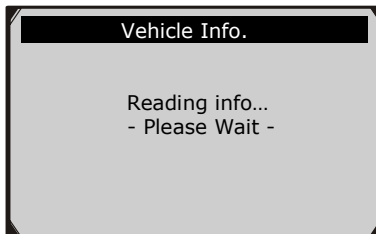


Figure 4.19

- If the vehicle does not support this mode, a message shows on the display warning that the mode is not supported.
- 4) From **Vehicle Info.** Menu, use the **SCROLL** button to select an available item to view and press the **ENTER/Exit** button.

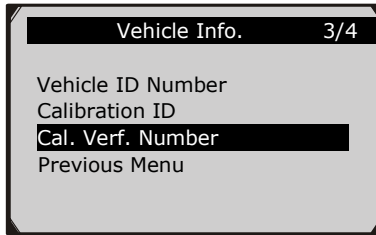


Figure 4.20

- 5) View retrieved vehicle information on screen.

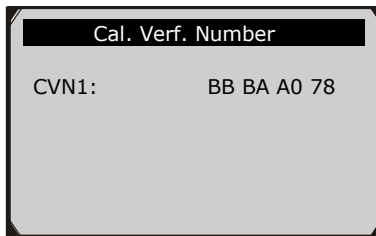


Figure 4.21

- 6) Select **Previous Menu** from the **Vehicle Info** screen, and press **ENTER/Exit** button to return to the previous menu.

4.7 Exiting the EOBD Test

- 1) To exit OBDII test, use **SCROLL** button to select **Previous Menu** from **Diagnostic Menu** and press **ENTER/Exit** button. (Figure 4.3)
- 2) A warning message comes up asking your confirmation. Press **ENTER/Exit** button to exit.

5. Ready Test

This function can be used as a convenient readiness test tool by automotive technicians to determine if the tested vehicle is ready for an emission test. By visual and audible indication, you will learn a vehicle's monitors readiness.

5.1 General Information

Repairs to the emissions-control systems of a 1996 or newer vehicle cause the vehicle's computer (ECU) memory to be cleared. The vehicle must go through a drive cycle to allow the ECU to perform a series of tests to ensure that the repair was successful, and before a state mandated emissions test can be conducted. But how will you know when it is ready?

With this code reader, you don't have to drive around endlessly and continuously coming back to the repair shop for retest if all required tests by the ECU are completed. And you could also do a quick check of the vehicle to determine if it is ready to receive an emission test without the hassle of connecting your vehicle to the analyzer or having to use a complicated scan tool.

In the following cases, this function is especially useful.

- You bought a used car and the check engine light had been cleared to mask potential problems.
- You used a code reader to clear the DTCs.
- Your car has been sent to repair.

5.2 Test tool application

The purpose of this function is to indicate which of the vehicle's monitors have run and completed their diagnosis and testing, and which ones have not yet run and completed testing and diagnosis of their designated sections of the vehicle's emission system. All data shows on one screen, which provides a simple profile of vehicle at a glance, saving diagnosis time and improving technician productivity.

- Use the **SCROLL** button to select **Ready Test** from **Main Screen** (Figure 5.1), and press the **ENTER/Exit** button.

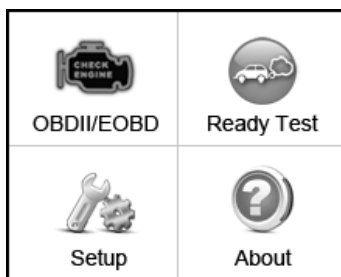


Figure 5.1

As post-repair diagnostic tool

This function can be used (after the vehicle has done any emission-related repairs) to confirm that the repair has been performed successfully.

After repairs, some drive cycles are required to reset the monitoring systems. Drive cycles vary among vehicles and for each monitor in any particular vehicle.

Use the following procedure to check if the repair has been done correctly:

- 1) Connect the code reader to the vehicle's DLC and erase the DTC(s) from the vehicle's computer memory. (*see 4.2 erasing codes*)

- 2) After the erase procedure is performed, status of most monitors will be changed. Leave the code reader connected to the vehicle, and select **Ready Test** from **Main Screen**.
- 3) Keep on driving the car till the code reader notifies you safely with color LEDs and audible tone that the drive cycle has been completed and the vehicle is ready, eliminating drive cycle guesswork and confirming readiness status.
- 4) If the GREEN LED lights and two long beeps are heard, your vehicle is ready and the repair work is confirmed.
- 5) If the RED LED lights, your vehicle is not ready and the repair work is unsuccessful.

As pre-check diagnostic tool

Prior to having a vehicle inspected for compliance to a state emissions test, you could use this function to check the readiness status first by yourself.

- 1) While the code reader connected to the vehicle, select **Ready Test** from **Main Screen**. Drive the car till the code reader notifies you safely with color LEDs and audible tone if your vehicle is ready to conduct state emission test.
- 2) If the GREEN LED lights and two long beeps are heard, your vehicle is ready and there is a good possibility that it can be certified.
- 3) If the RED LED lights, your vehicle is not ready and must be repaired before an emissions test can be performed.

IMPORTANT: If you are driving the vehicle to perform a drive cycle ALONE, please set the Status Beep On (see 3.7 System Setup). By listening to the beep, you will learn when the monitors have run and completed the diagnostic testing. NEVER try to drive and operate the code reader at the same time!

NOTE: This function reads off the real time data of emission-related monitoring systems readiness status. Once the code reader has finished other operations, for example, clearing trouble codes, the I/M Readiness Monitor Status program resets status of all the monitors to “INC” condition. In order to set these monitors to a Ready status, the vehicle must be driven through a complete drive cycle. Times for reset vary depending on vehicle. Please refer to your vehicle’s service manual for drive cycle information.

NOTE: In this function, only ENTER/Exit button is available. The other buttons are disabled to prevent misoperation.

5.3 LED and Tone Interpretation

Select **Ready Test** from the **Main Screen** and the screen shows as below, including applicable monitors status, MIL state, Ignition type, DTCs (stored one and pending one).

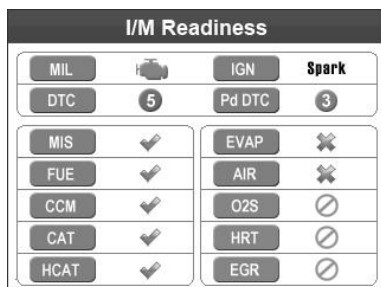


Figure 5.2

If the code reader is idle, it will show the result immediately. If it is busy, it will wait till the current procedure is finished. After viewing the status, press **ENTER/Exit** button to exit.

“OK” -- Indicates that a particular monitor being checked has completed its diagnostic testing.

“INC” -- Indicates that a particular monitor being checked has not completed its diagnostic testing.

- ⊘ “N/A” -- The monitor is not supported on the vehicle.

The LED and audio tone indications are interpreted as below:

LED Interpretation

The green and red LEDs provide an easy way to check if emission-related monitoring systems complete their self-diagnostic testing.

- 1) **GREEN LED** – Your vehicle is **Ready**. Indicates that engine systems are “OK” and operating normally (the number of Monitors supported by the vehicle which have run and performed their self-diagnostic testing is in the allowed limit).
- 2) **RED LED** –Your vehicle is **Not Ready**. Indicates that the number of Monitors supported by the vehicle which have run and performed their self-diagnostic testing is out of the allowed limit.

Audio Tone Interpretation

The audio tone could be configured according to the I/M Readiness Status. This function is invaluable when performing diagnostics and driving at the same time, or working in bright areas where LED illumination alone is not sufficient.

LED Light	Audio Tone	Beep Interval
Green LED	Two long beeps	2 minutes
Red LED	No beep	

6. Warranty and Service

6.1 Limited One Year Warranty

Sealey warrants to its customers that this product will be free from all defects in materials and workmanship for a period of one (1) year from the date of the original purchase, subject to the following terms and conditions:

- 1) The sole responsibility of Sealey under the Warranty is limited to either the repair or, at the option of Sealey, replacement of the code reader at no charge with Proof of Purchase. The sales receipt may be used for this purpose.
- 2) This warranty does not apply to damages caused by improper use, accident, flood, lightning, or if the product was altered or repaired by anyone other than Sealey's Service Center.
- 3) Sealey shall not be liable for any incidental or consequential damages arising from the use, misuse, or mounting of the scan tool.
- 4) All information in this manual is based on the latest information available at the time of publication and no warranty can be made for its accuracy or completeness. Sealey reserves the right to make changes at any time without notice.

6.2 Service Procedures

If you have any questions, please contact your local distributor or visit our website at www.sealey.co.uk

If it becomes necessary to return the code reader for repair, contact your local distributor for more information.