Carpet Washer & Wet/Dry Vacuum Cleaner 800W



Model: DH492

Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.

© Baridi.com

Table of Contents

1.	**Introduction**	**2**
1.1	Intended Use	2
1.2	Description	2
2.	**Safety Symbols**	**3**
3.	**Safety**	**3**
3.1	Electrical Safety	3
3.2	General Safety	3
3.3	Operational Safety	3
4.	**Specification**	**4**
5.	**Contents And Features**	**4**
6.	**Preparation**	**5**
6.1	Fill Clean Water Tank	5
6.2	Attaching Tools	5
6.3	Accessory Storage	5
7.	**Operation**	**6**
8.	**Cleaning And Maintenance**	**6**
8.1	Cleaning The Waste Water Tank	6
8.2	Cleaning The Filters	7
8.3	Self-Cleaning	7
9.	**Parts Information**	**8**
10.	**Product Care And Storage**	**9**
11.	**Warranty**	**9**
12.	**Aftersales Support**	**9**
13.	**End Of Life**	**9**
14.	**Troubleshooting**	**10**

1. Introduction

Thank you for purchasing a Baridi product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

1.1 Intended Use

Wet and dry vacuum cleaners are designed to handle a wide range of domestic cleaning tasks.

They are particularly useful for: Cleaning spills, picking up dirt and debris, car interiors and upholstery cleaning.

1.2 Description

Keep carpets, upholstery and everyday surfaces looking cleaner with this carpet washer and wet/dry vacuum cleaner. Designed for versatile home cleaning, it combines carpet washing and extraction with wet and dry vacuuming, helping to tackle everyday dirt, spills and debris. The portable design and castors make it easy to move between rooms, while the range of supplied accessories provides practical options for different cleaning tasks. An integrated accessory holder also helps keep the tools together and ready to use.

© Jack Sealey Limited trading as Baridi

All content in this manual, including but not limited to text, images, graphics and logos is the property of Jack Sealey Ltd/Baridi or its licensors and is protected by copyright, trademark, and other intellectual property laws. You may not reproduce, distribute, modify, or otherwise use any content without prior written consent.

Disclaimer: All errors and omissions excluded. It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. See **www.baridi.com** for the latest information.

Country of origin: China.

2. Safety Symbols



Refer to instruction manual



Indoor use only

3. Safety

3.1 Electrical Safety

! **WARNING!** It is the user's responsibility to check the following:
Check all electrical equipment and appliances to ensure that they are safe before using.
Inspect power supply leads, plugs and all electrical connections for wear and damage.

- Electrical safety information: It is important that the following information is read and understood.
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

! **WARNING!** Important: Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse (see Specification table).

✕ **DO NOT** pull the plug from the socket by the cable.

✕ **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

- This product is fitted with a BS1363/A 3 pin plug.
- If the cable or plug is damaged during use, switch the electricity supply and remove from use.
- Ensure that repairs are carried out by a qualified electrician.

3.2 General Safety

- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

! Children shall **NOT** play with the appliance.

- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- This piece of equipment is solely designed for use by a responsible adult/professional user who has received adequate training on its operation & safety risks.
- The appliance must be unplugged after use and before carrying out user maintenance.
- The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Keep the appliance out of reach of children when it is energised, in operation or cooling down.

3.3 Operational Safety

✕ **DO NOT** use cleaning agents or detergents that contain solvents.

✕ **DO NOT** store the appliance in areas that may be subject to high temperatures.

- Turn off the appliance and unplug the appliance when cleaning or servicing the appliance.

✕ If you notice any form of leaking liquid, switch off and unplug the appliance immediately. **DO NOT** resume operation until the appliance has been fully inspected and the issue resolved. Any repairs must only be undertaken by qualified technicians. Contact Baridi for further advice.


- Take care not to excessively bend, twist or pull the hose too harshly as this could damage and deform it.
- If any water or detergent is spilt on the appliance, wipe the area with a soft, slightly damp cloth.

4. Specification

Model	DH492
Suction Power	17kPa
Capacity	Clean Water Tank: 1.8L
	Waste Water Tank: 3L
Colour of Product	White
Filter Type	HEPA/Sponge
Power	800W
Electrical Class	Class II
IP Rating	IPX4
Supply	230V~50Hz
Cable Length and Plug	4m / 3-pin 13A
Noise Level	81dB
Product Dimensions	415 x 238 x 280mm
Nett Weight	6.5kg

fig.1


1	On/Off Button	**2**	Vacuum Mode Indicator
3	Water Spray Mode Indicator	**4**	Water Button

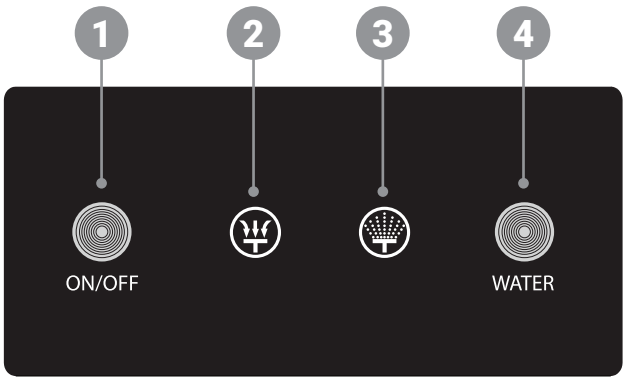

5. Contents And Features

fig.2

1	Main Unit
2	Hose with Handle
3	Extension Tubes
4	Clean Water Tank
5	Waste Water Tank
6	Vacuum Inlet
7	Carry Handle
8	Accessory Holder
9	Water On/Off Switch with Locking Function
10	Hard Floor/Carpet Tool
11	Crevice Tool
12	Glass Squeegee Tool
13	Upholstery Tool
14	Large Floor Tool
15	Filter Set x 2

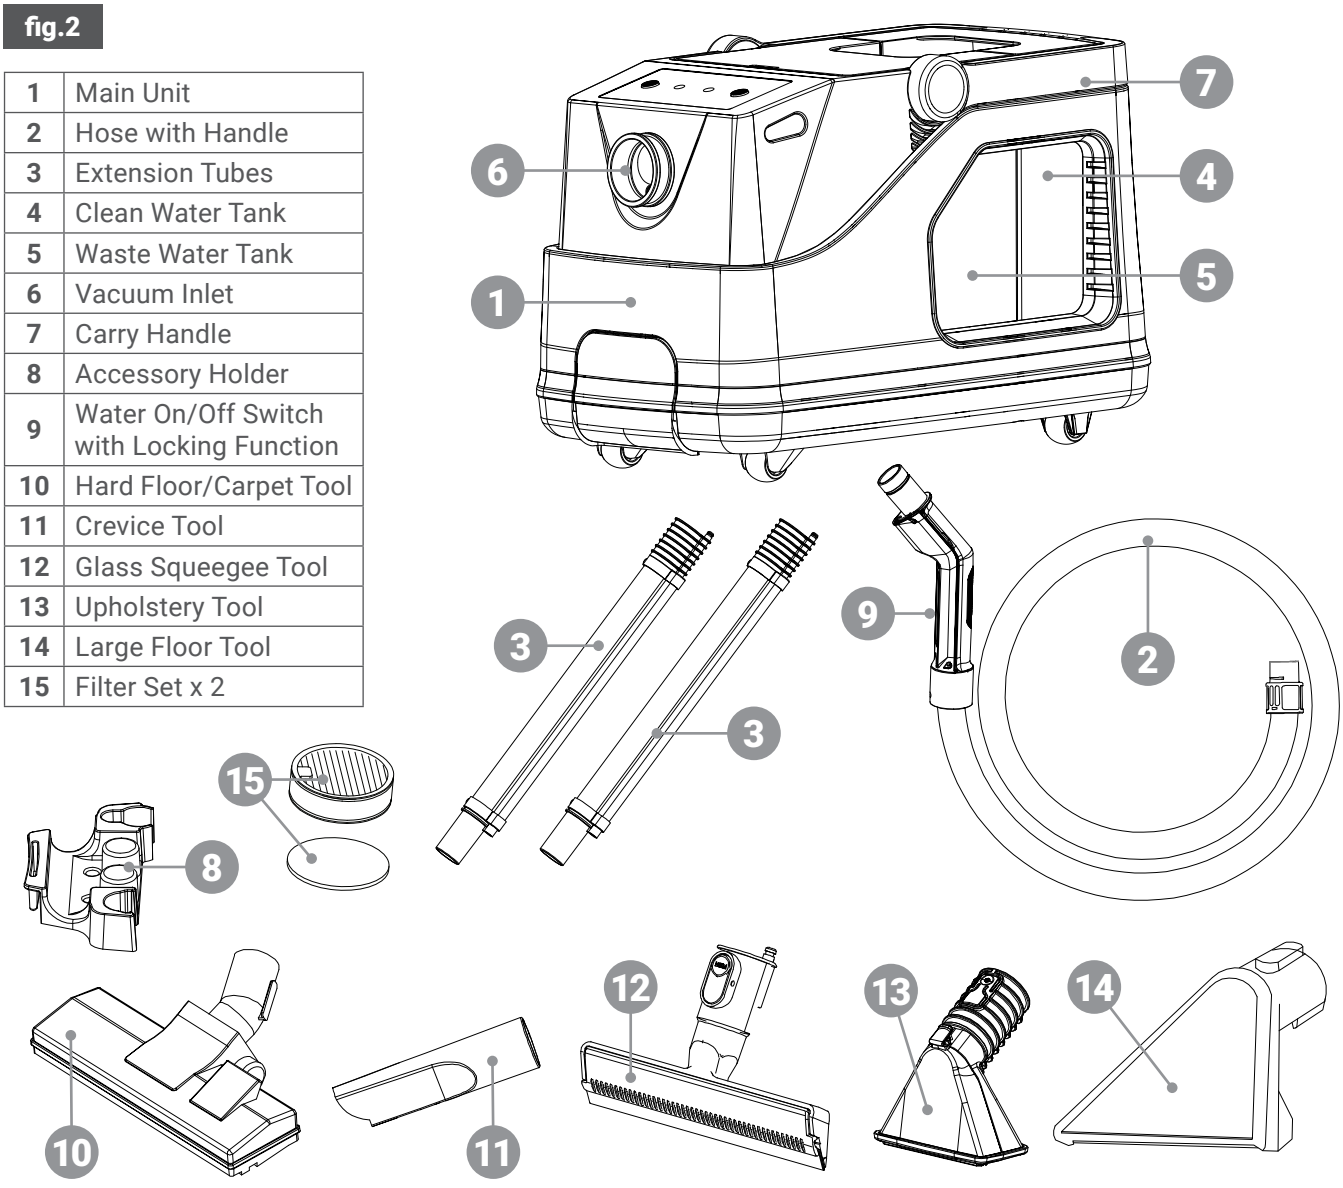

6. Preparation

WARNING! Ensure that the appliance is unplugged before any assembly and preparation.

- Before use, check that the filters are properly installed. See Cleaning and Maintenance section for details of filter access.


6.1 Fill Clean Water Tank

- If required, detergent should be added to the clean water tank at a ratio of 1:300. Example: add 6ml of detergent when filling up the clean water tank to capacity (1.8L).

Note: Only use a low-foaming detergent

6.1.1 The tank is removed by simply pulling it up using the integral handle built into the lid **(fig.3)**.

fig.3

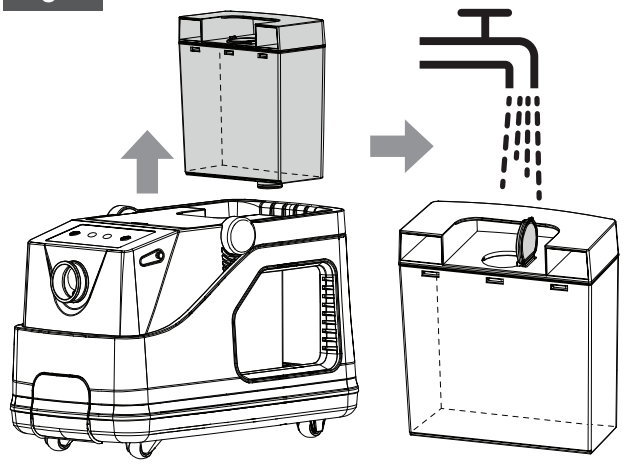

6.1.2 Flip open the tank filler plug and fill with clean water.


6.1.3 Add detergent or cleaning solution as required and refit the plug.

6.1.4 Refit the clean water tank into the cleaner body.

6.2 Attaching Tools

6.2.1 Connect the hose onto the vacuum inlet by pressing down the button and pushing onto the inlet until it locks into place. The button should be facing upwards **(fig.4)**.

fig.4

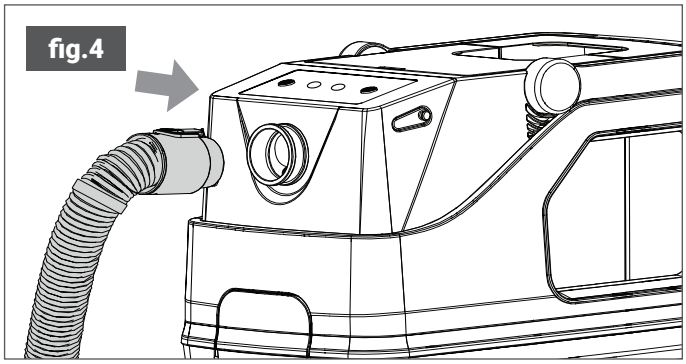

6.2.2 Select the attachment required for the task.

6.2.3 The extension tubes and all tools that incorporate a water connector attach in the same way as the hose.


6.2.4 The hard floor/carpet tool and the crevice tool are a simple push fit as these are for vacuum use only.

6.3 Accessory Storage

- The appliance is supplied with an accessory holder that fits onto the back of the unit.

6.3.1 To install it, raise the carry handle and fit the holder into the recess **(fig.5)**.

fig.5

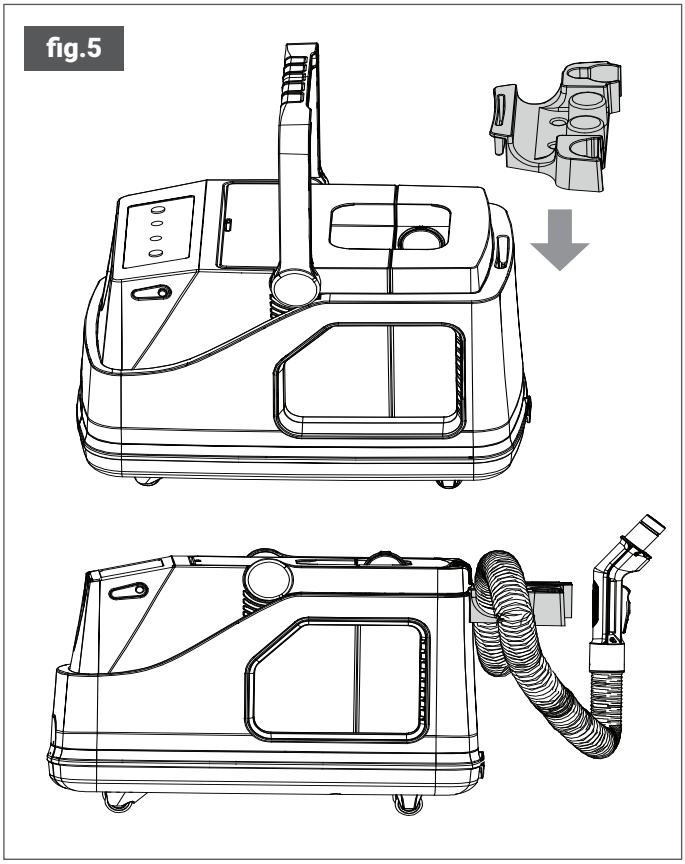

- The power supply cable can be wound round the holder.
- The hose can also be looped around the holder and the hose handle can be clipped into place.
- The other side of the holder can accommodate an extension tube.
- Two tools can be stored in the middle section of the holder.

7. Operation


7.1 Press the On/Off button **(fig.1.1)**. This starts the cleaner in vacuum mode only. The vacuum symbol will light up **(fig.1.2)**.

7.2 If you also require water spray cleaning mode, press the Water button **(fig.1.4)**. The water symbol will light up **(fig.1.3)**.

7.3 Start cleaning using your chosen tool.

7.4 To start the water, squeeze the trigger on the handle **(fig.6)**.

fig.6

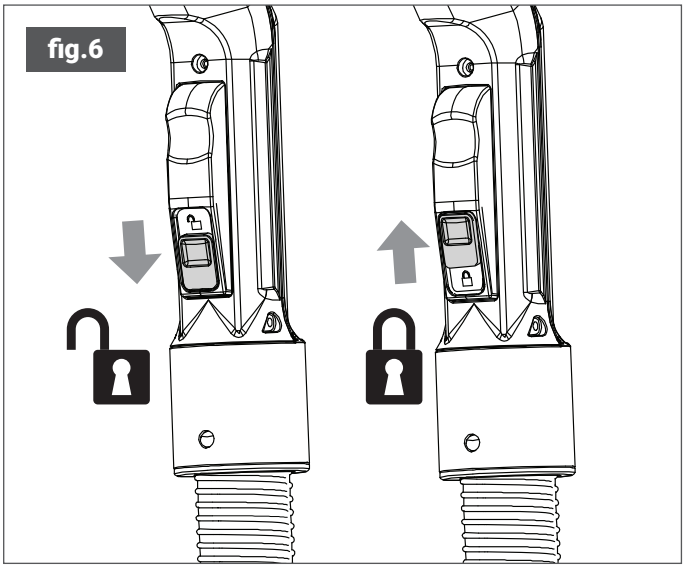

7.5 Release the trigger to stop the water spraying.

7.6 The trigger incorporates a locking function. Squeeze the trigger and, at the same time, slide the locking button forwards and then release the trigger. The water will spray continuously until you unlock the trigger by sliding the switch towards you **(fig.6)**.

8. Cleaning And Maintenance


Note: If you need to switch from dry vacuuming to wet cleaning or vice-versa during the same cleaning session, the filters should be swapped out with a clean, dry set. Using the cleaner with either wet or dusty filters can reduce performance.

8.1 Cleaning The Waste Water Tank

8.1.1 Pull out the waste water tank **(fig.7)**.

8.1.2 Press the unlock button on the side of the waste water tank lid and lift off the tank **(fig.7)**.


fig.7

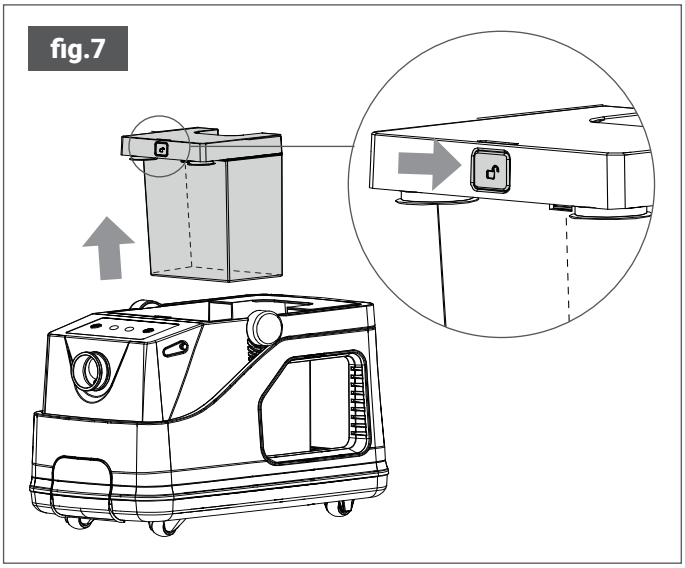

8.1.3 Remove the lid and filter holder assembly from the tank **(fig.8)**.

8.1.4 Empty the tank of waste water or the dust/ debris from dry vacuuming **(fig.8)**.

fig.8

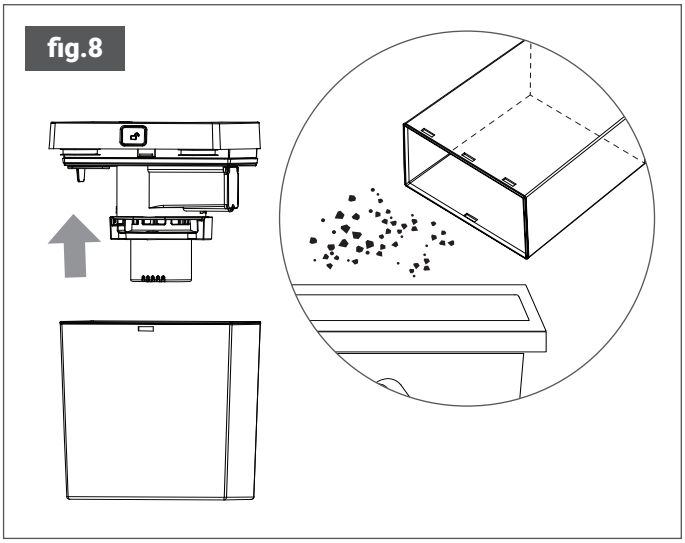


8.1.5 If necessary, rinse out the waste water tank and dry thoroughly.

8.2 Cleaning The Filters

8.2.1 Unlock the filter holder by turning it 90° anti-clockwise **(fig.9)**.

fig.9

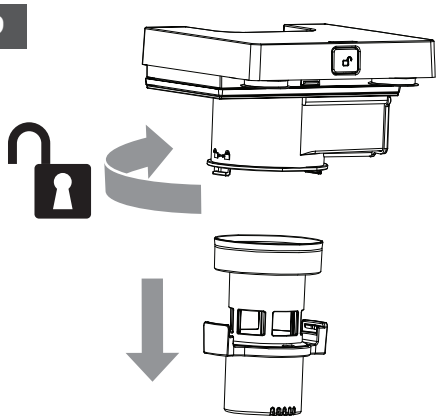


8.2.2 Remove the filters.

Note: The black foam filter is fitted on the underside of the HEPA filter.

8.2.3 Rinse the filter holder and both filters using clean running water **(fig.10)**.

fig.10

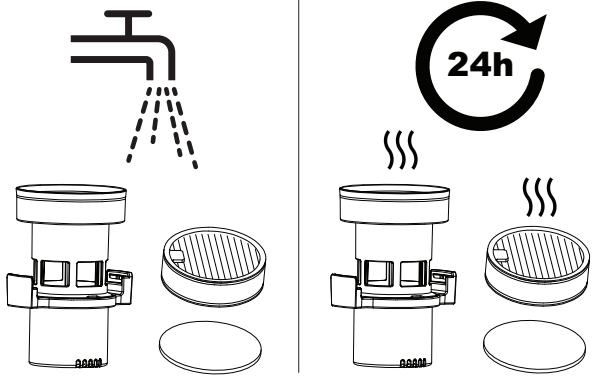

Note: Clean each filter gently. Rigorous brushing and scrubbing can damage and shorten the life of each filter.


8.2.4 Allow to air dry for 24 hours **(fig.10)**.

8.3 Self-Cleaning

8.3.1 The hose and internal pipe system can be cleaned using the following procedure:


8.3.2 Fill up the clean water tank with clean water **(fig.11)**.

fig.11

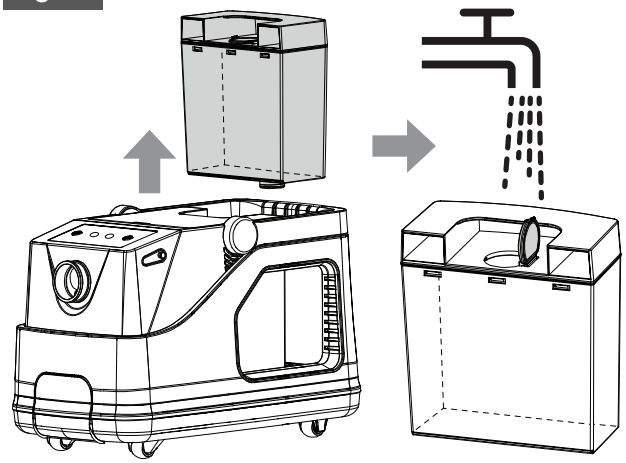


8.3.3 Attach the crevice tool to the end of the hose **(fig.12)**.

fig.12

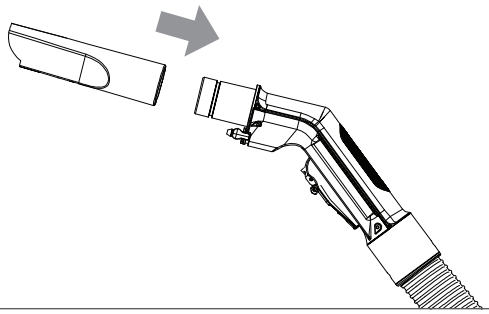

8.3.4 Open the clean water tank filler cap and insert the crevice tool into the tank as far as it will go **(fig.13)**.

fig.13

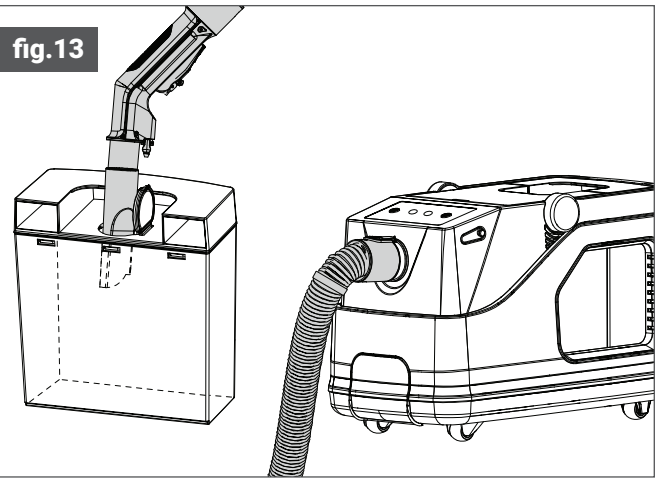

8.3.5 Press the on/off switch **(fig.1.1)**.


8.3.6 The appliance will begin to suck clean water through the hose and internal pipes and flush everything through into the waste water tank.

8.3.7 Pull out the waste water tank **(fig.7)**.

8.3.8 Remove and clean the filters as described in the Cleaning and Maintenance section.

© Baridi.com

9. Parts Information

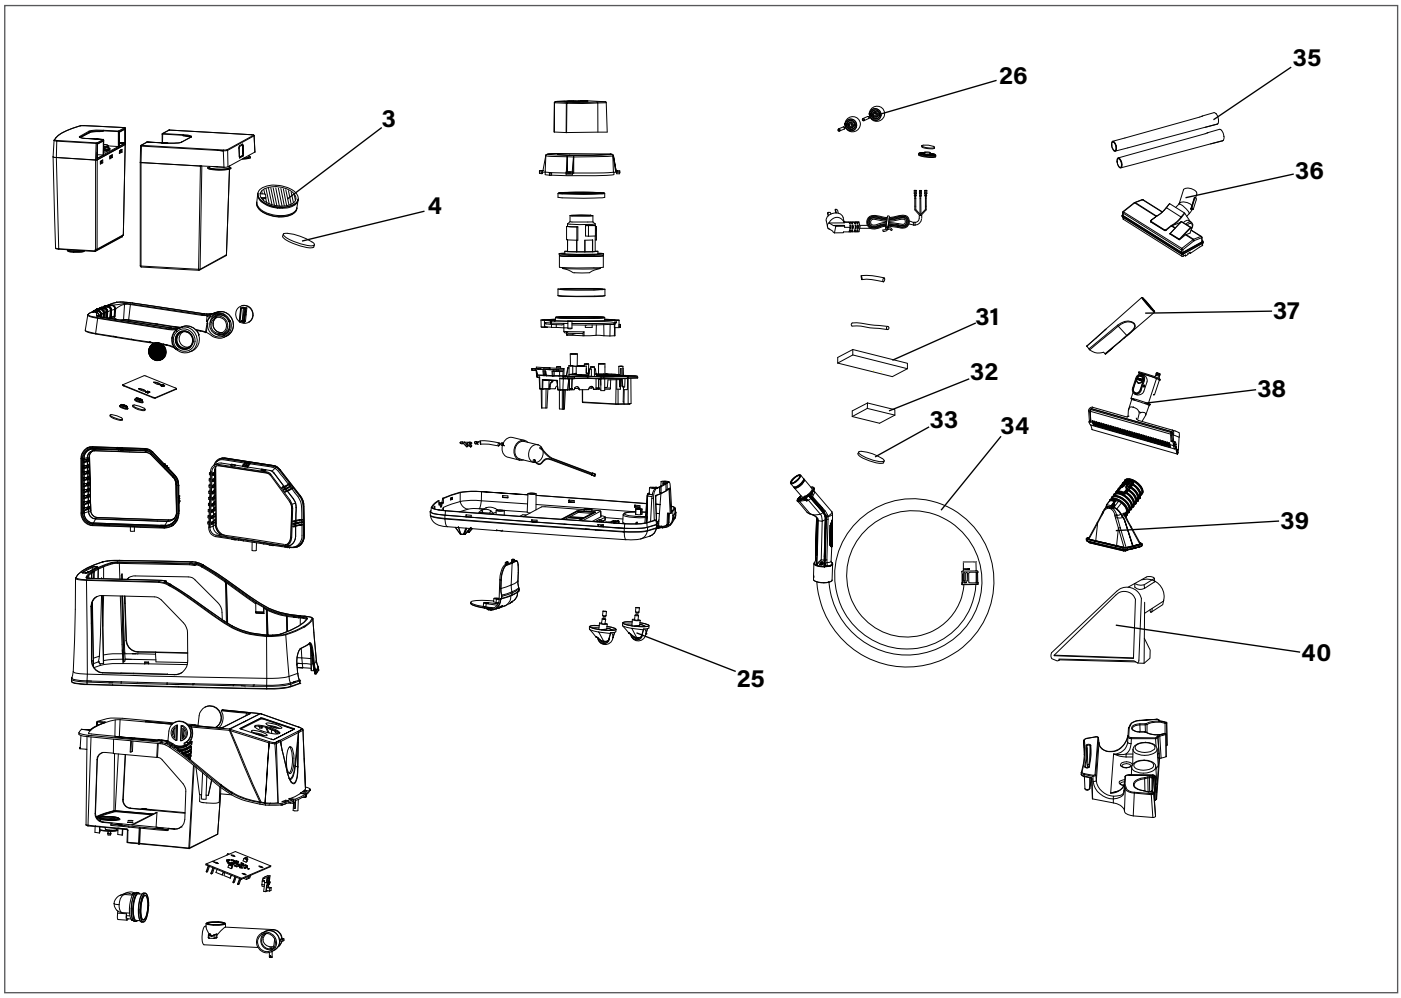

Item	Part No.	Description
3	DH11725	HEPA Filter
4	DH11726	Sponge Filter
25	DH11727	Swivel Base Assembly
26	DH11728	Wheel Assembly (Small)
31	DH11729	Dust-Proof Sponge
32	DH11730	Sound-Absorbing Sponge
33	DH11731	Air Inlet Sponge
34	DH11742	Flexible Hose Assembly

Item	Part No.	Description
35	DH11743	Extension Tube
36	DH11744	Carpet Brush
37	DH11735	Crevice Nozzle
38	DH11739	Window Spray Brush
39	DH11736	Sofa Brush
40	DH11740	Big Spray Brush
--	DH11745	Accessory Holder (Not Shown)

© Baridi.com

10. Product Care And Storage

10.1 After each session of use the appliance should be thoroughly cleaned as described in the Cleaning and Maintenance section.

10.2 Wipe the main unit and all attachments and tools with a soft damp cloth and dry.

✕ **DO NOT** use harsh chemicals or abrasives.

10.3 Store the appliance and all accessories in a dry, secure location out of reach of children.

11. Warranty

- Our Warranty is that on delivery and for the relevant Warranty Periods (set out below) the Goods shall be free from material defects in design, material and workmanship.
- If you notify us during the relevant Warranty Periods within a reasonable time of discovery that some or all of the Goods do not comply with Our Warranties, we shall, at our option, repair or replace the individual faulty component of the Goods or refund the price of the faulty Goods in full. In order to be validated, a proof of purchase (invoice or receipt) must be supplied to us with any returned item where it is claimed that some or all of the Goods do not comply with Our Warranty.
- All Baridi products are covered by a minimum 1-year warranty (“the Warranty”) (unless otherwise specified). This warranty covers against manufacturing defects and excludes general wear and tear and any serviceable/ consumable items.

12. Aftersales Support

We are committed to supporting our products throughout their lifetime.

- If your product is outside of the warranty period, we offer an extensive range of spare parts along with expert technical advice to help keep your item in working order.
- Our technical team is on hand to assist 09:00 - 17:00 Mon-Fri with fault finding, repairs and general product queries.

  Telephone: 01284 757575

  Email: support@baridi.com

If required, products can be returned to us for inspection, servicing or a repair at a reasonable cost.

13. End Of Life

At the end of its service life, this product must be disposed of in an environmentally responsible manner. Components such as metal parts should be recycled wherever possible.

✕ **DO NOT** discard the appliance with general household or construction waste. Please follow all local environmental regulations to ensure safe and sustainable disposal.

14. Troubleshooting

Problem	Possible Cause	Solution
Vacuum will not operate.	No power.	Check plug is fully inserted into socket and that socket is functioning.
		Check the plug's fuse.
	Faulty power cord.	Unplug and check the power cord. If damaged in any way DO NOT use it until it is repaired by Baridi or authorised repair agent.
	Waste water tank is full.	Empty waste water tank.
	Waste water tank is not installed correctly.	Pull out the waste water tank and reinsert into position, making sure it is fully inserted.
Dust/vacuum debris is being emitted from the main unit vents.	No filter is installed.	Install the filter.
	Filter is not installed correctly.	Check that the filter(s) is installed correctly and that the 'UP' label on the filter is facing up.
	Filter is damaged.	If the filter(s) is damaged, this must be replaced before further use. Contact Baridi.
Reduced efficiency and/or motor/speed vibration.	There may be a blockage in the hose, in one of the tools or the vacuum inlet.	Check nozzle of tool, hose, vacuum inlet and all connections between attachments for a blockage.
	Filter(s) clogged with fine dust.	Remove the filters and clean them. See Cleaning and Maintenance section for details.
No output of water spray.	Water cleaning mode not selected.	Press the Water button on the appliance.
	Clean water tank empty.	Refill the clean water tank.
	The tool and other attachments are not properly connected.	Check all connections of tools and attachments are fully inserted into each other.
	The water mode trigger on the handle was not operated.	Press the water mode trigger on the handle.
Foam coming out of the end of the tool.	High-foaming detergent was used or incorrect ratio of detergent used.	Remove and empty the clean water tank. Rinse the tank clean to remove any remaining residue and refill with the correct detergent/ratio.



WEEE Regulations

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



Environment Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Jack Sealey (EU) Ltd t/a Baridi Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Jack Sealey Ltd t/a Baridi Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Tel: 01284 757575 ▪ **Email:** support@baridi.com ▪ **Web:** www.baridi.com

© Baridi.com