
Parts Information

Cordless BBQ Grill Cleaner

Model No. DG322

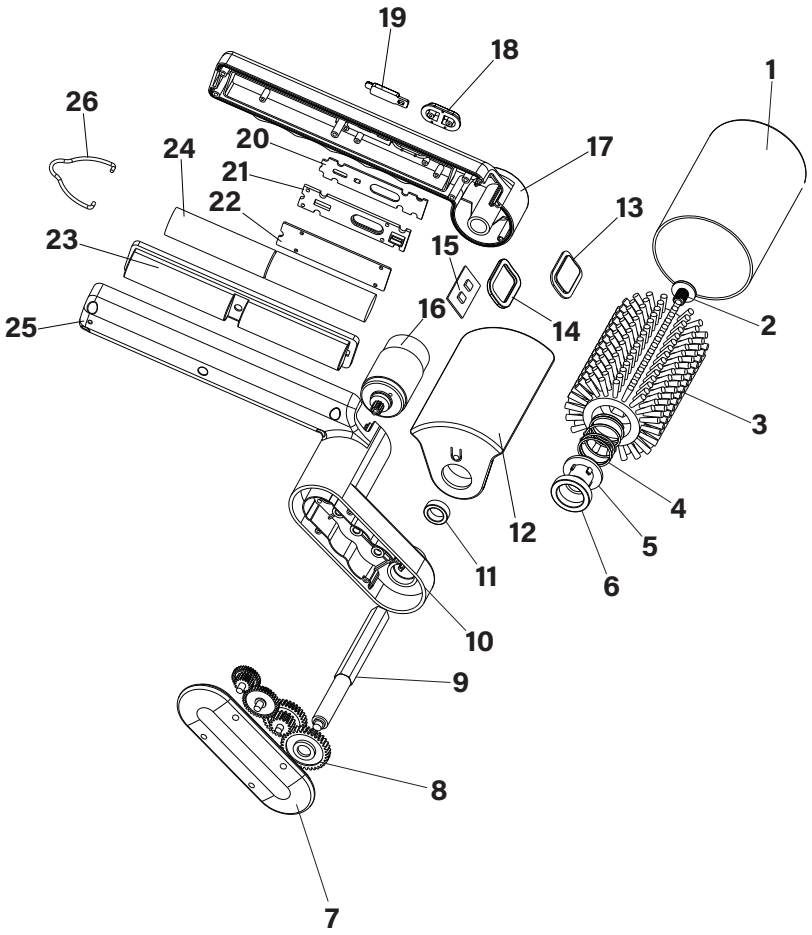

Item	Part No.	Description
1	DG11312	Protective Cover for Brush
2	DG11314	Fixing Screw for Brush Head
3	DG11313	Steel Brush Head
4	DG11315	Spring
5	DG11316	Bushing
6	DG11317	Rear Bearing
7	DG11318	Gearbox Cover
8	DG11319	Gear Assembly
9	DG11320	Central Shaft Connecting Rod
10	DG11321	Housing, Gearbox
11	DG11322	Bushing, Central Shaft
12	DG11323	Roller Brush Guard
13	DG11324	Lens, Translucent

Item	Part No.	Description
14	DG11325	Seal, Lens
15	DG11326	LED Board
16	DG11327	Motor
17	DG11328	Housing, Left
18	DG11329	Power Switch
19	DG11330	Silicone Plug for Charging Port
20	DG11331	Waterproof PCB
21	DG11332	Main Battery PCB
22	DG11333	PCB Control Board
23	DG11334	Top Cover, Battery Pack
24	DG11335	Battery Pack
25	DG11336	Housing, Right
26	DG11337	Storage Hook

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. See www.dellonda.co.uk for the latest information.
Important: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person.

Jack Sealey (EU) Ltd t/a Dellonda Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Jack Sealey Ltd t/a Dellonda Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Tel: 01284 757575 ▪ **Email:** support@dellonda.co.uk ▪ **Web:** www.dellonda.co.uk

© Jack Sealey Limited