


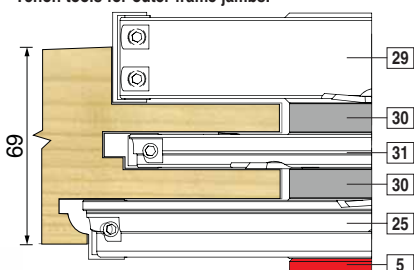

CONCEPT EXAMPLE





**HP Ovolo**

**HIGH PERFORMANCE OVOLO WINDOW**

**STEP 1 OF 8 STEPS**  
Tenon tools for outer frame jambs.







Tools and spacers clearly numbered.

Clear step by step instructions on sheets and wallcharts.

Finished machined jamb joint.

**HP 30 Splay Ovolo** **HIGH PERFORMANCE 20° SPLAY WINDOW**

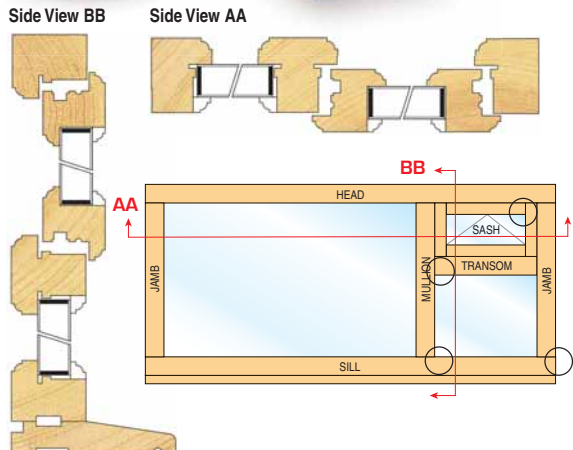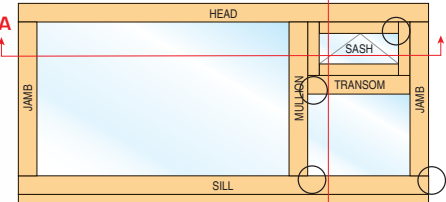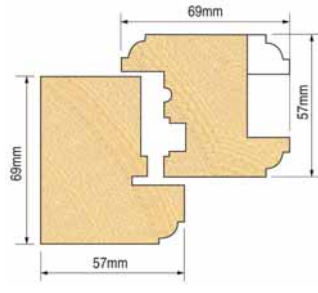

2

**HP TF Ovolo** **HIGH PERFORMANCE TRADITIONAL FLUSH OVOLO WINDOW**



3

**TF Ovolo** **TRADITIONAL FLUSH OVOLO WINDOW**



4

**SP Ovolo** **STORM PROOF OVOLO CASEMENT WINDOW**



5

**SB YS Ovolo** **SLIDING BOX SASH OVOLO WINDOW**



6

**EJMA 9 Splay** **EJMA 9° SPLAY WINDOW**



7

**FS 9 Splay** **FULL SPLAY 9° WINDOW**



8

**DT Ovolo** **DOOR & DOOR FRAME TOOLING**

Also available



Enter your postcode to find your nearest dealer with full details including stock profile, services and directions.



Enter your Postcode

Full dealer search page