


PANEL CARTS

MODEL: DT01

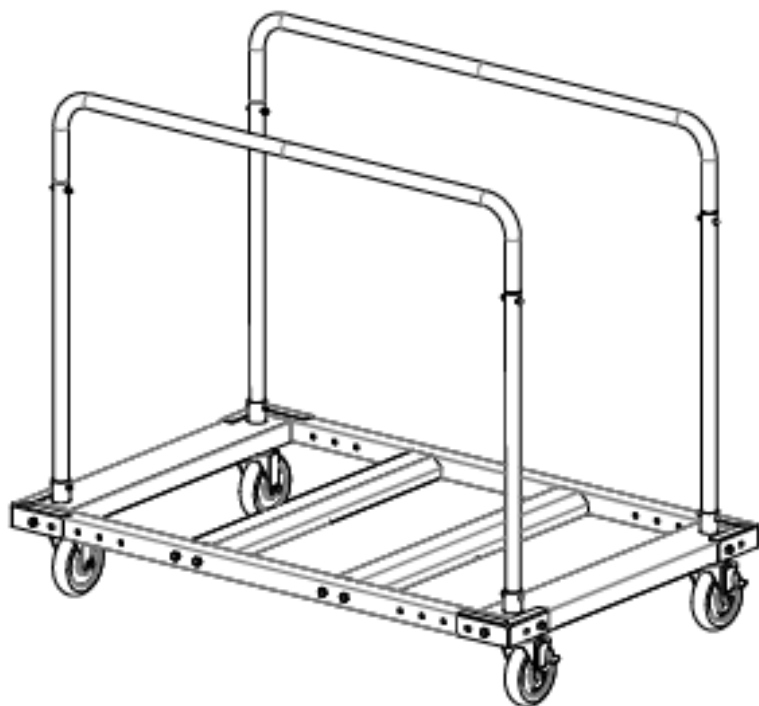

SAFETY INSTRUCTION AND PRECAUTIONS

⚠WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

Assembly precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep assembly area clean and well lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
6. Weight capacity and other product capabilities apply to properly and completely assembled product only.
7. Assemble on a flat, level, hard and smooth surface capable of safely supporting a fully loaded panel cart.





Use precautions

TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:

1. **DO NOT SIT, STAND OR CLIMB ON THIS ITEM.**
2. This product is not a toy. Do not allow children to play with or near this item.
3. Do not exceed weight capacities, evenly distributed from bottom up. Be aware of dynamic loading! Sudden load movement may briefly create excess load causing product failure.
4. Use only on a flat, level, hard and smooth surface capable of safely supporting a fully loaded panel cart.
5. Use as intended only. To prevent tipping, push/pull using supplied handle only. Do not lift while loaded.
6. Inspect before every use; do not use if parts are loose or damaged.


SAVE THESE INSTRUCTIONS

TOOL REQUIRED FOR INSTALLATION

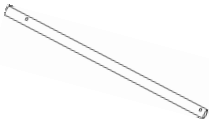
1-Square Tube *2	2-Wheel Mounting Board *2	3- Intermediate Transverse Girder *2	4-Angle Bead *4
			
5-Armrest *2	6-Column *4	7-Swivel Brake Caster *2	8- Swivel Caster *2
			
9-Polyester strap *1	10-Bolt M5*40 *8	11-Bolt M8*60 *12	12-Bolt M8*20 *20
			
13-Nut *8			
			

ASSEMBLY


1. Place the parts according to the picture shown, and strengthen them with M8x60 & M8x20 bolts.

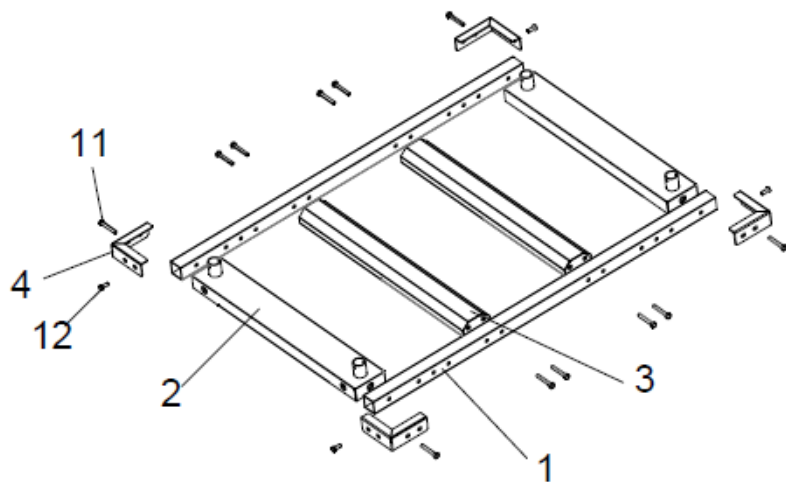


2. Install the wheels from the frame facing up and strengthen them with M8x20 bolts.

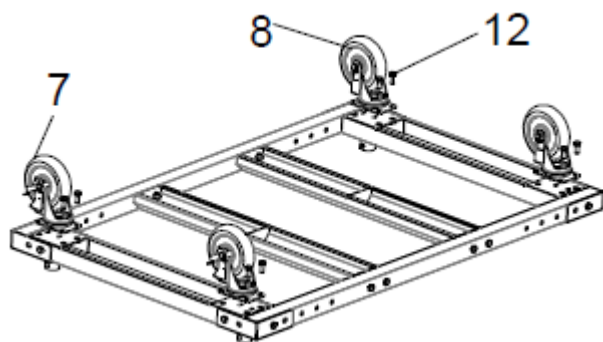


3. Tighten the Column with the M5 screws & nuts.

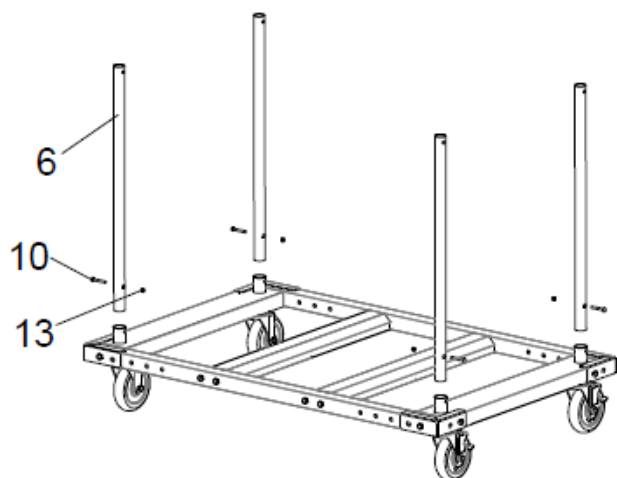

4. Place the Armrest on the Column and lock with M5 screws and nuts.

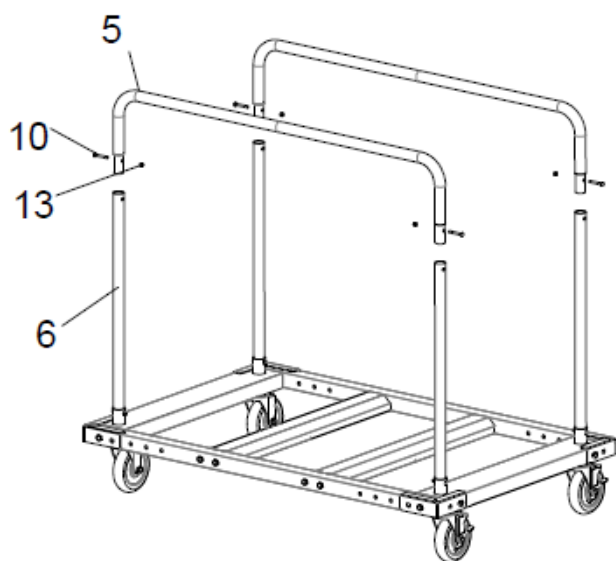

5.Assembly completed.

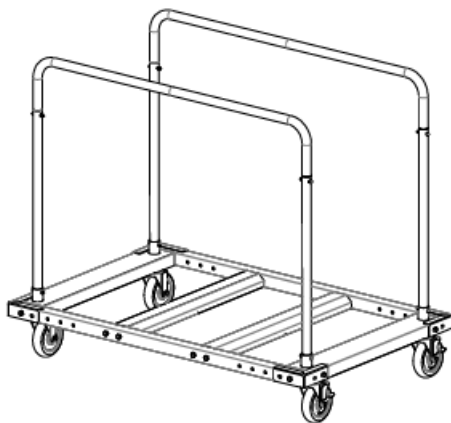

	Items	Description
1	Name	Panel carts
2	Model	DT01
3	Parameter	Load(Max):1800LBS , Wheel:5"
4	Package Size	1185*275*165mm