



Clamp Guide Jaw extension CG/03


Please
read carefully
before use

CLAMP GUIDE JAW EXTENSION REF. CG/03

Thank you for purchasing this Trend Clamp Guide Jaw Extension.


This Jaw Extension can be fitted to the Clamp Guide in two ways:

1. Semi-permanent
2. Permanent

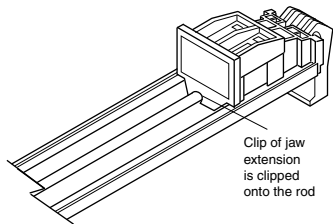


Semi-permanent Fitting


1. Push Jaw Extension onto the fixed jaw of the clamp guide. Ensure the clip of the jaw extension locks onto the rod of the clamp.

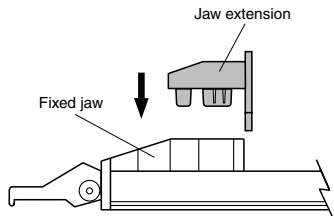

2. Mark the position of the hole 5mm down from top of fixed jaw and 14mm in from face of fixed jaw. Using a 3mm jobber drill, drill a 3mm diameter hole directly through the fixed jaw, jaw extension and out through the other side.

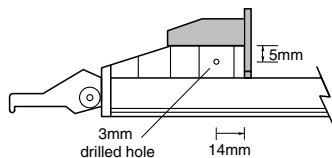


3. Fit the supplied 3mm pin into the hole and drive it home with a hammer.

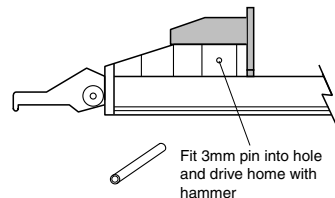



This Jaw Extension can be left on the clamp guide. However if for any reason it has to be removed, then follow these instructions:

1. To remove the pin use a punch and hammer to drive out the pin.
2. Using a lever beneath front of jaw extension remove the jaw extension from the clamp.

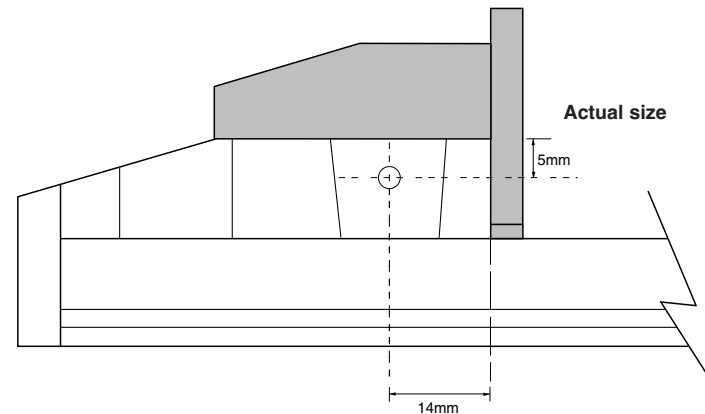

Permanent Fitting

1. Apply Cyanoacrylate glue (e.g. Loctite® superglue) to the ribs on the Jaw Extension.
2. Push Jaw Extension onto the fixed jaw. Ensure the clip of the jaw extension locks onto the rod of the clamp guide. Hold parts together until glue sets.

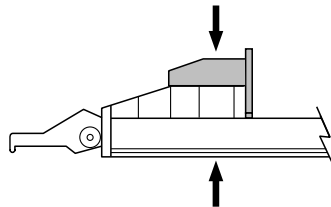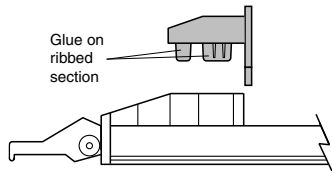

CYANOACRYLATE

WARNING:
⚠️ **READ INSTRUCTIONS CAREFULLY. HOLD AWAY FROM THE BODY DURING USE. USE IN A WELL VENTILATED AREA.**

Danger: Bonds skin and eyes in seconds. Keep out of reach of children.

Accidental Skin Bonding: Bonded skin should be peeled apart using soap, hot water and a blunt edge e.g. a teaspoon handle. Do not attempt to pull skin apart. In the case of eye contact, the eye should be bathed with copious quantities of water. If contamination is severe, medical assistance should be sought to avoid damage in separating bonded tissue.

© Trend Machinery & Cutting Tools Ltd. 2002 E&OE

Trend Machinery & Cutting Tools Ltd.
Odhams Trading Estate St Albans Road
Watford WD24 7TR
Technical Support: _____ 01923 224681
Fax: _____ 01923 236879
Email: _____ mailserver@trendm.co.uk
WWW: _____ www.trendmachinery.co.uk



RS 28982
Stockholding
& Supply



RECYCLABLE

