



INDUSTRIAL DEHUMIDIFIERS 30L

MODEL NO: **SDH30.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
Instruction
manual



Do not cover



Caution:
Risk of fire



Indoor use only

1. SAFETY

1.1. ELECTRICAL SAFETY


- ❑ **WARNING!** It is the user's responsibility to check the following:

Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey stockist.

If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.
 - × **DO NOT** pull or carry the appliance by the power cable.
 - × **DO NOT** pull the plug from the socket by the cable.
 - × **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.
- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.
 - If the cable or plug is damaged during use, switch the electricity supply and remove from use. Ensure that repairs are carried out by a qualified electrician.
 - Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.
 - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
 - b) Connect the BROWN live wire to the live terminal 'L'.
 - c) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight. Sealey recommend that repairs are carried out by a qualified electrician.

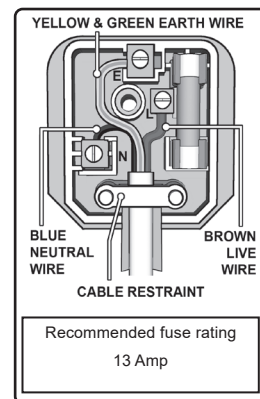

1.2. GENERAL SAFETY

- ✓ Check that the dehumidifier is in sound condition and good working order. Take immediate action to repair or replace damaged parts.
- ✓ Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
NOTE: SDH30.V2 is filled with R290.
- ✓ **Appliances shall be installed, operated and stored in a room with a working space of: refer to Specification section 3.**
- × **DO NOT** perforate any of the components in the refrigerant circuit. Refrigerant gas may be odourless.
- × **DO NOT** attempt any repairs / maintenance unless suitably qualified.
- × **DO NOT** stand or place any object less than 10cm from the front or rear of the unit.
- × **DO NOT** obstruct the air intakes or outlets of the dehumidifier.
- × **DO NOT** place any object into the outlets - the unit has a fan running at high speed, contact with this will cause injury.
- × **DO NOT** operate the dehumidifier when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- × **DO NOT** switch the dehumidifier off by disconnecting it from the mains. **ALWAYS** switch to the "OFF" position first.
- × **DO NOT** remove the float lever from the water collection tank.
- × **DO NOT** connect or disconnect the plug from the mains with wet hands.
- ✓ Always discard the water from the collection tank, **DO NOT** use it for any other purpose.
- ✓ Place the dehumidifier on a level and stable surface.
- × **DO NOT** use the dehumidifier at ambient temperatures below 5°C.
- × **DO NOT** use the dehumidifier outside.
- ✓ When using continuous draining, make sure that the drain hose is positioned correctly.
- ✓ Ensure that heating appliances are not exposed to the flow of air from the dehumidifier.
- ✓ Before attempting to move the dehumidifier, empty the contents of the collection tank.
- ✓ Switch off and disconnect it from the mains before attempting any cleaning or other maintenance work.
- ✓ Ensure that the dehumidifier is correctly turned off when not in use, and stored in a safe, dry area, out of reach of children. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

2. INTRODUCTION

Powerful dehumidification capacity, extracts up to 30 litres of water per day. Removes excess moisture from air, preventing build-up of mildew and mould. Features auto-defrost function, which activates if the room temperature falls too low. Washable activated carbon air filter. Refrigerant is environmentally friendly R290. May be connected to a drain hose for continuous operation. Mounted on castors for manoeuvrability.

3. SPECIFICATION

Model no.	SDH30.V2
Supply	230V ~ 50Hz
Power	Max/Rated - 710W/570W
Dehumidifying capacity	30L/Day 30°C RH80%
Freezing pressure (max)	2.5Mpa
Steaming pressure (max)	1.0MPa
Refrigerant	R290/0.145kg
Global warming potential (rating)	3
Max. airflow	300m ³ /hr
Working temperature	5-32°C
Working space	78-104m ³



4. OPERATION


Efficiency of the dehumidifier is influenced by the air outside the room. For operating efficiency, try to avoid opening and closing the windows and doors. For best performance, operate the dehumidifier within the usable operating temperature.

4.1. OPERATION

- 4.1.1. Plug the unit in to the mains socket, a beep will be heard when inserting the plug.
- 4.1.2. Press the "ON/OFF" switch and the operation light will illuminate, the humidity display will light to display the previous set humidity. The initial setting for humidity is 60%, after 3 seconds the display will show the current humidity.
- 4.1.3. Press the humidity up or down buttons to adjust to the desired humidity required. If the required humidity is 3% below the current humidity the unit will start automatically, if the set humidity is 3% more than the current humidity the dehumidifier will automatically stop.
- 4.1.4. The unit has a memory function. Use the humidity up and down buttons to adjust to the desired setting and then press the memory button to record the setting, each time the machine is switched on it will automatically run at the required setting.
- 4.1.5. When setting the humidity to less than 30%, the unit will run continuously and the display will read "CO".
- 4.1.6. To shut the dehumidifier down press the "ON/OFF" switch.

Note: If the humidity setting is greater than the current humidity the unit will not run.

- **WARNING!** The fan motor and compressor must run for at least 3 minutes while dehumidifying.
- * **DO NOT** start the dehumidifier immediately after shutting down, allow 3 minutes before restarting.

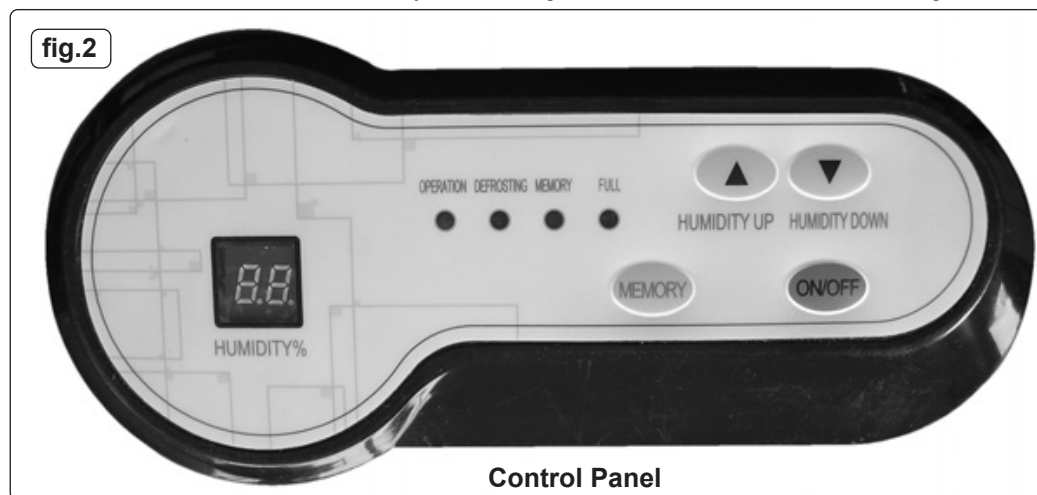

4.2. DEFROSTING



- 4.2.1. The evaporator within the dehumidifier frosts during the dehumidifying operation at a room temperature of approximately 15°C or less. The defrosting device works automatically at an interval of approximately every 30 minutes for a duration of approximately 5 minutes. The dehumidifying function will stop during the defrosting operation. Do not disconnect the plug or turn off the unit during the defrosting operation.

Note: This dehumidifier does not have a cooling function, it produces heat during the operation and room temperature will rise by 1°C to 4°C. The temperature gets higher while it is operated in a closet, or similar. Furthermore, room temperature will rise because doors and windows are closed and heat is produced from other appliances in the room and from sun radiation.

4.3. EMPTYING THE WATER COLLECTION TANK

- 4.3.1. During the dehumidifying operation, water is collected in the water collection tank. When the tank is full of water, the dehumidifier stops operating automatically and the warning buzzer beeps twice. The unit will not restart until the water collection tank has been emptied.
- 4.3.2. Open the door and remove water collection tank from the dehumidifier by pulling it gently outwards by holding the sides of the tank (fig.3).

- 4.3.3. Hold the tank by the handle and carry it carefully to an emptying point.
- 4.3.4. Remove the plug at the bottom of the tank and slowly empty the water out of the tank.
- 4.3.5. Replace the drain plug and refit the tank in the dehumidifier, making sure it is properly back in place as the unit will not restart if it is not fitted correctly.
- 4.4. CONTINUOUS DRAINING**
- 4.4.1. If there is a place suitable for draining, continuous draining can be carried out. The continuous operation enables the dehumidifying operation to continue uninterrupted.
- 4.4.2. Turn off the dehumidifier, disconnect the power plug and remove the water collection tank.
- 4.4.3. Remove the plug from the bottom right hand side of the tank (fig.3) and attach a suitable length hose.
- 4.4.4. It should have an inner diameter of 5/8" and secure with a hose clip.
- 4.4.5. Thread the hose through the hole in the bottom right hand side of the base of the unit, insert the tank ensuring that the hose is not kinked.
- 4.4.6. Continue to use the dehumidifier as normal.

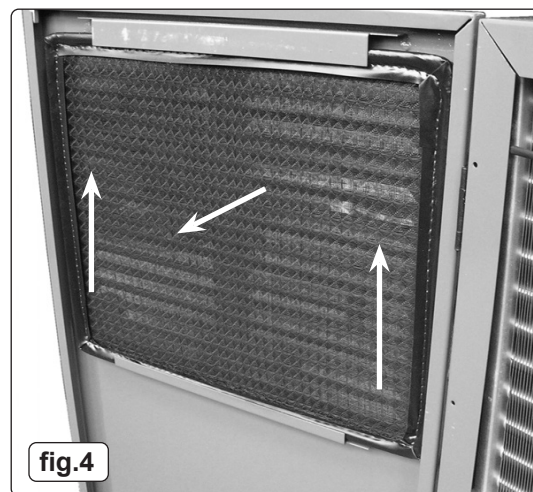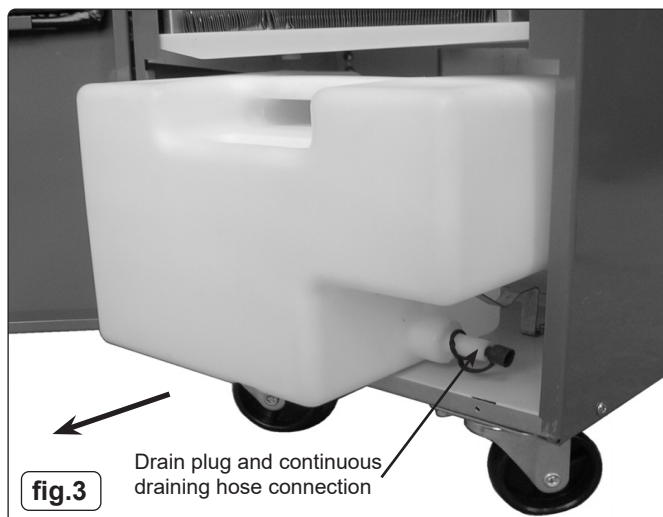

5. MAINTENANCE

- 5.1. CLEANING THE AIR FILTER**
- 5.1.1. The dehumidifying capacity is lowered when the air cleaning filter becomes clogged.
- 5.1.2. Open the front door of the unit.
- 5.1.3. Lift up the filter element from the bottom as shown in fig.4 and lift out of the holder.
- 5.1.4. To dislodge the dust from the filter, use a vacuum cleaner or tap it lightly.
- 5.1.5. If the filter is very dirty, wash it carefully in water with a neutral detergent, then rinse well with clean water and leave until dry.
- 5.1.6. To refit the air filter locate the top of the element into the locating bracket at the top of the door and then locate the lower section into the lower bracket.
- 5.1.7. Close the door of the dehumidifier.
- 5.2. STORAGE**
- 5.2.1. Unplug the unit, bundle the power cord, and hang the bundled cord at the back of the unit.
- 5.2.2. Remove the water collection tank and empty the water out of it. Remove the tank cover and wash the inside of the tank with clean water. The tank may be scratched if it is scrubbed strongly with a brush. Do not remove the float lever from the tank. Wipe off the water on the outside of the tank with a cloth. Refit the tank cover onto the tank and replace the tank in position.
- 5.2.3. Clean the air filter (see 5.1).
- 5.2.4. When the unit is to be stored for a long time, wipe the dehumidifier over with a dry soft cloth. To remove dirt, wipe over with a very slightly dampened cloth (never use a wet cloth for cleaning the controls). To avoid deformation or cracking, do not use benzine, thinner or liquid cleaners.
- 5.2.5. When storing, place in a safe, dry, childproof location. Stand the unit upright and avoid exposure to direct sunlight.

6. TROUBLESHOOTING

Problem	Cause	Remedy	Error codes	Problem
Will not run	Switch is not "ON"	Switch "ON"	E1	Humidity sensor faulty
	Unit is not plugged in	Insert plug	E2	Refrigerant sensor faulty
	Fuse blown	Replace fuse		
Dehumidifier inefficient	Water tank full	Empty water tank		
	Filter blocked	Clean filter		
	Inlet or outlet vents restricted	Remove restriction		
Water leaking from unit	Doors or windows open	Close openings		
	Refrigerant leak	Contact Sealey stockist		
Water leaking from unit	Dehumidifier is not level	Adjust position of dehumidifier		
	Reservoir float not shutting down unit	Contact Sealey stockist		



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk