SEALEY

INSTRUCTIONS FOR

RECHARGEABLE 360° 8 SMD + 1W LED MIDI INSPECTION LAMP RED 40TH ANNIVERSARY LITHIUM-ION

MODEL NO: LED3605RA

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

1. SAFETY

- ✓ Inspect the cable and connector for wear and damage to ensure items are safe before connecting to the power supply. If worn or damaged DO NOT use.
- ✓ Ensure the lamp is fully charged before initial use.
- **DO NOT** charge in damp conditions.
- **DO NOT** turn the lamp on when it is being charged.
- DO NOT shine directly into your, another person's or an animal's eyes.
- DO NOT allow children to use the lamp.
- **DO NOT** handle or move the lamp whilst it is being charged.
- DO NOT use the lamp if you suspect that the battery or the lamp casing is damaged.
- DO NOT leave battery in a discharged state, recharge battery immediately. Before storage, fully recharge the battery, subsequently recharge the battery at least once every six months of non-use.
- DO NOT attempt to open, disassemble, modify or service the battery pack.
- **DO NOT** crush, puncture, short external contacts or dispose of in fire or water.
- **DO NOT** expose to temperatures above 60°C (140°).
- ✓ Replace only with the battery pack designated for this product.
- ✓ Recycle or dispose of used battery as stipulated by local regulation.
- ✓ If the electrolyte in the cells gets on your skin, thoroughly wash with soap and water. If it gets in your eyes, rinse thoroughly with cool water and seek immediate medical attention.

2. INTRODUCTIONS

Unique and innovative 360° swivel and tilt function enables light source to be positioned in any direction. Exclusive patented design owned and registered to Sealey. Each lamp houses 8 super bright SMD LEDs providing up to 300 lumen output with 120° spread of light, illuminating the whole work area. Includes an additional 1W LED directional torch. Features a fold out swivel hook on the back of the light and a super strong magnet, which allows hands free operation. High quality 2.2Ah Lithium-ion battery for longer life, no memory effect and a much slower discharge than traditional Ni-MH batteries. Micro USB charging port. Supplied in limited edition 40th anniversary box..

3. SPECIFICATION


Model No	LED3605RA
Battery	3.7V 2.2Ah Li-ion
LED Quantity	8 SMD + 1 LED
Lumen Output Side(High/Low)Top	(300/150)/100lm
Operating Time Side(High/Low)/Top	(3.5/8)/10hr
Charging Time	3.5hr
IP Rating	IP54
Minimum Length	235mm
Maximum Length	255mm


The battery fitted to this lamp is considered to be a consumable item and its ability to accept a charge will reduce over time. We will provide warranty against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery regardless of whether it is less than one year old.

Note: The lithium battery does not suffer from memory effect and once fully charged may be stored for up to six months without another charge.

4. OPERATION

- 4.1. Connect the USB lead to the socket on the rear of the lamp and into a charging socket. Turn on power supply, the charging LED on the lamp will light RED to show that charging has commenced.
- 4.2. When the battery has fully charged the LED will turn GREEN.
- 4.3. Direct the lens away from your eyes before switching on.
- 4.4. Toggle the lamp between the end light and side light using the ON/OFF switch.
- 4.5. The lamp may be suspended by the hook or attached to any ferrous surface by using the magnet.
- 4.6. When the light is hanging from the hook it can be rotated through 360° for more precise positioning.
- 4.7. Separate the top and bottom sections by pulling apart. When attached to a ferrous surface, using the base magnet, the lamp can rotate to shine in any direction.

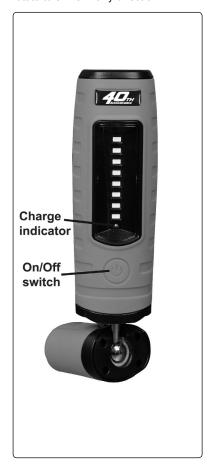

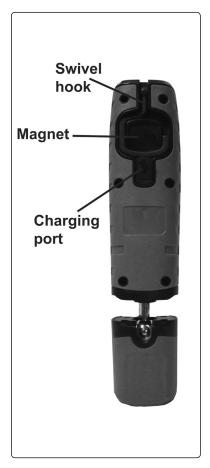



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



Li-ion

BATTERY REMOVAL

Remove the 6 screws to remove the rear cover. Remove the 4 screws to undo the battery pack cover and remove the battery wires. Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

1 01284 757500 01284 703534 sales@sealey.co.uk www.sealey.co.uk