



INSTRUCTIONS FOR:

QUICK LIFT Dolly/MOVING DOLLY 135kg

MODEL No: **MPSD1**

Thank you for purchasing a Sealey product. Manufactured to a high dollyard, this product will, if used according to these instructions and maintained properly, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
Instruction Manual

1. SAFETY

- X **DO NOT** sit on the motorcycle on the dolly.
- X **DO NOT** start the motorcycle on the dolly.
- X **DO NOT** lift the dolly by the table, it may become detached.
- X **DO NOT** mount the dolly on tarmac, as the surface may be unstable.
- X **DO NOT** use the dolly for a purpose it is not designed to perform.
- X **DO NOT** operate the dolly if it is damaged.
- X **DO NOT** use the dolly when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- X **DO NOT** allow untrained persons to operate the dolly.
- X **DO NOT** make any modifications to the dolly.
- X **DO NOT** operate the dolly if parts are missing or damaged.
- X **DO NOT** exceed the maximum capacity.
- X **DO NOT** work under the raised motorcycle.
- ✓ Maintain the dolly in a good clean condition for the best and safest performance.
- ✓ Locate the dolly and motorcycle in a suitable area. Keep area clean, tidy and free from unrelated materials and ensure that there is adequate lighting. Also ensure that the floor/ground is level and strong enough (preferably concrete) to take the weight of the dolly and the motorcycle.
- ✓ Maintain correct balance and footing whilst positioning the motorcycle on the dolly, **DO NOT** over reach.
- ✓ Ensure that the floor is not slippery, wear non-slip footwear. Also essential for safe operation of the foot pedal.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ Before removing a motorcycle from the dolly, ensure that there are no obstructions or persons around the motorcycle.
- ✓ Always support motorcycle to prevent falling.
- ✓ If using as a front dolly, always use in conjunction with another suitable rear dolly to ensure full stability.


2. INTRODUCTION

Ideal for use with off-road/trials bikes. Easily lifts the bike when performing maintenance/services or cleaning. Simple, one foot, step-and-lift mechanism means the bike can be instantly raised in one motion. Fitted with 4 x Ø45mm castors for manoeuvrability when bike is secured. Two tie-down points and a large lifting platform for added stability.

3. SPECIFICATION

Model No: **MPSD1**
 Capacity: 135kg
 Minimum Height; 240mm
 Maximum Height:..... 350mm

4. ASSEMBLY

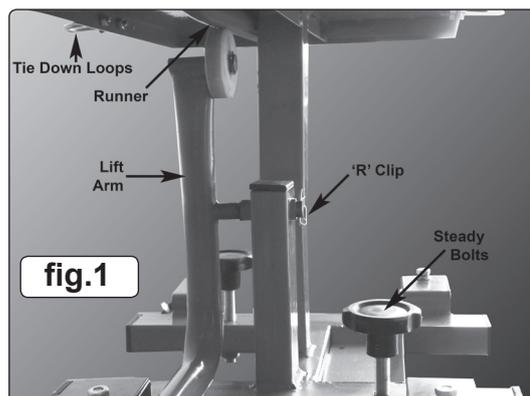

- 4.1. Assemble as in fig.1, ensuring that the castor assemblies are fixed securely.
- 4.2. Pass the axle of the lift arm through the upright and secure with the 'R' clip.

5. OPERATION

- 5.1. Secure the motorcycle to the tie down loops provided using ratchet straps (not provided).
- 5.2. Apply the castor brakes and screw the two steady bolts down to immobilise the dolly.
- 5.3. When secure, depress the end of the lifting arm to raise the platform. When the arm is over centre, the platform will fall back slightly and self-lock.
- 5.4. To move a motorcycle on the dolly, retract the steady bolts and release the castor brakes. Move slowly and steady the motorcycle whilst moving.
- 5.5. To lower, lift the end of the lifting arm. **WARNING:** when the lifting arm passes over centre the load will drop suddenly.



Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500.

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable dispose of it according to local regulations.

NOTE: It is our policy to improve products continually and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500

01284 703534



www.sealey.co.uk

sales@sealey.co.uk