



# 110V MAGNETIC DRILLING MACHINE 35MM

MODEL NO: **MAG110V**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear eye protection



Wear protective gloves



Wear protective footwear



Wear ear protection




Wear a mask

## 1. SAFETY

### 1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
- ✓ Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey stockist. If the drilling machine is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested. Electrical safety information, it is important that the following information is read and understood.
- ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply. regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- ✓ Ensure that the voltage rating on the appliance suits the power supply to be used.
- ✗ **DO NOT** pull or carry the appliance by the power cable.
- ✗ **DO NOT** pull the plug from the socket by the cable.
- ✗ **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.
- ✓ This product should be fitted with a EN 60309 (110volt 16amp) plug.
- ✓ If the cable or plug is damaged during use, switch the electricity supply and remove from use.
- ✓ Replace a damaged plug with a EN 60309 (110volt amp) plug If in doubt contact a qualified electrician.
  - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
  - b) Connect the BROWN live wire to the live terminal 'L'.
  - c) Connect the BLUE neutral wire to the neutral terminal 'N'.
- ✓ Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight. Sealey recommend that repairs are carried out by a qualified electrician.

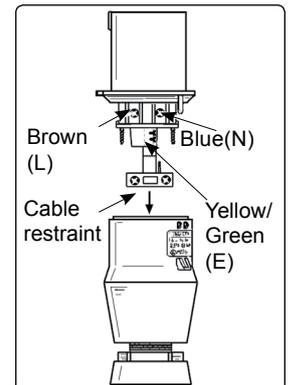

### 1.2. GENERAL SAFETY

- ✓ Enlist help to place the drill in its working position.
- ✗ **DO NOT** allow non-essential persons, children or animals into the working area. Establish a cordon below.
- ✗ **DO NOT** allow the use of this machine except by those who have received suitable training and have read these instructions.
- ✓ If operating above ground level, use suitable staging to provide a safe working platform.
- ✗ **DO NOT** work from ladders or steps.
- ✓ Use non-original parts; use of such parts may be dangerous will affect the warranty.
- WARNING: Always wear approved eye or face protection when operating this drill. Use a face or dust mask if dust is generated.**
- ✗ **DO NOT** use near flammable gas or liquid, use only in a well lit and ventilated areas.
- ✓ Remove ill fitting clothing, remove ties, watches, rings, and other loose jewellery, and contain long hair.
- ✗ **DO NOT** operate whilst under the influence of drugs, alcohol or intoxicating medication, or if tired.

### 1.3. OPERATIONAL SAFETY

- ✓ **ALWAYS** attach the drill to the work by means of the nylon security strap and buckle, in case of an electrical supply failure releasing the electro-magnet.
- ✓ Ensure that the machine is electrically isolated before installing in its working position and switched off before connecting to supply.
- ✓ Ensure drill is switched off and isolated from mains supply before changing bit, or moving its position.
- ✓ Check that the drill and its electric lead is not damaged before use. **DO NOT** use if any damage is evident.
- ✓ Use non-original parts; use of such parts may be dangerous will affect the warranty.
- ✓ Ensure magnetic switch is in the off position before connecting to mains supply.
- ✓ Only use water as coolant NOT antifreeze.
- ✓ Keep drill dry.
- ✓ If it blows trip follow these steps: turn off power switch, wait for a few minutes, disconnect from mains.
- ✗ **DO NOT** force the drill by pulling down on the handle with excessive force.
- ✗ **DO NOT** use on non magnetic materials.
- ✗ **DO NOT** use on the same steel work as electric welders are being used.

## 2. INTRODUCTION

Manufactured using high quality components for performance and reliability. Lightweight and compact made from heavy duty die cast magnesium alloy. Fitted with a powerful magnet to ensure unit stays adhered at any angle. Includes safety fixing strap, 10mm twist drill chuck and integrated coolant system to extend the life of cutters and increase the quality of the cut. Designed for use in fabrication, construction and other applications when drilling ferrous metal.

## 3. SPECIFICATION



Model No.....	MAG110V
Cable Length.....	2.5m
Magnet.....	140000N
Maximum Annular Cutter Capacity.....	35mm
Maximum Cutter Depth.....	50mm
Motor Power.....	1500W
Weight.....	10kg
No Load Speed.....	800rpm
Supply.....	110V ~ 50Hz
Consumables (not included)	
Neat Cutting Oil.....	NCO/5L
Soluble Cutting Oil.....	SCO/5L
Pilot Pin.....	MAGC.P
HSS Magnetic Drill Cutters	
12mm.....	MAGC12
13mm.....	MAGC13
14mm.....	MAGC14
16mm.....	MAGC16
18mm.....	MAGC18
20mm.....	MAGC20
22mm.....	MAGC22
24mm.....	MAGC24
25mm.....	MAGC25

## 4. ASSEMBLY

- 4.1. **FIT COOLANT BOTTLE** Refer to fig.1
- 4.2. Slacken the 2 thumbscrews and slide bottle cage over the thumbscrews. Tighten thumbscrews.
  - 4.2.1. Connect coolant pipe to the valve on the drill head, fig.1. Pipe can be released by pushing in the blue valve.)
  - 4.2.2. Make sure the coolant tap is closed, fill the bottle with appropriate lubricant.
- 4.3. **FIT CUTTING BIT**
  - 4.3.1. Wind drill head up to maximum height.
  - 4.3.2. Wind the two grub screws, fig.2.6, in to secure the cutting bit.

## 5. OPERATION

- 5.1. Mark the position of the hole to be drilled on the workpiece.
- 5.2. **POSITION THE DRILL**
  - 5.2.1. Connect to the mains supply. Offer drill to workpiece and line up with the previously marked hole.
    - ❑ **WARNING!** Make sure there is nothing between the magnet and the workpiece **BEFORE** turning the magnet on.
    - NOTE:** When using drill vertically use the level, fig.2.7.
  - 5.2.2. Ensure the drill head is wound back away from the workpiece before turning the magnet on.
- 5.3. **ATTACH DRILL TO WORKPIECE**
  - 5.3.1. Turn the magnet on, fig.2.2. Wind the drill head down to the workpiece and align the cutting head pin.
- 5.4. **FIT THE SAFETY STRAP**
  - 5.4.1. Place the safety strap through the handle of the drill and around the steelwork. Adjust the length of the strap so that if the drill should fall the drill should not be allowed to swing too far and be damaged.
- 5.5. **FILL COOLANT BOTTLE**
  - 5.5.1. Always use the correct cutting oil, refer to Section 3 and refill once it empties. Never use without coolant.
- 5.6. **CUTTING THE HOLE**
  - 5.6.1. Turn on the cooling tank tap, fig.1.
  - 5.6.2. Back the cutting head away from the workpiece, turn the drill motor on, fig.2.1. Check the drill sounds and is operating normally.
  - 5.6.3. Turn the handle, fig.2.3, anticlockwise to move the cutting bit towards the workpiece.
  - 5.6.4. Start feeding slowly, with not too much force, to prevent overloading the drill.
    - CAUTION!** Prepare for bursting through the workpiece.
  - 5.6.5. If the drill suddenly stops, you must turn off the motor switch immediately.

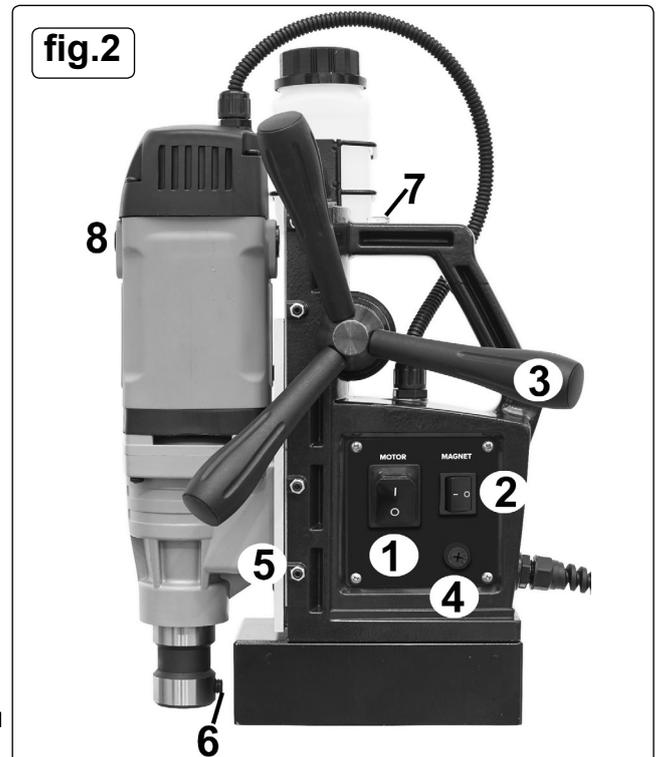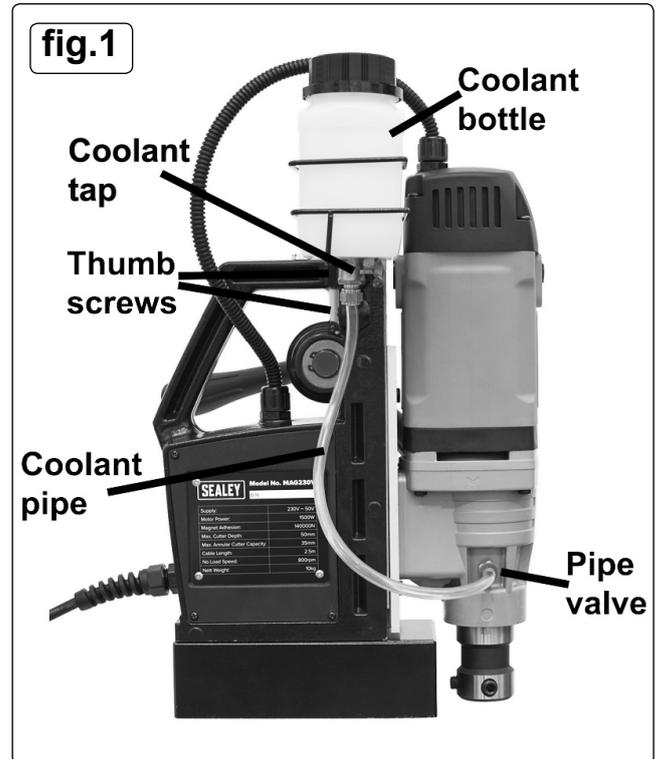

- |                                 |                     |
|---------------------------------|---------------------|
| 1 Motor switch                  | 7 Level             |
| 2 Magnet switch                 | 8 Fuse cover (2 of) |
| 3 Handle                        |                     |
| 4 Fuse cover                    |                     |
| 5 Slide adjusters (5 each side) |                     |
| 6 Cutting bit grub screw (2 of) |                     |

- 5.6.6. Once the hole has been cut, back the cutting head back out of the hole and switch off the motor.
- 5.6.7. Turn off the coolant tap.
- 5.6.8. Remove the debris from the cutting head.
- 5.6.9. Clean away swarf.
- 5.6.10. Undo the safety strap.
- 5.6.11. Support the weight of the drill and turn off the magnet. Remove the cutting bit and replace drill in its case.
- 5.7. ADJUSTING THE SLIDES Refer to fig.2.5**
  - WARNING!** Disconnect from mains supply before performing any adjustments.
  - 5.7.1. To adjust the friction on the drill slide mechanism, remove the drill cutter.
  - 5.7.2. Loosen the 5 slide locknuts and adjust the 2.5mm grub screws until the required amount of friction on the slides has been achieved.
  - 5.7.3. Tighten the locknuts and test before using the drill.
- 5.8. REPLACING THE FUSE Refer to fig.2.4**
  - 5.8.1. Undo the fuse cover and replace fuse with one of same rating.

## 6. MAINTENANCE

- WARNING!** Disconnect from mains supply before performing any maintenance.
- 6.1. Remove the cut 'plug' from the cutter, each time it is used.
- 6.2. Keep the tool clean.
- 6.3. Store in a dry, childproof location in its case.



### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk