

SEALEY

150BAR PROFESSIONAL PRESSURE WASHER WITH TSS & ADJUSTABLE NOZZLE SET 230V

MODEL NO: **PW5000.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual



Wear protective
gloves



Wear face
protection



Wear ear
protection



Wear protective
clothing



DO NOT drink
water from
pressure
washer



DO NOT direct jet against
yourself, other persons,
animals, electrical equipment
or the machine itself

1. SAFETY

CAUTION - READ THE INSTRUCTIONS BEFORE USING THE MACHINE.

1.1. ELECTRICAL SAFETY

- ☐ **WARNING!** It is the user's responsibility to check the following:
 - ✓ Check all electrical equipment and appliances to ensure that they are safe before using.
 - ✓ Inspect power supply leads, plugs and all electrical connections for wear and damage.
 - ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
 - ✗ **DO NOT** use worn or damaged cables, plugs or connectors.
 - ✓ Ensure that any faulty item is repaired or replaced immediately by a Sealey qualified technician.
 - ✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
 - ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
- ✗ **DO NOT** pull or carry the appliance by the power cable.
- ✗ **DO NOT** pull the plug from the socket by the cable.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use. Cable must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ✓ The Electric supply connection shall be made by a qualified electrician and comply with IEC 60364-1.
- ✓ It is recommended that the electric supply to this machine should include either a residual current device that will interrupt the supply if the leakage current to earth exceeds 30mA for 30ms or a device that will prove the earth circuit.
- ☐ **WARNING!** Inadequate extensions cords can be dangerous. If an extension cord is used, it shall be suitable for outdoor use, and the connection has to be kept dry and off the ground. It is recommended that this is accomplished by means of a suitably rated cord reel which keeps the socket at least 60mm above the ground.
- ✓ **Ensure that repairs are carried out by a qualified electrician.**

1.2. PRESSURE WASHER SAFETY

- ✓ Read the instructions fully before use. The manual forms an integral part of the appliance and should be kept for future reference. Please read it carefully before installing/using the unit. If the appliance is sold, the seller must pass on this manual to the new owner along with the appliance.
- ☐ **WARNING!** Wear appropriate personal protective equipment for the task in hand. Risk assess the task and select: safety boots, safety gloves, safety helmets with visors, protective clothing, hearing protection as necessary.
- ☐ **WARNING! Machine/high pressure cleaners, shall not be used by children or untrained personnel.**
- ✗ **DO NOT** allow children to use the appliance; supervise them to ensure that they do not play with it.
- ☐ **WARNING! RISK OF EXPLOSION. DO NOT** use the appliance to spray flammable liquids.
- DO NOT** use the appliance with flammable or toxic liquids, or any products which are not compatible with its correct operation. Use of the appliance in a potentially inflammable or explosive atmosphere is forbidden.
- ☐ **WARNING! HIGH PRESSURE JETS** can be dangerous if subject to misuse. The jet must not be directed at persons, live electrical equipment or at the unit itself.
- ☐ **WARNING! HIGH PRESSURE HOSES, fittings and couplings** are important for the safety of the machine. Use only hoses, fittings and couplings recommended by the manufacturer.
- ✗ **DO NOT** point the water jet at people or animals.
- ✗ **DO NOT** splash or wash the machine down.
- ☐ **WARNING! ENSURE** that all people or animals keep a minimum distance of 15m.
- ✗ **DO NOT** use the appliance with people within its range of action unless they wear protective clothing.
- ✗ **DO NOT** direct the jet at yourself or others in order to clean clothing or footwear.
- ✗ **DO NOT** use the appliance outdoors when it is raining.
- ✗ **DO NOT** touch the plug and/or socket with wet hands.
- ✗ **DO NOT** use the appliance if the electric cable is damaged. If the electric cable is damaged, it must be replaced by the manufacturer, one of its authorised Service Centres or similarly qualified persons in order to avoid a safety hazard.
- ✗ **DO NOT** use the appliance if important parts such as the safety devices, high pressure hoses, trigger or gun are damaged.
- ✗ **DO NOT** jam the trigger in the operating position.
- ✓ Check that the data plate is affixed to the appliance. If not, inform your supplying stockist. Appliances without plates must NOT be

used as they are unidentifiable and potentially dangerous.

- ✗ **DO NOT** tamper with or adjust the setting of the safety valve or the safety devices.
 - ✗ **DO NOT** alter the original diameter of the spray head nozzle.
 - ✗ **DO NOT** move the appliance by pulling on the ELECTRIC CABLE. Use the handle and transport by use of the wheels.
 - ✗ **DO NOT** allow vehicles to drive over the high pressure hose.
 - ✗ **DO NOT** move the appliance by pulling on the high pressure hose.
 - ❑ **WARNING!** Use the washer on a flat, level surface in an upright position. NEVER lay the washer down during use.
 - ❑ **WARNING!** When directed towards tyres, tyre valves or other pressurised components, the high pressure jet is potentially dangerous. **DO NOT** use the rotating nozzle kit, and always keep the jet at a distance of at least 30 cm during cleaning.
 - ❑ **WARNING!** The use of non-original accessories and any other spare parts not specifically intended for the model in question is prohibited. All modifications to the appliance are prohibited.
 - ❑ **WARNING!** The electric supply connection must be made by a qualified electrician and comply with IEC 60364-1. Either a residual current device that will cut off the power supply if the leakage current to earth exceeds 30 mA for 30 ms or a ground fault interrupt device must be installed.
 - ❑ **WARNING!** Use of a residual current breaker (RCB) will provide additional protection for the operator (30 mA).
 - ❑ **WARNING!** Always turn off the switch when leaving the appliance unattended. The machine must be attended during operation.
 - ❑ **WARNING!** High pressure may cause parts to rebound: wear all the protective clothing (PPE) and equipment needed to ensure the operator's safety.
 - ❑ **WARNING!** Before performing Maintenance, making adjustments to the appliance, converting to another function **ALWAYS** disconnect from mains supply.
 - ✓ Supply hose must be reinforced and have an internal diameter of 1/2" (13mm).
 - ✓ Water supply must be equal to cleaner capacity. Water temperature must not exceed 60°C. Water supply pressure must be to Specification (see Specification section below.)
 - ✓ Only use where air can circulate freely, **DO NOT** block ventilation grilles.
 - ❑ **WARNING!** Before pressing the trigger, GRIP the gun firmly to counteract the recoil.
 - ❑ **WARNING!** COMPLY WITH the local water supply authority regulations. The appliance may only be connected to the mains drinking water supply if the supply hose is fitted with a backflow preventer valve.
 - ❑ **WARNING!** Water that has passed through a backflow preventer is considered to be non-potable.
 - ❑ **WARNING!** Maintenance and/or repair of electrical components MUST be carried out by suitably qualified staff.
 - ❑ **WARNING!** DISCHARGE residual pressure before disconnecting the hose from the appliance.
 - ❑ **WARNING!** CHECK before each use and at regular intervals that the screws are fully tightened and that there are no broken or worn parts.
 - ❑ **WARNING!** This appliance is designed for use with the detergent supplied or recommended by the manufacturer. The use of other detergents or chemicals may adversely affect the appliance's safety.
 - ❑ **WARNING!** To ensure the appliance's safety, only use original spare parts from the manufacturer or approved by the manufacturer.
 - ❑ **WARNING!** Switch the appliance off and disconnect it from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.
- Commercial use:** This machine is not intended for use by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- Not for commercial use:** This machine can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and understand the hazards involved.


2. INTRODUCTION

Professional unit, designed and manufactured in Italy. Ideal for a wide variety of applications including commercial and agricultural use. Fitted with a powerful 2500W induction motor and brass pump head and fittings with ceramic pistons. Capable of pumping up to 500L/hr with a maximum pressure of 150bar. Features Automatic Total Stop System (TSS) technology which switches the motor on and off when the lance trigger is operated, prolonging motor life. Can be unclipped from the frame for when space is restricted. Fitted with 10m hose reel, built-in pressure gauge and adjustable pressure controls. Supplied with stainless steel lance with adjustable spray nozzle. Manufactured with a lightweight, durable metal frame and large heavy-duty wheels. Supply: 230V - 13A. Supplied with 5m power cable fitted with 3-pin plug.

3. SPECIFICATION


Model No:.....PW5000.V2
Fuse Rating:.....13A
Hose Length:.....10m
IP Rating:IPX5
Maximum Pressure:150bar(15MPa)(2175psi)
Maximum Water Flow:.....8.33L/min
Motor Power:.....2500W
Weight:.....24.6kg
Noise Level:93dB(A)
Noise Rating LwA:.....91dB
Peak Water Temperature:.....60°C
Plug Type:3-Pin
Power Supply Cable Length:.....5m
Rated Pressure:125bar(12.5MPa)(1813psi)
Rated Water Flow:7.5L/min
Supply:230V - 13A

Reel supplied in
separate box

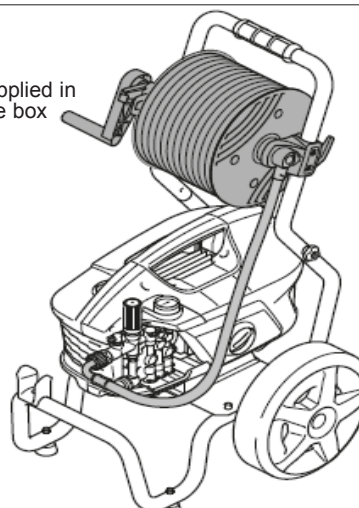

4. ASSEMBLY

4.1. CONTENTS

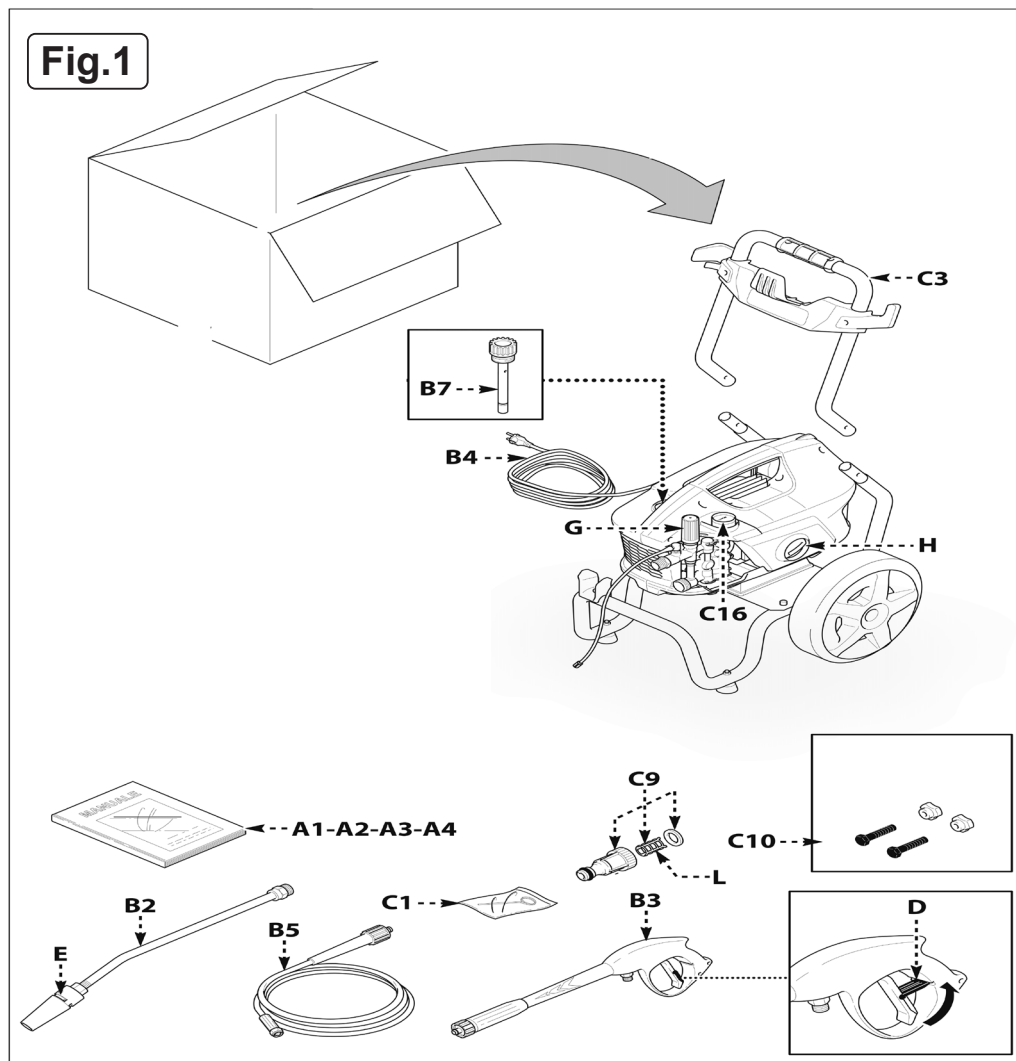

A1 - A4	Associated Paperwork
B2	Lance
B3	Gun With Safety Catch
B4	Electric Cable and Plug
B5	High Pressure Hose
B7	Oil Cap and Dip Stick
C1	Nozzle Cleaning Tool
C3	Handle
C9	Adaptor
C10	Screws + Thumb Wheels
C16	Pressure Gauge
D	Safety Catch
E	Nozzle
G	Pressure Regulator
H	Starter On/Off

- 4.2. FIT HANDLE** (fig.1 C3) using the supplied bolts and thumb wheels (fig.1 C10, fig.3 C10).
- 4.3.** Remove the red travel plug from the motor body (fig.3 - 2). Insert the Oil Cap and Dip Stick (fig.1 B7, fig.3.2 B7) and check the oil level. Top up to 'full' mark on stick if necessary.
- 4.4. FIT HOSE REEL**
- 4.4.1.** Remove the fitted bracket (fig.2-1) and retain fixings.
- 4.4.2.** Fit reel spindle holders to both sides (fig.2-2, fig.2-3). **NOTE:** The gun holster and handle bracket fits on the right hand side. The water inlet carrier fits on the left hand side.
- 4.4.3.** Fit reel handle using supplied fixing (fig.2-5).
- 4.4.4.** Confirm reel lock operates correctly (fig.2-6).
- 4.5.** Connect High Pressure hose to reel inlet (fig.2-7-1) and other end to pump manifold outlet (fig.2-7-2).
- 4.6.** Connect inlet adaptor to manifold inlet (fig.3-5 C9).
- 4.7.** Assemble lance (fig.3-8) using items B3, B2, and E.
- 4.8.** Connect hose reel outlet to the trigger unit (fig.3-7). **NOTE:** If required, the motor can be separated from the carriage by depressing the release catch (fig.3-3, fig.3-4) once all hoses are disconnected.
- 4.9. WATER SUPPLY CONNECTION**
- ☐ **WARNING - DANGER!** Only clean or filtered water should be supplied to the appliance. The flow rate of the water inlet tap should be equal to the pump flow rate.
- 4.9.1.** Place the appliance as close to the water supply system as possible.
- 4.9.2.** The appliance may only be connected directly to the mains drinking water supply if the supply hose is fitted with a backflow preventer valve as per current regulations in force. Make sure that the hose is at least Ø13 mm, that it is reinforced and that it is not more than 25m long.
- 4.9.3.** For suction of water from open containers:
- 1) Screw the inlet hose with filter to the water INLET and insert it down to the bottom of the container.
 - 2) Vent the air from the appliance:
 - a) Unscrew the lance.
 - b) Start the appliance and keep the gun open until there are no air bubbles in the water flowing out.

3) Switch the appliance off and screw the lance back on.

NOTE: the maximum suction height is 0.5 m. The suction hose should be filled before use.

- 4.10. The trigger has a safety lock incorporated. To engage it, clip the lock into depression on the handle. To unlock, unclip the lock from handle (fig.5 D, I, fig.1 D).
- 4.11. To adjust the nozzle spray pattern, rotate the lance nozzle as shown in fig.5 E.
- 4.12. To adjust the working pressure, rotate the pressure regulator (fig.1 G) clockwise to increase and anti-clockwise to reduce.
- 4.13. **TRIGGER** has a safety lock. To engage: clip the lock into the depression on the handle. To release: unclip the lock from the handle (fig.5 D, I, fig.1 D).
- 4.14. **NOZZLE SPRAY PATTERN ADJUSTMENT** rotate the lance as shown in fig.5 E.
- 4.15. **PRESSURE ADJUSTMENT** rotate the pressure regulator (fig.1 G) clockwise to increase and anticlockwise to reduce pressure.

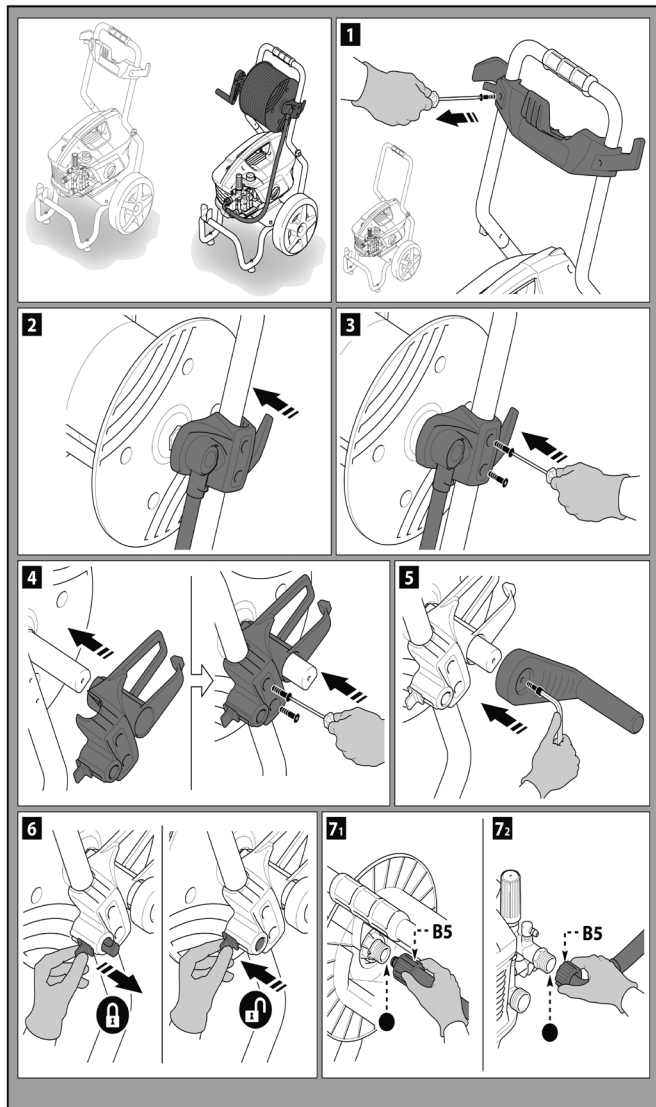


Fig.2

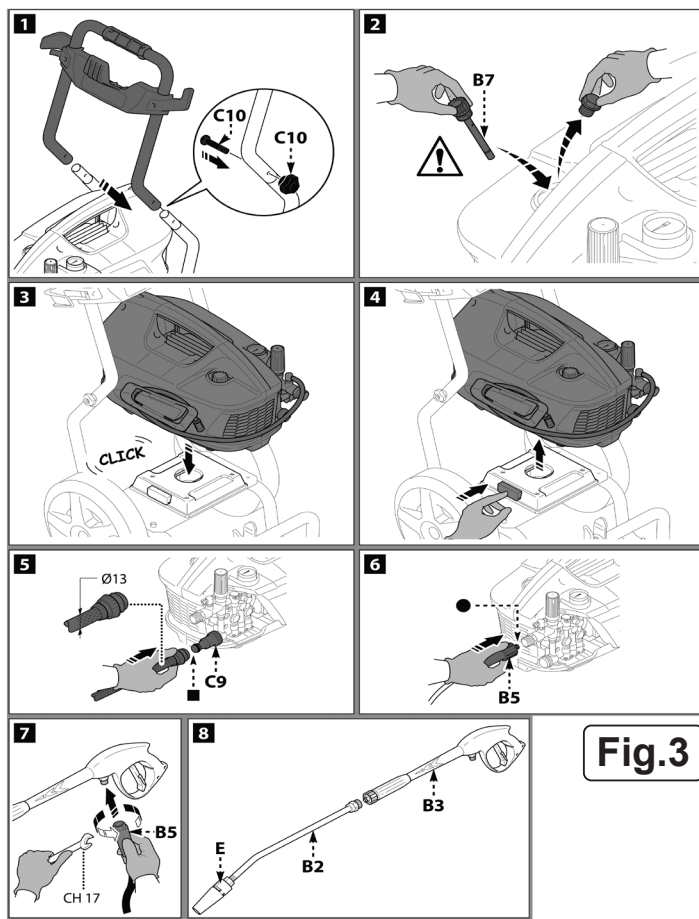
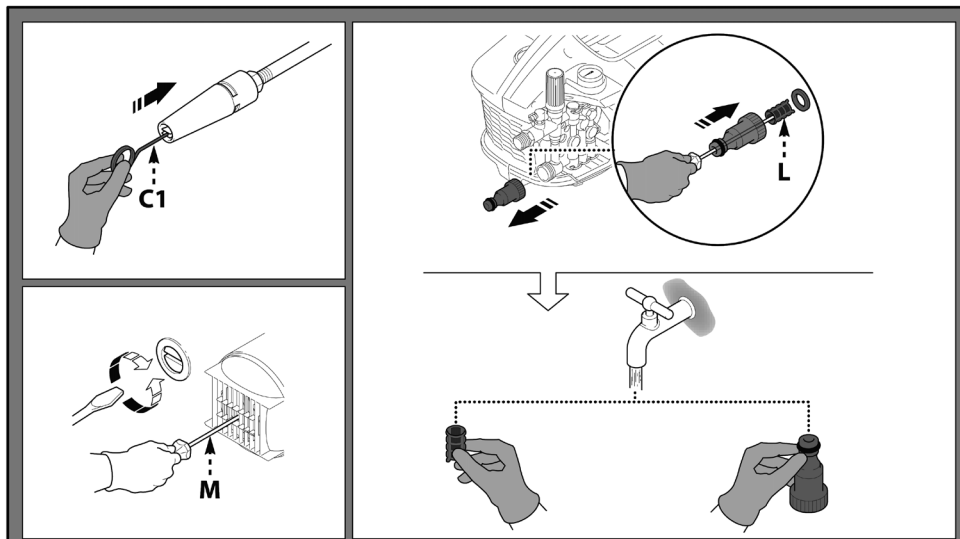


Fig.3

5. OPERATION

- ☐ **WARNING - DANGER!** During operation, the appliance must be positioned on a firm, stable surface.
- 5.1. Turn on the water supply tap fully.
- 5.2. Release the safety catch (fig. 5 D, I, fig.1 D).
- 5.3. Depress the gun trigger for a few seconds and start up the appliance using the starter device (fig.1 H) (ON/I).
- ☐ **WARNING - DANGER!** Before starting up the appliance check that it is receiving water correctly as use of the appliance without water will damage it.
- × **DO NOT** cover the ventilation grilles when the appliance is in use.
- 5.4. TSS models - In TSS models with automatic delivery flow cut-off system when the gun trigger is released the dynamic pressure automatically cuts out the motor.
- 5.5. Also in TSS models, when the gun trigger is depressed the automatic drop in pressure starts the motor and the pressure is restored after a very slight delay.
- 5.6. If the TSS is to function correctly, all gun trigger releasing and depressing operations must be at least 4-5 seconds apart.
- 5.7. **SHUTTING DOWN**
 - 5.7.1. Set the starter device switch on (OFF/0).
 - 5.7.2. Depress the gun trigger and discharge the residual internal pressure.
 - 5.7.3. Engage the safety catch (fig. 5 D, I, fig.1 D).

Fig.6


7. TROUBLESHOOTING

Problem	Possible causes	Remedy
Pump does not reach working pressure	Nozzle worn	Replace nozzle
	Water filter fouled	Clean filter (L) Fig.6L
	Insufficient water supply	Turn on water supply tap fully
	Air being sucked into system	Check tightness of hose fittings
	Air in pump	Switch off the appliance and keep depressing and releasing the gun trigger until the water comes out in a steady flow. Switch the appliance back on again.
	Adjustable nozzle not positioned correctly	Set nozzle (E) on (+) setting Fig.4E
	Thermostatic valve tripped	Wait for correct water temperature to be restored
	Water being sucked from an open container from a height of more than 0.5 m.	Reduce the suction height.
Pump pressure drops during suddenly use	Water being sucked from an external tank	Connect appliance to the mains water supply
	Inlet water too hot	Reduce temperature
	Nozzle clogged	Clean nozzle
	Inlet filter (L) fouled	Clean filter (L) Fig.6L
Motor "buzzes" but fails to start	Power supply voltage too low	Check that the voltage of the mains power supply line is the same as that on the plate
	Voltage drop due to use of extension cable	Check characteristics of extension cable
	Appliance not used for a long period of time	Contact your nearest Authorised Service Centre
	Problems with TSS device	Contact your nearest Authorised Service Centre
Motor fails to start	No electrical power	Check that the plug is firmly in the socket and that the mains voltage supply is present (*)
	Problems with TSS device	Contact your nearest Authorised Service Centre
	Appliance not used for a long period of time	Using the tool (M) unjam the motor through the hole at the rear of the appliance (in models with this feature)
Water leakages	Seals worn	Have the seals replaced at your nearest Authorised Service Centre
	Safety valve tripped and discharging	Contact an Authorised Service Centre
Appliance noisy	Water too hot	Reduce temperature (see technical data)
Oil leakages	Seals worn	Contact your nearest Authorised Service Centre
TSS versions only: appliance starts even with gun trigger released	High pressure system or pump circuit not watertight	Contact your nearest Authorised Service Centre
TSS versions only: no water delivery when gun trigger is depressed (with supply hose connected)	Nozzle clogged	Clean nozzle
No detergent sucked in	Adjustable nozzle on high pressure setting	Set nozzle (E) on "■" setting Fig.4E
	Detergent too dense	Dilute with water
	High pressure hose extension being used	Fit original hose
	Deposits or restriction in detergent circuit	Flush with clean water and eliminate any restrictions. If the problem persists, contact an Authorised Service Centre
Water escapes from thermostat valve	Water temperature inside pump head has exceeded max. rated value stated on nameplate	With appliance in operation, do not stop the water jet for more than 5 minutes at a time



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk