



# 2.5L PNEUMATIC BRAKE & CLUTCH BLEEDER

MODEL NO: VS830

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Wear protective gloves

## 1. SAFETY

- WARNING!** Familiarise yourself with the application and limitations, as well as any potential hazards, of this product. Ensure that Health and Safety, local authority and general workshop practice regulations are adhered to when using.
  - DO NOT** use pressure reservoir, or its ancillaries if damaged.
  - DO NOT** use the pressure reservoir to perform a task for which it is not designed.
  - DO NOT** allow untrained persons to use the pressure vessel.
  - DO NOT** use when tired or under the influence of drugs, alcohol or intoxicating medication.
  - Use approved parts and approved spare parts only.
  - Maintain in a good and clean condition for the best and safest performance.
  - Ensure that the ignition key of the vehicle being worked on is removed, to prevent inadvertent engine cranking.
  - If the vehicle to be worked on is raised, ensure that it is adequately supported with axle stands or ramps and wheel chocks.
  - Wear approved eye protection. A full range of personal safety equipment is available from your Sealey stockist .
  - Wear suitable clothing to avoid snagging. **DO NOT** wear jewellery and tie back long hair.
  - Keep children and unauthorised persons away from the work area.
  - Keep work area clean and tidy and free from unrelated materials.
  - Ensure the work area has adequate lighting.
- 1.1. **BRAKE FLUID SAFETY**
- Always read and comply with the warnings on the brake fluid container.
  - Wear eye protection and keep skin contact to a minimum. If brake fluid enters eyes rinse with plenty of water and seek medical advice. If swallowed seek medical advice immediately.
  - WARNING!** Brake fluid is flammable - keep away from sources of ignition, including hot surfaces e.g. exhaust manifold.
  - WARNING!** Brake fluid will damage paintwork. Any spillage should be flushed with water immediately.
  - Always read and comply with the warnings on the brake fluid container.
  - WARNING! DO NOT** pollute the environment by allowing uncontrolled discharge of fluids. Dispose of waste liquids in accordance with local authority regulations.
  - After use, clean equipment and store in a cool, dry, childproof area.

## 2. INTRODUCTION

One-person professional pneumatic brake and Clutch bleeding tool. Reservoir holds 2.5L of hydraulic fluid - flush the entire system with one fill, without the risk of running the reservoir dry. Pressure range makes the unit suitable for use with ABS systems. Fitted with Ø45mm cap with a 90° angled connector which is suitable for most European models. Compatible with Sealey VS0204B, VS0204C, VS0204C4, VS0204T, VS820UA and VS820SA brake caps.


## 3. SPECIFICATION

Inlet Size: ..... 1/4"BSP  
Maximum Air Supply: ..... 100psi/7bar  
Tank Capacity:..... 2.5L


## 4. OPERATION

- 4.1. Use your bleeder only as directed. Read these directions completely before starting. The apparatus is intended for use only by individuals experienced with bleeding and servicing hydraulic systems. If you are unsure about your ability or experience, consult a trained professional. Always follow vehicle manufacturer's directions when bleeding hydraulic systems.
- 4.2. Ensure that the bleeder is clean and free from debris and old hydraulic fluid.
- 4.3. Remove hydraulic fluid reservoir cap from the vehicle. If old fluid is contaminated, syphon it off and refill reservoir with fresh fluid.
  - DO NOT** pump contaminated fluid through the hydraulic system.
- 4.4. Firmly attach the bleeder cap to the vehicle fluid reservoir, ensuring that the gasket seats properly and is not worn or cracked.
- 4.5. Tighten pump cap onto empty bleeder using the supplied wrench and pressurise to 10 psi (0.7bar). Check for leaks at the fluid reservoir and at the bleeder fluid hose connections. If reservoir cap or hose connections are leaking, release accumulated pressure in the bleeder reservoir by gently unscrewing the pump cap. **DO NOT** remove the cap before de-pressurising the bleeder reservoir. Reattach the bleeder reservoir cap or tighten hose connections and once again pump the tank to 10 psi (0.7bar) and check for leaks.
- 4.6. If no leaks are found, gently unscrew pump cap and add up to 1.25 litre of new hydraulic fluid from a sealed container. Use only the type of hydraulic fluid recommended for your vehicle.


- 4.7. Tighten the pump cap using the supplied wrench and pressurise the bleeder to the level recommended in the vehicle service manual. **DO NOT** exceed 28psi (1.9bar). Higher pressures may damage your vehicle's hydraulic system and could result in serious injury. **The pressure relief valve in the pump cap will activate at 20psi.**
  - 4.8. Determine the correct brake bleeding sequence from your vehicles service manual. Attach bleed tube to bleed valve at the first cylinder to be bled, open end in a suitable fluid receptacle. Open bleed valve and bleed until fluid runs clear and free of bubbles. Tighten bleed valve to the torque specified in your vehicle service manual.
  - 4.9. Repeat on each bleed valve. Pump additional pressure into bleeder if necessary.
  - 4.10. If fluid remains in the bleeder reservoir when finished, tip the tank away from fluid pick up tube and open bleed valve closest to the master cylinder. Allow air to flow into fluid reservoir until fluid level falls just to the maximum fill level on your reservoir. Close the bleed valve and tighten to specified torque.
  - 4.11. When complete, release pressure by slowly loosening the pump cap. Remove the cap from the fluid reservoir, taking care to avoid spilling any fluid that remains in the tube.
  - 4.12. Replace fluid reservoir cap on your vehicle, checking that the fluid level is at the maximum level indicated on the vehicle reservoir.
  - 4.13. Before driving your vehicle, carefully check for leaks and test for proper brake operation.
- × **DO NOT** store hydraulic fluid in bleeder. Always dispose of excess fluid properly in accordance with local authority regulations.

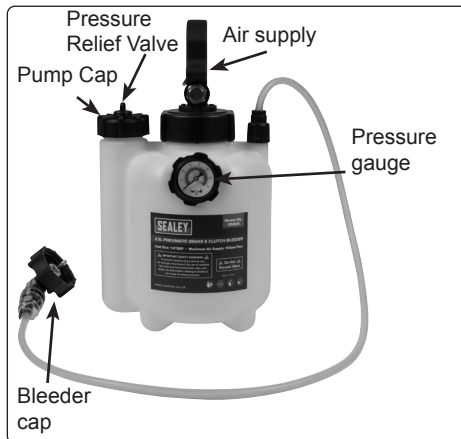

Brake and clutch bleeding system-  
Model No VS830

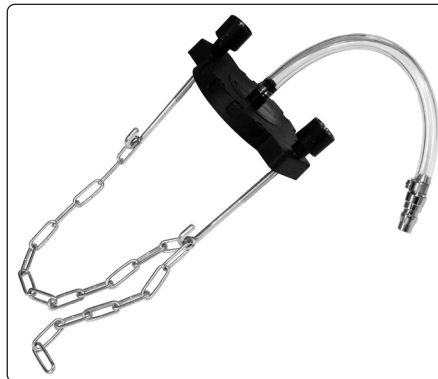

Universal Adaptor - Model No. VS820UA.

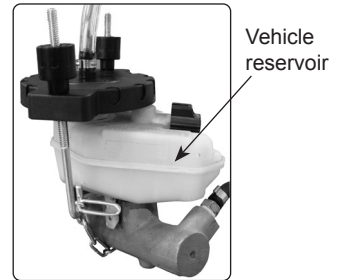

Adaptor deployed



Pump Cap Wrench.



Straight Adaptor - Model No. VS820SA.



Ø45mm Brake Pressure Bleeder Cap -  
90° Connector With Hose.  
Model No. Model No. VS0204C4



Universal Brake & Clutch Bleeder  
Adaptor Cap - VS0204UA.V2

Parts support is available for this product. Please email [sales@sealey.co.uk](mailto:sales@sealey.co.uk) or telephone 01284 757500



**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR  
PURCHASE HERE

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

[sales@sealey.co.uk](mailto:sales@sealey.co.uk)

[www.sealey.co.uk](http://www.sealey.co.uk)