



## 250L/MIN AUTOMATIC STAINLESS SUBMERSIBLE CLEAN WATER PUMP

MODEL NO'S: **WPS250A**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
instruction  
manual

### 1. SAFETY

#### 1.1. ELECTRICAL SAFETY

- ☐ **WARNING!** It is the user's responsibility to check the following:
  - ✓ Check all electrical equipment and appliances to ensure that they are safe before using.
  - ✓ Inspect power supply leads, plugs and all electrical connections for wear and damage.
  - ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
  - ✗ **DO NOT** use worn or damaged cables, plugs or connectors.
  - ✓ Ensure that any faulty item is repaired or replaced immediately by a Sealey qualified technician.
  - ✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
  - ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
- ✗ **DO NOT** pull or carry the appliance by the power cable.
- ✗ **DO NOT** pull the plug from the socket by the cable.

#### 1.2. GENERAL SAFETY

- ☐ **WARNING!** Pump must be used in accordance with Health & Safety, government, local authority, and water authority rules and regulations.
- ✓ Familiarise yourself with application and limitations, as well as the specific potential hazards peculiar to the pump.
- ☐ **WARNING!** Disconnect the pump from the mains power before changing accessories, servicing or performing any maintenance.
- ✓ Maintain the pump in good condition (use an authorised service agent). Keep the pump clean.
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Only use for pumping liquids under 35°C.
- ✓ If pump is used to pump water from a well, drain or deep receptacle, take adequate precautions to stop persons or animals from falling in.
- ✓ Use the built-in handle to lower or raise the pump. It may be necessary to attach a suitable rope or pulley to the handle.
- ✓ If the bottom of the water container is covered with sludge, sand, gravel or mud etc, suspend the pump or place it on a raised base to operate above the solid matter. Sand and such substances will reduce working life of pump, and invalidate your warranty.
- ✓ In flood situations, user is responsible for ensuring that appropriate back-up procedures, alarms etc are correctly installed in case of pump failure.
- ✓ In swimming pools, fish ponds, etc, ensure location is clear of people and animals, including removal of fish from pond.  
**Note:** this pump is not designed for continuous use in a fish pond or similar water feature or display.
- ✗ **DO NOT** operate the pump if any parts are damaged or missing as this may cause failure and/or possible personal injury.
- ✗ **DO NOT** use the pump for any purpose other than that for which it is designed.
- ✗ **DO NOT** use to pump chemicals, fuels or salt water.
- ✗ **DO NOT** insert hands into the mouth of the pump as this could lead to injury.
- ✗ **DO NOT** use to pump septic tanks or settling pits. **DO NOT** pump any liquids other than water.
- ✗ **DO NOT** operate the pump out of water. The pump pick up area must be completely submerged during operation.
- ✗ **DO NOT** exceed the maximum submersible depth - see specifications.
- ✗ **DO NOT** operate the pump during freezing temperatures. **DO NOT** leave the pump in water that may freeze.
- ✗ **DO NOT** use in swimming pools if people could come into contact with the water whilst pump is in use.
- ✗ **DO NOT** use for pumping sea water or inflammable, corrosive, explosive or dangerous liquids.
- ✗ **DO NOT** carry the pump by its electrical cable, or outlet pipe. Use the handle only.
- ✓ When not in use switch off pump and remove plug from power supply. Rinse pump, drain out any water and store in a frost free, safe location.
- ☐ **WARNING! DO NOT** allow uncontrolled discharge of contaminated water which would pollute the environment.  
**NOTE:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


## 2. INTRODUCTION

Manufactured from heavy duty corrosion resistant materials in either stainless steel or polypropylene. Suction pump suitable for drawing brackish water up to 8 metres. Includes a removable filter for easier maintenance.

## 3. SPECIFICATION

Model no: .....WPS250A  
Fuse Rating:.....13A  
Maximum Head:.....8m  
Maximum Output/Min:.....250L(54gal)/min  
Maximum Particle Size:.....5mm  
Maximum Water Depth:.....7m  
Minimum Water Depth:.....30mm  
Motor Power:.....600W  
Outlet OD:.....Ø32mm  
Power Supply Cable Length:.....10m  
Plug Type:.....3-Pin  
Supply:.....230V

## 4. OPERATION

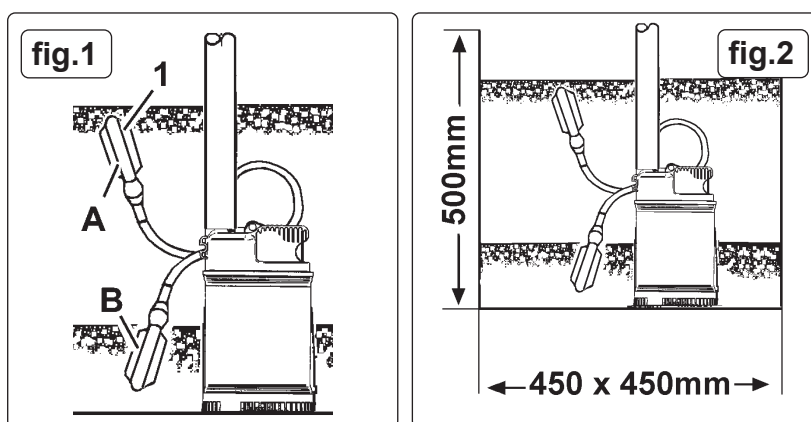

### ☐ **WARNING! Ensure you read, understand and apply safety instructions.**

- 4.1. Fit an appropriate discharge pipe to pump outlet and secure with a clip. Ensure the diameter of the discharge pipe is the same as, or greater than, the outlet diameter. A smaller pipe will adversely effect the pump flow rate.
- 4.2. Position the pump in the water and place the outlet pipe securely in the discharge receptacle or area. We recommend the pump is submerged with its discharge outlet facing up to release any trapped air.
- 4.3. Plug the pump into the electrical mains supply and switch on.
- 4.4. The pump will automatically turn on as the level of water rises (fig.1.A). As water level lowers, the float will automatically switch the pump off as it reaches the minimum height (B). The float may be adjusted by shortening or lengthening the cable. The pump will switch on if the water level is up to or above the maximum length of the float cable. To function correctly the float must move freely. Ensure that the float can do so and that the cable is not restricted. Check that the pump and discharge are working correctly.
- 4.5. The water into which the pump is placed will act as the motor cooling agent. For this reason the pump must remain submerged at all times. Should the pump have to be used in shallow water **DO NOT** operate for more than 10 minutes. Failure to follow this rule will damage the unit and will invalidate your warranty.

**NOTE:** See fig.2 to determine minimum clearance required if using the pump in a restricted area e.g: a sump or well.

## 5. MAINTENANCE

### ☐ **WARNING! With the exception listed below, all pump, float and electrical cable service, maintenance and repair must only be undertaken by an authorised service agent. Failure to observe this rule may be dangerous and will invalidate your warranty.**

### ☐ **WARNING! Ensure the pump is disconnected from the mains power supply before attempting any service or maintenance.**

- 5.1. Keep all parts of the pump clean. Rinse, drain and allow to dry before storing pump.
- 5.2. Regularly check the water inlet on the base of the pump to ensure there are no blockages. To access the impeller carefully undo the four base hex headed screws and remove base. Clean the impeller and replace the base ensuring that the O ring is correctly located.

## 6. TROUBLESHOOTING

Problem	Symptom	Solution
<b>A.</b> Motor operates but there is no suction.	<ol style="list-style-type: none"> <li>1. Water level below min suction depth.</li> <li>2. Air bubbles in pump accumulated during submersion, or float is incorrectly positioned so pump does not stop at minimum level and sucks in air.</li> <li>3. Clogged intake filter or discharge pipe.</li> </ol>	<ol style="list-style-type: none"> <li>1. Stop the pump.</li> <li>2. Release air by inclining the pump and re-immersing it in water.</li> <li>3. Remove blockage, and clean the unit.</li> </ol>
<b>B.</b> Reduced water volume for level of water	<ol style="list-style-type: none"> <li>1. Discharge pipe bent, or pinched.</li> <li>2. Discharge pipe too narrow.</li> <li>3. Pump partially blocked.</li> </ol>	<ol style="list-style-type: none"> <li>1. Straighten pipe.</li> <li>2. Use wider diameter pipe.</li> <li>3. Clean pump.</li> </ol>
<b>C.</b> The pump will not start or suddenly stops during operation.	<ol style="list-style-type: none"> <li>1. No electrical power.</li> <li>2. Float not working.</li> <li>3. Impeller is jammed.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check cable, plug and fuse.</li> <li>2. Contact authorised service agent.</li> <li>3. Clean the pump.</li> </ol>



### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE



### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Important: No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Jack Sealey Ltd t/a Sealey Group**, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK  
**Jack Sealey (EU) Ltd t/a Sealey Group**, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland  
**Tel:** 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk