



FILTER HOUSING - PACK OF 2

MODEL NO: 9009



Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



REFER TO INSTRUCTIONS

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. INTRODUCTION

Used to retain Sealey 9006 P2 R D particulate prefilter. Used in conjunction with Sealey 9001 and 9002 filter cartridges. Used in conjunction with filter cartridges gives greater adaptability. Supplied as a pair in a resealable storage bag.

Type Examination Ref.: 0082/1694/079/03/22/0186
Notified Body: Apave Sudeurope sas (notified body number 0082)



2. SAFETY

IMPORTANT: The use limitations of these respirators depend on the type of filter they are used with as well as the conditions of the environment user work in, contaminant concentration, type of work, etc. For an effective and proper use of the filters, read carefully the following instructions and keep this document for further consultation.

- ✗ These filters **DO NOT** supply oxygen (O₂).
 - ✓ Use in adequately ventilated areas. **DO NOT** use in case of oxygen deficiency.
 - ✗ **DO NOT** use in explosive atmospheres.
 - ✗ Filters should **NOT** be used in fire-fighting or too work with open flames or molten metal since the combustion of the activated carbon contained in the filters can generate high levels of toxic substances.
 - ✓ The right filter must be chosen according to concentration and type of contaminant in each case.
 - ✗ **DO NOT** use as protection against carbon monoxide under any circumstances.
 - ✗ **DO NOT** modify or repair the filter or cover. In case of damage or loss of seal, replace the product with a new one.
 - ✗ Filters, combined filters and absorbers require no maintenance or repair.
 - ✓ Leave work if respiratory protection is damaged, if you have difficulty breathing and / or if you start to feel nauseous or dizzy.
 - ✗ **DO NOT** use respirators with filters or combined filters or absorbers in closed silos, wells, canals or other closed places without ventilation.
 - ✗ **DO NOT** use in an oxygen enriched atmosphere.
 - ✗ **DO NOT** use in an atmosphere with unknown air quality.
 - ✓ Use cleansers also as indicated in the respirator manual
 - ✗ **DO NOT** use if the storage took place under conditions other than those specified by the manufacturer. This may affect the shelf life.
 - ✗ **DO NOT** remove the adapter once installed during use.
 - ✓ Ensure the type of filter is the correct one for intended use, and that you have installed both filters of the same type.
 - ✓ Inspect the filters and respirator for any signs of damage before each use. If damaged or the item has expired it must be replaced.
 - ✓ Only use filters that have been stored correctly in their original packaging as per these instructions.
- The use of filters must comply with current legislation, regulations about respiratory protection and regulations from various official bodies.

3. ASSEMBLY

3.1. BEFORE EACH USE

1. Read instruction for use carefully. 2. Make sure the type of filter is the correct one for intended use. 3. Make sure that you installed both filters of the same type. 4. Make sure that the filter as well as the respirator do not present any signs of tearing, distortions, dents, nor dirt. Should this be the case, it must be disposed of. 5. Make sure filter is in its original packaging. 6. Filter must be inspected before its use. In case of contamination, distortion and/or expiration it must be replaced.


3.2. FITTING THE FILTERS

Match the plastic filter connection with the filter holder on the mask. Press and turn the filter all the way clockwise. Repeat with second filter.

3.3. PRE-FILTER

An additional pre-filter can be fitted if required. (Not supplied)

Assembly of 9006 (pre-filter) and 9009 (cover). Place the 9006 pre-filter onto the 9001 filter with the printed side facing in. Place the 9009 cover on the filter and press together. Verify that the pre-filter covers the 9001 filter. Reverse the procedure to disassemble the product.

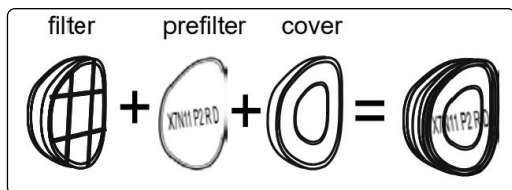

4. OBSOLESCENCE

Filters, combined filters, absorbers and cover have the production date on the packaging and on the product. The use-by date is 5 years from the production date, which is valid when stored in the original packaging in accordance with the manufacturer's recommendations.

5. FILTER DISPOSAL

Once filters have been used, they must be disposed of according to the current national legislation.

This document has been drawn up according to Regulation (EU) 2016/425 as amended to apply to GB for Personal Protective Equipment. The declaration of conformity can be accessed at www.sealey.co.uk.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

EU | Sealey EU Ltd, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

UK | Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk