
Owner's Manual

Model No.: PGC101

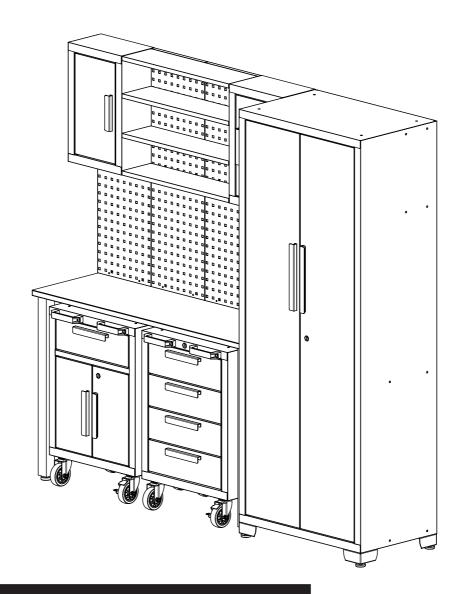

Garage Classic Series

Important

When you open the cartons, carefully check the contents and make sure there is no damage. If you have any problems or you find any parts damaged or missing, Please contact with us first.

Do not return the product to the store before contacting us. Do not dispose of your cartons until you are completely satisfied with your products.

To reduce the risk of injury, the user should read and understand this owner's manual before assembling and using these products for the first time.

Fill in the following informat	ion and retain this manual for future reference:	
Item No		
Date of Purchase		
Place of Purchase		
Receipt No.		
•		_

Safety Guidelines

WARNING

WARNING

DO NOT leave children unattended near the product.

WARNING

DO NOT stand on the product or lean on the drawers or worktop.

WARNING

WARNING

WARNING

WEAR SAFETY GLASSES when removing or repositioning the slides. The tools could slip, which may cause personal injury.

WARNING

DO NOT alter the product in any manner. For example, do not weld external lock bars or attach unapproved electrical equipment. This may cause product damage, personal injury, or death.

WARNING
DO NOT OVERLOAD PRODUCTS! The components of the product are designed to carry the following maximum weight capacities:

Cabinet	Shelf Weight Capacity (lbs.)	Drawer Weight Capacity (lbs.)	Bottom Weight Capacity (lbs.)	Top Weight Capacity (lbs.)	Overall Weight Capacity (lbs.)
Locker	150	/	220	150	820
Wall cabinet	1	1	50	/	50
1-drawer roller cabinet	100	70x1	100	100	370
4-drawer roller cabinet	/	70x4	/	100	380
52in workbench	/	/	/	800	800

BE CAREFUL when opening more than one drawer. The product could become unstable and tip, which may cause product damage or personal injury.


High risk of tipping if the product is not installed correctly. Securely attach the product to the wall to avoid serious injury.

Unpacking


- 1. Start by placing the package on flat covered ground.
- 2. Remove all cardboard, honey comb board, foam packaging material and clear plastic bags.
- 3. Recycle all packaging materials.
- 4. Verify all the contents are included and gather the tools required.

Hardware Included


		WALL			4-DRAWER		
		CABINET		R. CABINET		WORKBENCH	PEGBOARD
No.	DESCRIPTION	x2	x1	x1	x1	x1	x 6
1	M6 Hex Flange Nut	8 x2	4	0	0	0	0
2	Flat Washer	4 x2	4	0	0	0	4 x6
3	Key	0	2	2	2	0	0
4	M5 x 50 Hex Tapping Bolt	4 x2	4	0	0	0	4 x6
5	M6 x 12 Flat-Head Bolt	8 x2	20	0	0	0	0
	M5 x 12 Flat-Head Bolt						
6	(on the door)	2 x2	4	6	8	0	0
7	Adjustable Leveling Feet	0	4	0	0	0	0
8	Shelf	0	3	1	0	0	0
9	Casters	0	0	4	4	0	0
10	M8 x 20 Hex Flange Bolt	0	0	16	16	0	0
11	Grab Handle	0	0	2	2	0	0
12	M8 x 16 Flat-Head Bolt	0	0	4	4	8	0
13	M8 x 65 Hex Bolt	0	0	0	0	4	0
14	M8 Hex Flange Nut	0	0	0	0	4	0

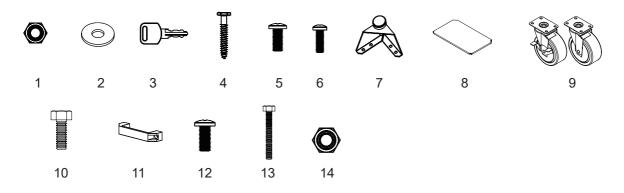


Tools Required

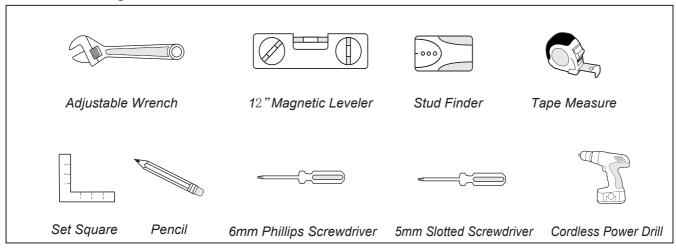

Locker x1

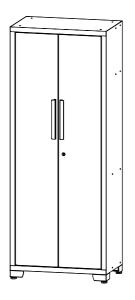


Wall cabinet x2

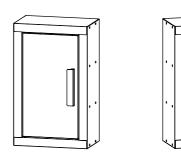

Shelf to connect the wall cabinets x4




1-drawer roller cabinet x1

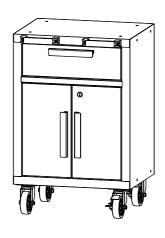


4-drawer roller cabinet x1



52in workbench x1

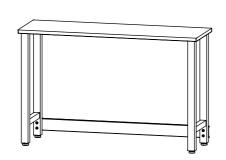


Pegboard x6



Installing the Handles

Unscrew the bolts on the front of the drawers or the doors using a Phillips screw driver to remove the handle on the back of it, then attach the handle to the front of the door or the drawer using two **M5x12** flat head bolts. Repeat for all the doors and drawers.


Attach the grab handle to the cabinet, align the holes and fix with two M8x16 flat head bolts.

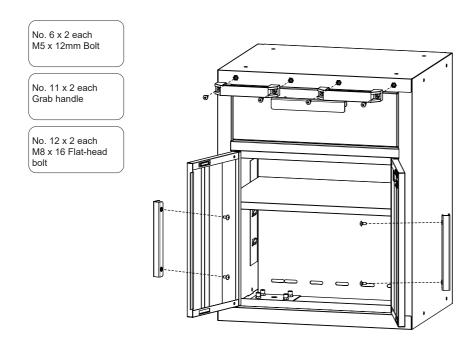

Installing the Casters


Lay the rolling cabinet on soft ground. Use the packaging material to protect the finish. Mount four casters to each cabinet with sixteen **M8x20** hex flange bolts.

Note: The casters with brakes should be on the front side of the cabinet.

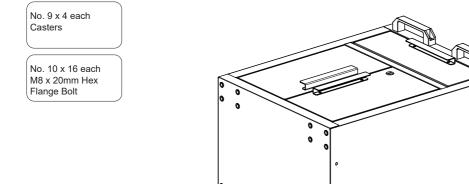

Installing the Feet

Carefully set the locker on its back, then attach the adjustable leveling feet to the locker using sixteen **M6x12** flat-head bolts with a Philips screw driver.

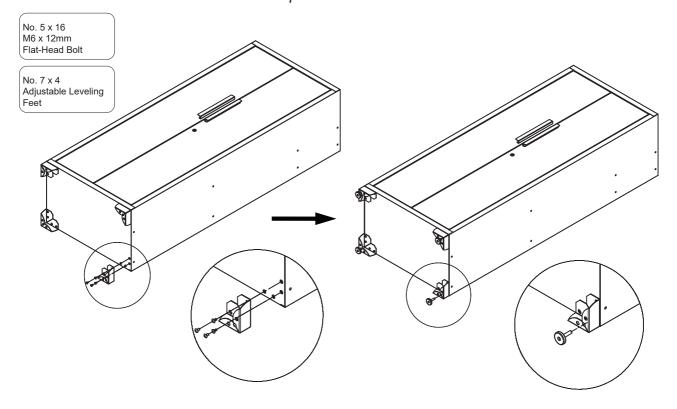


Installing the Shelves

Check the location need, carefully put the shelf into the slot .


Please make sure the shelf is stable.

NOTE: A center shelf must be installed level with the lock on the cabinet door in order for lock to work.

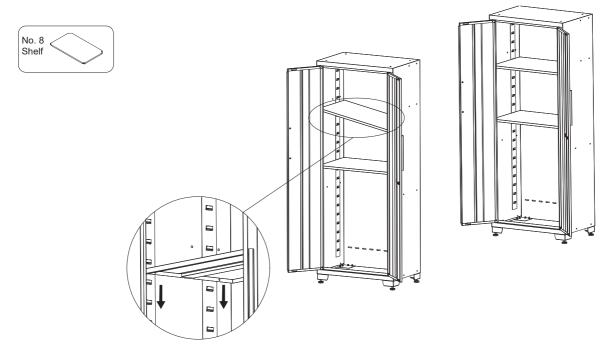


Installing the Workbench

- 1. Lay down the work top on a soft surface, align the holes on the legs with that on the worktop. Use four M8x16 bolts to connecting them together.
- 2. Use four M8x65 hex bolts and four M8 nuts to fasten support to the legs.
- 3. Fasten all the bolts and nuts.
- 4. Stand up the worbench to fihish this step.

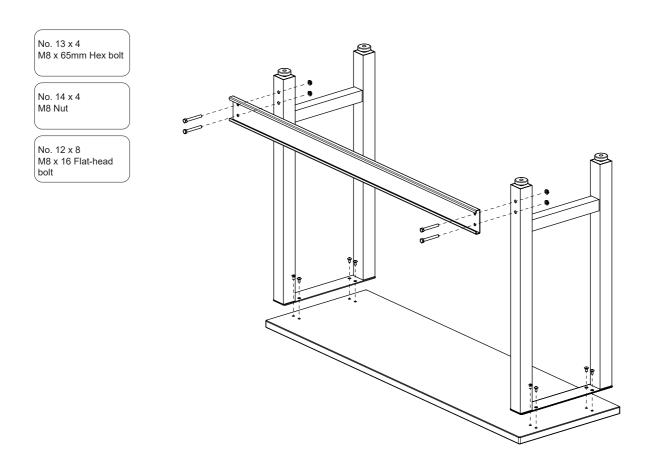


Setup


1. Planning the position of the cabinets, position the workbench




2. Align the pegboard and screw them onto the wall with

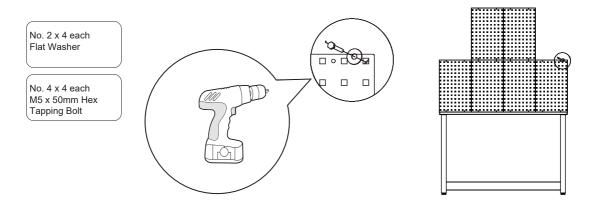


3. Connect the two wall cabinets with the shelves

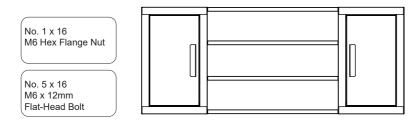


3. Open the door of the wall cabinet, connect the wall cabinet assembly to the wall. Two or more person is recommended for this step.

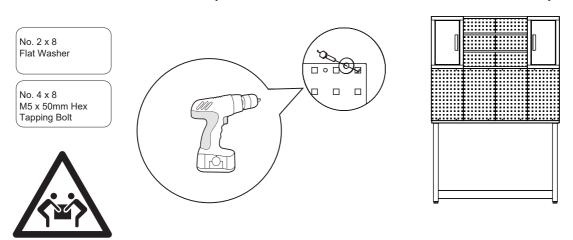

4. Roll the tool cabinet under the workbench

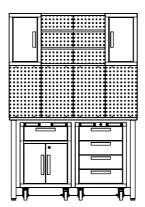

5. Lean the cabinet against the table. Open the door of the locker and securely attach the locker on the wall to prevent it from tipping.

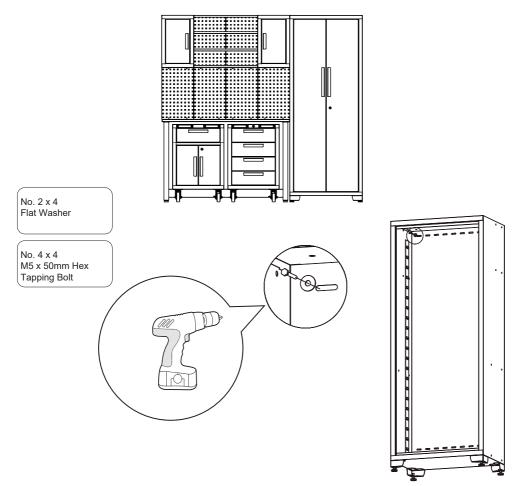


The installation of the garage cabinet set is finished.


Operation

Drawer Removal

Put the drawer out so that it's almost fully extended. Push up on the black release lever on one side, while pulling down on the black release lever on the other side. While holding the levers in the positions as illustred below, pull the drawer outward until it is released from the drawer slide.

Push up one side



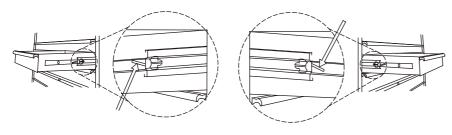

Drawer replacement

Extend the drawer slides from the cabinet. Insert the backets on each side of the drawer into the slots in the slides, being carefull to position them properly. Once instead, close the drawer completely to sent the slides in their proper positions.

Maintenance

- 1. Lubricate the slides twice a year with a quality lubricant. This is especially necessary when the temperature drops, which may cause the bearings to be stiff.
- 2. Periodically clean the drawers fronts, doors, handles and other surfaces with mild and water
- 3. For safety, use a non flammable cleaning fluid. Grease and oil can be removed with most standard cleaning fluids.