



INSTRUCTIONS FOR:
**TROLLEY JACK 2 TONNE CHROME PLATED & 2 TONNE
AXLE STANDS CHROME PLATED WITH STORAGE.**
MODEL No: **1060CXDK**

Your new jack is produced and manufactured to a high standard of dependability and will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

1. SAFETY PRECAUTIONS

- ✓ Ensure the jack and axle stands are in sound condition and good working order. Take action for immediate repair or replacement of damaged parts. Use genuine parts only. The use of unapproved parts may be dangerous and will invalidate the warranty.
- ✓ Locate the jack in a suitable, well lit working area.
- ✓ Keep working area clean and tidy and free from unrelated materials.
- ✓ Use jack and axle stands on level and solid ground, preferably concrete. Avoid tarmac as they may sink in.
- ✓ Place wedges under wheels of vehicle (but ensure wheels of jack can move freely).
- ✓ Ensure the vehicle handbrake is engaged, engine is switched off and transmission is in reverse gear (or "PARK" if automatic).
- ✓ Ensure minimum distance of 0.5mtr between vehicle and static objects such as doors, walls, etc., to allow for vehicle tilting.
- ✓ Ensure there are no passengers in the vehicle.
- ✓ Ensure all non-essential persons keep at a safe distance whilst the jack is in use.
- ✓ Only place jack and axle stands under those lifting points recommended by vehicle manufacturer (see vehicle handbook).
- ✓ Check the lifting point is stable and centred on the jack saddle.
- ✓ Ensure the jack wheels are free to move and that there are no obstructions.
- ☐ **DANGER:** Use the jack for lifting only, **NOT** for supporting the lifted load.
- ✓ Use suitable capacity axle stands under the vehicle before proceeding with any task.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before lowering.
- ✓ Use a qualified person to maintain or repair the jack hydraulic system.
- x **DO NOT** operate the jack or axle stands if damaged.
- x **DO NOT** allow untrained persons to operate the jack or axle stands
- x **DO NOT** exceed the rated capacity of the jack (2tonne). When lifting a load of maximum capacity or close to it, it is recommended that the effort be reduced by the use of assistance during this operation.
- x **DO NOT** allow the vehicle to move while supported by the jack, or use the jack to move the vehicle.
- x **DO NOT** jack vehicle if there is a risk of spillage of fuel, battery acid, or other dangerous substances.
- x **DO NOT** work under the vehicle until axle stands have been positioned correctly.
- x **DO NOT** use the jack or axle stands for purposes other than those for which it is intended.
- x **DO NOT** top up hydraulic system with brake fluid. Use hydraulic jack oil only.
- x **DO NOT** adjust the safety overload valve.
- x When not in use store jack and axle stands, fully lowered, in a safe, dry, childproof area.
- x **DO NOT** jack one end of vehicle if the other is only supported on axle stands.



2. INTRODUCTION & SPECIFICATION

- Jack features steel chassis with welded castor supports and a one-piece hydraulic unit which has a 360° pivot, making jacking easier in confined spaces.
- Fitted with overload valve and finger cover for extra safety.
- Suitable for the hobby user or as an emergency mobile jack.
- Includes one-piece pumping handle.
- Ratchet type axle stands with cast iron support posts.
- Security pin prevents accidental release of load; the more weight applied, the tighter the post is locked.
- Polished chrome finish for added corrosion protection.
- Jack and axle stands supplied in storage/carry case.

Jack Specification:	Axle Stand Specification:
Model No:..... 1060CXDK	Capacity Each:.....2tonne
Capacity:.....2tonne	Capacity Pair:.....4tonne
Min. Saddle Height:.....120mm	Minimum Height:.....280mm
Max. Saddle Height:.....360mm	Maximum Height:.....425mm
Max.Chassis Height:.....130mm	
Length:.....490mm	
Weight:.....9.5kg	

3. OPERATING INSTRUCTIONS

3.1. Before first use.

- 3.1.1. Before using jack, purge the hydraulic unit in order to eliminate any air in the system. Place the handle onto the release valve nut (**fig.4**) and open the valve by turning the handle anti-clockwise, place the handle back into the handle socket and pump 20 to 30 times. When complete, close the release valve by turning the valve nut clockwise.
- 3.1.2. Place a few drops of hydraulic jack oil onto the pump piston and pump the handle several times to distribute the oil. Lubricate all moving parts thoroughly.

3.2. General jacking.

- WARNING!** Before lifting ensure Section 1 safety instructions are read and understood.
- 3.2.1. Prepare the vehicle as mentioned in the safety instructions ensuring the ground on which the jack is to stand is level and solid (not tarmacadam).
- 3.2.2. Position the jack saddle under the vehicle manufacturer's recommended lifting point.

3.3. Jacking the vehicle.

- 3.3.1. Close the release valve using the handle (**fig.4**). Place the handle into the handle socket (**fig.3**) and commence pumping handle up and down using maximum strokes until the jack saddle reaches the vehicle jacking point. Check the jacking point is centrally located on the saddle and raise the vehicle.
- 3.3.2. Should the jack become overloaded, a safety excess pressure valve will open, and stop the vehicle from lifting.
- WARNING!** The jack is a lifting device only and **MUST NOT** be used to support the load. Use correctly rated axle stands to support the load (2tonne/stand). When lifting a load of maximum capacity or close to it, it is recommended that the effort be reduced by the use of assistance during this operation.

3.4. Lowering the vehicle.

- WARNING!** Ensure there are no persons or obstacles beneath the vehicle, or in the path of its descent.
- 3.4.1. If using axle stands, raise the jack high enough for the stands to be removed easily. Then place the handle onto the release valve nut and turn anti-clockwise, very slowly, to open the valve.
- 3.4.2. The lowering speed is controlled by the amount the handle is turned. Lower carefully, avoid any sudden changes in descent rate which would shock load the hydraulic system.


3.5 Using Axle Stands.

Assembly.

- 3.5.1. Insert the centre column into base of the stand (**fig.2**). Ensure serrated side of column will engage with locking lever mechanism.
- 3.5.2. Check stand is in good condition and has not suffered damage during transit.

Deployment.

- 3.5.3. Refer to vehicle handbook for correct jacking procedure. Check to ensure manufacturer's recommended jacking points are in good condition.
- 3.5.4. Position stands under jacking points.
- 3.5.5. To adjust stands: Hold control lever up while lifting the column to required height. Push control lever down to lock the pawl into column teeth (**fig.2**).
- WARNING!** ENSURE PAWL IS FULLY ENGAGED WITH TEETH.
- 3.5.6. Carefully and slowly lower vehicle onto stands. Ensure load bearing points sit in the centre of the crutches and that the stands are stable. Insert safety pins.
- ▲ **DANGER!** You **MUST** follow instructions carefully and ensure you **DO NOT** load the stands off centre. Failure to heed these warnings may cause damage, injury or loss of life!
- 3.5.7. To release axle stands: raise the jack to take weight of the vehicle and remove safety pins, then lift locking lever to release pawl.



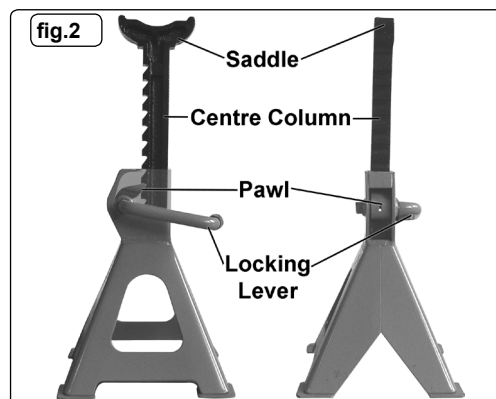


4. MAINTENANCE

IMPORTANT: MAINTENANCE OR REPAIR OF HYDRAULIC SYSTEM MUST ONLY BE PERFORMED BY A QUALIFIED PERSON.

- 4.1. When the jack is not in use, the ram should be in its lowest position to minimise corrosion. Remove the handle to deactivate jack.
- 4.2. Keep the jack clean and lubricate all moving parts on a regular basis.

- 4.3. Before each use check for broken, cracked, bent, or loose parts, or any visible damage to ram, pump, saddle, lifting arm, frame and all parts including nuts, bolts, pins and other fasteners. If any suspect item is found remove jack from service and take necessary action to remedy the problem.
DO NOT use the jack if believed to have been subjected to abnormal load or shock load.
- 4.4. Periodically check the pump piston and the ram for signs of corrosion. Clean exposed areas with a clean oiled cloth.
- 4.5. After one year the oil should be replaced in order to extend the life of the jack. Use hydraulic jack oil only.
- 4.6. To check the oil level, fully lower the jack. Remove oil filler plug (fig.5). The correct level is just below the bottom of the plug. If oil level is low, fill as required. **NOTE:** Use a good quality jack oil, such as SEALEY HYDRAULIC JACK OIL.
- ☐ **WARNING: DO NOT use brake fluid, or any fluid other than hydraulic jack oil as this may cause serious damage to the jack and will invalidate the warranty!**
- 4.7. When draining the oil make sure that no dirt is allowed to enter the hydraulic system.

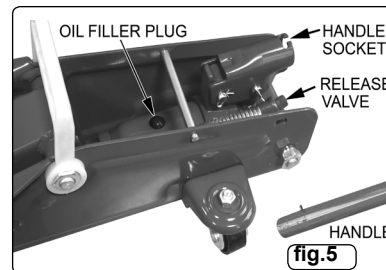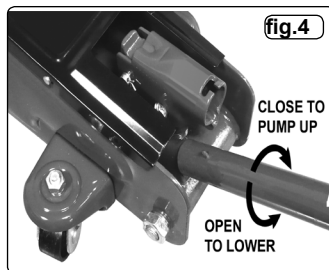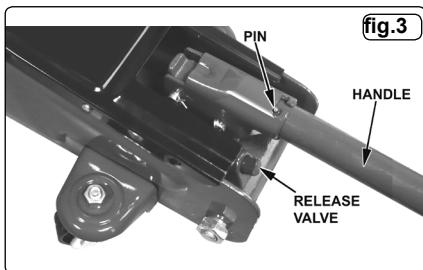

5. TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	REMEDY
Jack will not lift the load	1) Overloaded 2) Oil level low 3) Release valve not closed correctly 4) Air in system 5) Piston rod not functioning 6) Packing worn or defective	1) Be sure to use jack with adequate capacity 2) Top up oil level 3) Check and close release valve 4) Open release valve and pump the handle a few times. Close valve and re-try 5) Clean and replace oil 6) Replace packing
Jack does not lift high enough or feels "spongy"	1) Oil level too high or too low 2) Worn seals 3) Air in system 4) Release valve not closed	1) Fill or remove excess oil 2) Return jack to local service agent 3) Open release valve and pump the handle a few times. Close valve and re-try 4) Check and close release valve
Jack lifts poorly	1) Pump packing or valves malfunctioning 2) Oil is dirty 3) Air in the system	1) Replace packing and/or clean valves 2) Replace oil 3) Open release valve and pump the handle a few times. Close valve and re-try
Jack lifts but will not hold load	1) Release valve partially open 2) Dirt on valve seats 3) Air in system 4) Faulty seals 5) Packing worn or defective	1) Check and close release valve 2) Lower jack, close release valve. Place foot on front wheel and pull up lifting arm to it's full height by hand. Open the release valve to lower arm 3) Open release valve and pump the handle a few times. Close valve and re-try 4) Replace packing or contact local service agent 5) Replace packing
Jack will not lower completely	1) Unit requires lubrication 2) Piston rod bent or damaged 3) Jack frame/link system distorted due to overloading/poor positioning 4) Air in system 5) Release valve partially closed 6) Jack spring damaged or unhooked.	1) Oil all external moving parts 2) Replace rod or contact local service agent 3) Replace damaged parts or contact local service agent 4) Open release valve and pump the handle a few times. Close valve and re-try 5) Check and fully open release valve 6) Replace spring or contact local service agent
Jack does not lower at all	1) Release valve closed	1) Check and fully open release valve

IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THIS PRODUCT.

Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.

DO NOT return jacks to us. Please telephone us on 01284 757500 to obtain the address and 'phone number of your local agent.

If the jack is under guarantee contact your local Sealey dealer.

De-commissioning the Jack. Should the jack become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

☎ 01284 757500

🌐 www.sealey.co.uk

📠 01284 703534

✉ sales@sealey.co.uk