

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.**

## 1. SAFETY PRECAUTIONS

- ✓ Ensure the jack is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts.  
*Use genuine parts only. The use of unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Locate the jack in a suitable, well lit work area.
- ✓ Keep work area clean and tidy and free from unrelated materials.
- ✓ Use jack on level and solid ground, preferably concrete. *Avoid tarmac as jack may sink in.*
- ✓ Place wedges under wheels of vehicle (*but ensure wheels of jack can move freely*).
- ✓ Ensure the vehicle handbrake is engaged, engine is switched off and transmission is in 1st or reverse gear ("PARK" if automatic).
- ✓ Ensure minimum distance of 0.5m between vehicle and static objects such as doors, walls, etc., to allow for vehicle tilting.
- ✓ Ensure there are no passengers in the vehicle.
- ✓ Ensure all non-essential persons keep a safe distance whilst the jack is in use.
- ✓ Only place jack under those lifting points recommended by vehicle manufacturer (*see vehicle handbook*).
- ✓ Check the lifting point is stable and centred on the jack saddle.
- ✓ Ensure the jack wheels are free to move and that there are no obstructions.
- ☐ **DANGER:** *Use the jack for lifting only, NOT for supporting the lifted load.*
- ✓ Use suitable capacity axle stands under the vehicle before proceeding with any task.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before lowering.
- ✓ Use a qualified person to maintain or repair the jack hydraulic system.
- ✗ **DO NOT** operate the jack if damaged.
- ✗ **DO NOT** allow untrained persons to operate the jack.
- ✗ **DO NOT** exceed the rated capacity of the jack.
- ✗ **DO NOT** allow the vehicle to move while supported by the jack, nor use the jack to move the vehicle.
- ✗ **DO NOT** jack vehicle if there is a risk of spillage of fuel, battery acid, or other dangerous substance.
- ✗ **DO NOT** work under the vehicle until axle stands have been correctly positioned.
- ✗ **DO NOT** use the jack for purposes other than that for which it is designed.
- ✗ **DO NOT** top up hydraulic system with brake fluid. Use hydraulic jack oil only.
- ✗ **DO NOT** adjust the safety overload valve.
- ✓ When not in use store jack, fully lowered, in a safe, dry, childproof area.

## 2. SPECIFICATIONS

### Model 4001

Capacity	4000kg
Min. Saddle Height	150mm
Max. Saddle Height	560mm
Max. Chassis Height	200mm
Length	1420mm
Weight	110kg

### Model 7001

Capacity	7000kg
Min. Saddle Height	160mm
Max. Saddle Height	560mm
Max. Chassis Height	250mm
Length	1560mm
Weight	150kg


### Model 10QJ

Capacity	10000kg
Min. Saddle Height	160mm
Max. Saddle Height	560mm
Max. Chassis Height	250mm
Length	1560mm
Weight	150kg

## 3. ASSEMBLY & PURGING

**Note: Numbers in brackets refer to item numbers shown in the Parts List.**

- 3.1. Fit the handle assembly into the handle fork (11-5) with the valve control lever (12-7) towards the jack. Retain with handle set screw (12-2) and spring washer (12-3).
- 3.2. Remove the cover (13-6) and loosen screw (7-4), on the oil tank cover (7-2), by a half to one turn.
- 3.3. Before using the jack for the first time, purge hydraulic circuit in order to eliminate any air in the system. To do so move the valve control lever (12-7) down and to the right (B) to open the release valve and pump the jack handle rapidly several times.
- 3.4. Place a few drops of hydraulic jack oil on the pump piston and pump the handle several times to distribute the oil. Thoroughly lubricate all moving parts.

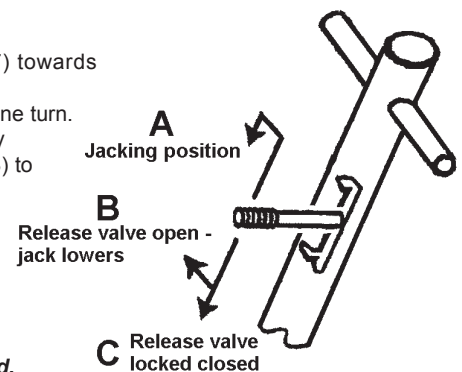

## 4. OPERATING INSTRUCTIONS

### 4.1. General jacking

☐ **WARNING!** *Before lifting, ensure Section 1 safety instructions are strictly followed.*

- 4.1.1. Prepare vehicle as described in safety instructions ensuring the ground on which jack is to stand is level and solid (not tarmac).
- 4.1.2. Position the jack saddle under the vehicle manufacturer's recommended lifting point (*see vehicle handbook*).

### 4.2. Jacking the vehicle

- 4.2.1. Jack saddle (2-1) may be raised up to load by placing valve control lever in position C and using the foot pedal (11-9). **DO NOT** attempt to raise the load with the foot pedal.
- 4.2.2. Ensure the release valve is closed and locked (i.e. valve control lever is in position A). Commence pumping the handle up and down using maximum strokes until the vehicle reaches the required height.

**Note:** If the jack becomes overloaded, the safety valve will operate and prevent the jack from lifting further.

### 4.3. Lowering the vehicle

4.3.1. Return valve control lever to position C, from A, and then slowly move to the right, towards position B, to open the release valve and lower the load.

- SAFETY WARNING!** Always lower in a slow and controlled manner and ensure that there are no persons or obstacles beneath the vehicle, or in the path of descent.

## 5. MAINTENANCE

**IMPORTANT: Only fully qualified personnel should attempt maintenance or repair.**

- 5.1. When the jack is not in use, the ram should be in the lowest position to minimise corrosion. Remove the handle to inactivate the jack.
- 5.2. Keep the jack clean and lubricate all moving parts with oil on a regular basis.
- 5.3. Every 3 months grease the upper arm pivot pin (3-1) via grease nipple (3-3H).
- 5.4. The pump and cylinder form a closed hydraulic system and refilling with oil is only necessary in exceptional cases. To check oil level:
  - 1) Place jack on a level surface with the saddle fully lowered.
  - 2) Remove cover (13-6) and then tank cover (7-2), taking care that no dirt is allowed into the tank.
  - 3) Check that level is to the top of the release spring (10-8). Add oil if necessary.

**NOTE:** Use a good quality jack oil, such as SEALEY HYDRAULIC JACK OIL.

- WARNING: DO NOT use brake fluid, or any fluid other than hydraulic jack fluid as this will cause serious damage to the jack and will invalidate the warranty!**
- 5.5. Before each use check for broken, cracked, bent, or loose parts, or any visible damage to ram, pump, saddle, lifting arm, frame and all parts including nuts, bolts, pins and other fasteners. If any suspect item is found, remove jack from service and take the necessary action to remedy the problem.  
**DO NOT** use the jack if it is believed to have been subjected to abnormal or shock loading. Inspect and take appropriate action.
- 5.6. Periodically check the pump piston and the ram for signs of corrosion. Clean exposed areas with a clean cloth and jack oil.

**IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THIS PRODUCT.**

Hydraulic products are repaired by local service agents only. We have service/repair agents in all parts of the UK.

**DO NOT RETURN JACKS TO US.** Please telephone us on 01284 757500 to obtain the address and telephone number of your local agent.

If jack is under guarantee you can also contact your local dealer.

### De-commissioning

Should the jack become completely unserviceable, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

## 6. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	REMEDY
Jack will not lift the load properly or will not hold raised load.	<ol style="list-style-type: none"> <li>1) Overloaded</li> <li>2) Release valve not closed</li> <li>3) Air in system</li> <li>4) Low oil level</li> <li>5) Internal defect</li> </ol>	<ol style="list-style-type: none"> <li>1) Be sure to use jack with adequate capacity.</li> <li>2) Check and close release valve.</li> <li>3) Open release valve and pump the handle a few times. Close valve and re-try.</li> <li>4) Check level and replenish if necessary.</li> <li>5) Contact Service Agent.</li> </ol>
Jack will not lower	<ol style="list-style-type: none"> <li>1) Unit requires lubrication</li> <li>2) Piston rod bent or damaged</li> <li>3) Jack frame/link system distorted due to overloading/poor positioning</li> <li>4) Air in system</li> <li>5) Release valve partially closed</li> <li>6) Release valve blocked</li> </ol>	<ol style="list-style-type: none"> <li>1) Oil all external moving parts.</li> <li>2) Contact local Service Agent.</li> <li>3) Replace damaged parts or contact Service Agent.</li> <li>4) Open release valve and pump the handle a few times. Close valve and re-try.</li> <li>5) Check and fully open release valve.</li> <li>6) Clean release valve.</li> </ol>

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,  
Kempson Way, Suffolk Business Park,  
Bury St. Edmunds, Suffolk,  
IP32 7AR

01284 757500  
01284 703534



www.sealey.co.uk



sales@sealey.co.uk