

## Model Nos: 2050CXL, 3000CXD, & 3030CXD.

Your new Trolley Jack is produced and manufactured to a high standard of dependability, and if correctly cared for will give you years of trouble free performance.



**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.**

### 1. SAFETY PRECAUTIONS

- ✓ Ensure the Jack is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts. *Use recommended parts only. The use of non Sealey parts may be dangerous and will invalidate the warranty.*
- ✓ Locate the Jack in an adequate, well lit working area for its function.
- ✓ Keep working area clean and tidy and free from unrelated materials.
- ✓ Use Jack on level and solid ground, preferably concrete. *Avoid tarmac/adam as Jack may sink in.*
- ✓ Place wedges under wheels of vehicle (*but ensure wheels of Jack can freely move*).
- ✓ Ensure the vehicle handbrake is engaged (or in "PARKED" mode), and switch the engine off.
- ✓ Ensure minimum distance of 0.5m between vehicle tilt & static objects such as doors, walls, etc.
- ✓ Ensure all non essential persons keep a safe distance whilst the Jack is in use.
- ✓ Ensure there are no passengers in the vehicle to be jacked up.
- ✓ Place Jack under vehicle manufacturer's recommended lifting points (*see vehicle hand book*).
- ✓ Check that the lifting point is stable and centred on the Jack saddle.
- ✓ Ensure the Jack wheels are free to move and that there are no obstructions.
- ✓ **IMPORTANT !** During the jacking operation ensure that you can always see the vehicle to jack saddle contact point.
- ☐ **DANGER:** *Use the Jack for lifting only, NOT for supporting the lifted load.*
- ✓ Use correct axle stands under the vehicle before proceeding with any task.
- ✓ Ensure there are no persons or obstruction beneath the vehicle before lowering.
- ✓ Use a qualified person to lubricate and maintain the Jack.
- ✓ Confirm that the recommended *hydraulic jack oil* is used during maintenance.
- ✗ DO NOT operate the Jack if damaged.
- ✗ DO NOT allow untrained persons to operate the Jack.
- ✗ DO NOT exceed the rated capacity of the Jack.
- ✗ DO NOT allow the vehicle to move during jacking.
- ✗ DO NOT use the Jack to move vehicle.
- ✗ DO NOT Jack vehicle which may result in spillage of fuel, battery acid, or dangerous substances.
- ✗ DO NOT work under the vehicle until Axle Stands have been correctly positioned.
- ✗ DO NOT use the Jack for purposes other than which it is intended.
- ✗ DO NOT top up system with brake fluid. Use hydraulic oil only.
- ✗ DO NOT adjust the safety overload valve.
- ✓ When not in use store Jack in a safe, dry, child proof area in the down position.

#### Model 2050CXL Specifications


Capacity . . . . . 2.25Tons  
Min Saddle height . . . . 130mm  
Max saddle height . . . . 500mm  
Max chassis height . . . . 154mm  
Length / width . . . . . 685 x 344  
Weight . . . . . 33kg

#### Model 3000CXD Specifications

Capacity . . . . . 3Tons  
Min Saddle height . . . . 145mm  
Max saddle height . . . . 490mm  
Max chassis height . . . . 154mm  
Length / width . . . . . 685 x 346  
Weight . . . . . 42.0kg

#### Model 3030CXD Rocket-lift Specifications

Capacity . . . . . 3Tons  
Min Saddle height . . . . 145mm  
Max saddle height . . . . 490mm  
Max chassis height . . . . 154mm  
Length / width . . . . . 660 x 346  
Weight . . . . . 42.5kg

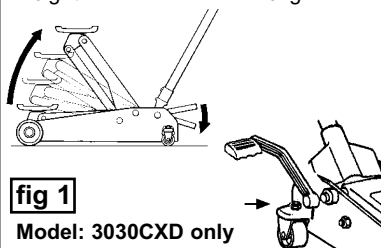

Model: 3030CXD only

### 2. ASSEMBLY

#### 2.1. All Models

- 2.1.1 Line up the holes in the two piece handle and fasten with the assembly screw.
- 2.1.2. Loosen location bolt at the side of the handle base. Insert Jack handle and tighten the bolt.

#### 2.2. Model 3030CXD only.

Assemble Rocket-lift foot pedal arm on main lift arm support pin (fig 1.) and tighten assembly screw using a plain slot screwdriver.

### 3. OPERATING INSTRUCTIONS

#### 3.1. Before first use.

Before using the jack, purge hydraulic circuit in order to eliminate any possible air in the system by turning the handle anti-clockwise to open, and pumping 8 or 9 times (fig 2).

#### 3.2. General jacking.

☐ **WARNING! Before lifting ensure chapter 1 safety instructions are strictly followed.**


- 3.2.1. Prepare the vehicle as mentioned in the safety instructions ensuring the ground on which the Jack is to stand is level and solid (not tarmac/adam).
- 3.2.2. Position the Jack saddle under the vehicle manufacturer's recommended lifting point.

#### 3.3. ROCKET-LIFT PEDAL. MODEL 3030CXD ONLY.

**NOTE: You can use your Rocket-lift jack as a standard trolley jack with out the Rocket-lift pedal. Should this be your intention please ignore references to the Rocket-lift pedal in the following instructions.**

There are two methods of operating the rocket-lift mechanism to raise the jack swiftly to the designated vehicle lifting point.

- 3.3.1. Turn the jack handle clockwise until the valve is closed. Depress the rocket-lift pedal (fig 1) and the saddle will raise and stop once contact is made with the vehicle lifting point. The saddle will then drop back about 60mm.
- 3.3.2. Alternatively, turn handle to the left so the valve is open, operate the foot pedal (fig 1) until saddle is at desired height. Then close the valve quickly. This will avoid the saddle "dropping back".

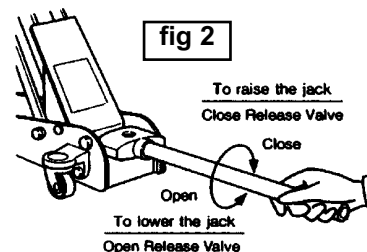


**3.4. Jacking the vehicle.**

- 3.4.1. Turn the handle clockwise to close the valve and commence pumping the handle up and down using maximum strokes until the vehicle reaches the working height.
- 3.4.2. Should the Jack become overloaded, a safety excess pressure valve will open, and stop the vehicle from lifting.
- 3.4.3. Weight Distribution  
Up to 80% of the lifted load is carried by the front Jack wheels placing exceptional stress on the point of contact with the supporting floor. For this reason use on a hard level concrete surface only.

**3.5. Lowering the load**

The lowering speed is controlled by the amount you turn the handle. Lower carefully, avoiding sudden release.

**⚠ WARNING!** Ensure there are no persons or obstacles beneath the vehicle, or in the path of its descent.

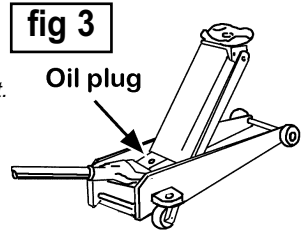

**4. MAINTENANCE**

**IMPORTANT:** Only fully qualified personnel should attempt maintenance or repair.

- 4.1. When the Jack is not in use, the ram and the handle socket should be in their lowest position to minimise corrosion. Remove the handle to inactivate Jack.
- 4.2. Keep the Jack clean and lubricate all moving parts with acid free oil on a regular basis.
- 4.3. To check the oil level, fully lower the Jack. Remove filler plug (fig 3). The correct oil level should be approximately 5mm below the filler opening. If oil level is low, fill as required. Pump unloaded jack 5 or 6 times to expel air and then refit plug.  
**NOTE:** Use a good quality Jack oil, such as SEALEY HYDRAULIC JACK OIL.  
**⚠ WARNING:** DO NOT use brake fluid, or any fluid other than hydraulic jack fluid as this may cause serious damage to the Jack and will invalidate the warranty!
- 4.4. Before each use check for broken, cracked, bent, or loose parts, or any visible damage to welds, ram, pump, saddle, lifting arm, frame and all parts including nuts, bolts, pins and other fasteners. If any suspect item is found remove jack from service and take necessary action to remedy the problem. DO NOT use the jack if believed to have been subjected to abnormal load or shock. Inspect and take appropriate action.
- 4.5. Every three months remove the locking rings on the caster wheels and lubricate the ball bearings with acid free grease.
- 4.6. After a year of extensive use, the oil should be replaced in order to extend the life of your equipment. To drain the oil, remove the filler cap and valve. Make sure that no dirt is allowed to enter the hydraulic system's oil. See 4.3. for refill instructions.
- 4.7. Periodically check the pump piston and piston rod for signs of corrosion. Clean exposed areas with a clean oiled cloth.

**IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE MACHINE.**

Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.

**DO NOT RETURN JACKS TO US.** Please telephone us on 01284 757500 to obtain the address and phone number of your local agent. If Jack is under guarantee please contact your dealer.

**De-commissioning the Jack**

Should the Jack become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the Jack and the oil according to local regulations.

**5. TROUBLE SHOOTING**

PROBLEM	POSSIBLE CAUSE	REMEDY
Jack will not lift the load	1) Overloaded 2) Oil level low 3) Release valve not correctly closed 4) Air in system 5) Piston rod not functioning 6) Packing worn or defective	1) Be sure to use jack with adequate capacity 2) Top up oil level 3) Check and close release valve 4) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try 5) Clean and replace oil 6) Replace packing
Jack does not lift high enough or feels "spongy"	1) Oil level too high or too low 2) Worn seals 3) Air in system 4) Release valve not closed	1) Fill or remove excess oil 2) Return jack to local service agent 3) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try 4) Check and close release valve
Jack lifts poorly	1) Pump packing or valves malfunctioning 2) Oil is dirty 3) Air in the system	1) Replace packing and/or clean valves 2) Replace oil 3) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try
Jack lifts but will not hold load	1) Release valve partially open 2) Dirt on valve seats 3) Air in system 4) Faulty seals 5) Packing worn or defective	1) Check and close release valve 2) Lower jack, close release valve. Place foot on front wheel and pull up lifting arm to it's full height by hand. Open the release valve to lower arm 3) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try 4) Replace packing or contact local service agent 5) Replace packing
Jack will not lower completely	1) Unit requires lubrication 2) Piston rod bent or damaged 3) Jack frame/link system distorted due to overloading/poor positioning 4) Air in system 5) Release valve partially open 6) Jack spring damaged	1) Oil all external moving parts 2) Replace rod or contact local service agent 3) Replace damaged parts or contact local service agent 4) Open release valve and air vent (if fitted) and pump the handle a few times. Close valve and re-try 5) Check and fully open release valve 6) Replace spring or contact local service agent
Jack does not lower at all	1) Release valve still closed	1) Check and fully open release valve

**Declaration of Conformity** We, the sole importer into the UK, declare that the products listed are in conformity with the following EEC standards and directives

**Rocket lift Trolley Jacks**  
**Models 2050CXD, 3000CXD, 3030CXD.**  
 93/68/EEC CE Marking Directive  
 89/392/ Machinery Directive (S.I. 1992/3073 & Amendments)

CE

The construction file for these products are held by the Manufacturer and may be inspected on request by contacting Jack Sealey Ltd

Signed by Mark Sweetman

Date 13th Sept 2001

For Jack Sealey Ltd. Sole importer into the UK of Sealey Quality Machinery

	Sealey Group, Bury St. Edmunds, Suffolk.	01284 757500	01284 703534	E-mail: <a href="mailto:sales@sealey.co.uk">sales@sealey.co.uk</a>
--	--	--------------	--------------	--