



36LTR/ 80LTR MOBILE OIL DRAINER MANUAL DISCHARGE

MODEL NO: **AK36D.V2 & AK80D.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear eye
protection



Wear protective
gloves



Wear protective
clothing

1. SAFETY

- ❑ **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- ✓ Familiarise yourself with the application, limitations and hazards of the oil drainer.
- ✓ Maintain the drainer in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- ✓ Keep the drainer clean for best and safest performance.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✗ **DO NOT** use the drainer for any purpose other than that for which it is designed.
- ✗ **DO NOT** operate the drainer if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** stand on the drainer.
- ✗ **DO NOT** allow untrained persons to operate the drainer.
- ✗ **DO NOT** operate the drainer when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✓ When not in use, store in a safe, dry, childproof area.
- ✓ Dispose of waste oil in accordance with local authority regulations.

2. INTRODUCTION


Polyethylene reservoir, 36/80ltr capacity, mounted on four castors for mobility. Drain pan, with filter, on height adjustable down tube. Hand grips for emptying (AK36D.V2): rotary pump or gravity drain tap for emptying (AK80D.V2)

3. SPECIFICATION

Model No:	AK36D.V2	AK80D.V2
Air Discharge:	No	No
Capacity:	36ltr	80ltr
Collection Bowl Capacity (ltr):	15ltr	15ltr
Gravity Discharge:	No	Yes
Gravity Feed:	Yes	Yes
Manual Discharge:	Yes	Yes
Maximum Height to Pan:	1600mm	1800mm
Minimum Height to Pan:	760mm	940mm
Model No:	AK36D	AK80D
Pump Discharge:	No	No
Suction Probe:	No	No
Temperature Range:	<80°C	<80°C

4. ASSEMBLY

- 4.1. Insert the lower tube through lower tube clamp and secure by tightening the clamp.
- 4.2. Place the tool tray over the lower tube.
- 4.3. Insert the upper tube into the lower tube.
- 4.4. Slide the upper tube retaining clip down the upper tube (press the two ends together to release the grip) until the clip rests on the lower tube at the required level.
- 4.5. Place the drain pan on top of the upper tube.

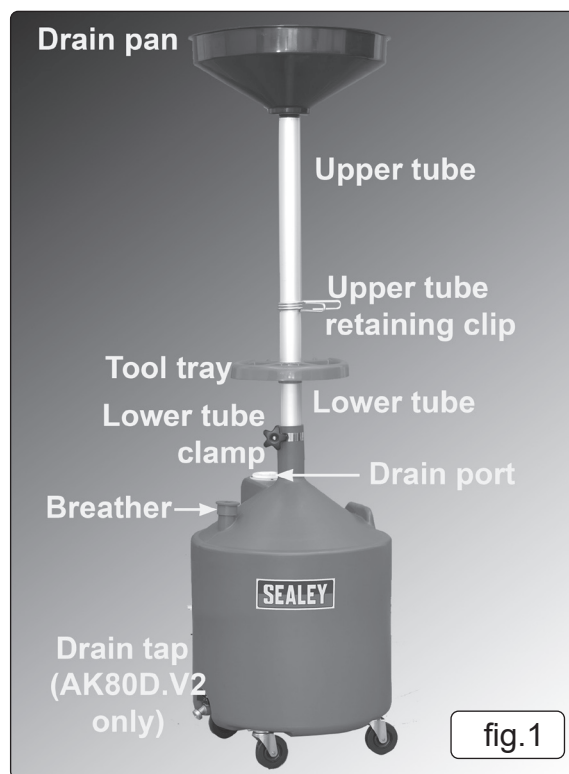

5. OPERATION

- 5.1. Place mobile oil drainer under the equipment to be drained. Raise the drain pan beneath the equipment's drain valve or vent.
- 5.2. When draining is complete, lower the drain pan before removing the drainer.
- 5.3. **EMPTYING OIL DRAINER (AK36D.V2)**
 - 5.3.1. Disconnect the drain pan and release the tubes from the reservoir. Remove the cap from the drain port.
 - 5.3.2. Using the hand grips, tip the reservoir to dispose of the waste oil into a suitable container.
- 5.4. **EMPTYING OIL DRAINER (AK80D.V2) BY GRAVITY.**
 - 5.4.1. Connect a drain hose to the drain tap.
 - 5.4.2. Empty the reservoir by opening the drain tap and draining by gravity to a lower level tank.
- 5.5. **EMPTYING OIL DRAINER (AK80D.V2) BY PUMP.**
 - 5.5.1. Remove the drain port cover and install the pump using the 2" BSP adaptor (fig.2). Ensure that the pick-up tube reaches the bottom of the reservoir.
 - 5.5.2. Fit a suitable hose to the pump outlet and connect to the waste oil tank. Pump out as necessary.



6. MAINTENANCE

- 6.1. Clean the drain pan filter frequently; a blocked filter can cause the drain pan to overflow.
- 6.2. Clean the exterior of the unit regularly with paper towel or cleaning cloth.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk