



## MT/JIG USA

Dear Customer

Thank you for purchasing this Trend product, we hope you enjoy many years of creative and productive use.

Please remember to return your guarantee card within 28 days of purchase.

### CONTENTS

|   |              |
|---|--------------|
| <b>TECHNICAL DATA</b>                       | <b>1</b>     |
| <b>SAFETY</b>                               | <b>2-3</b>   |
| <b>ITEMS ENCLOSED</b>                       | <b>4</b>     |
| <b>DESCRIPTION OF PARTS</b>                 | <b>5</b>     |
| <b>ACCESSORIES</b>                          | <b>6</b>     |
| <b>ASSEMBLY &amp; ADJUSTMENT</b>            | <b>7</b>     |
| – Assembly of the Top Plate                 | <b>8</b>     |
| – Bit & Guide Bush Selection                | <b>9</b>     |
| – Fitting of Guide Bushes                   | <b>10</b>    |
| – Fitting the Optional Dust Extraction Kit  | <b>11</b>    |
| <b>TIMBER PREPARATION &amp; MARKING OUT</b> |              |
| – Marking out the tenon                     | <b>12</b>    |
| <b>OPERATION</b>                            |              |
| – Set Timber Height                         | <b>13</b>    |
| – Set Tenon Length                          | <b>14</b>    |
| – Set Centre Line                           | <b>15</b>    |
| – Routing Procedure                         | <b>16</b>    |
| – Side Angled Tenon                         | <b>17</b>    |
| – Front Angled Tenon                        | <b>18</b>    |
| – Setting Up for the Mortise                | <b>19</b>    |
| – Cutting the Mortise                       | <b>20</b>    |
| – Square Mortise & Tenons                   | <b>21</b>    |
| – Dowelling                                 | <b>22-23</b> |
| <b>MAINTENANCE</b>                          | <b>23</b>    |
| <b>RECYCLING</b>                            | <b>23</b>    |
| <b>GUARANTEE</b>                            | <b>23</b>    |
| <b>SPARE PARTS</b>                          |              |
| – Spare Parts List                          | <b>24</b>    |
| – Spare Parts Diagram                       | <b>IB</b>    |

### TECHNICAL DATA

|                         |      |             |
|-------------------------|------|-------------|
| Material thickness      | min. | 1/2"        |
|                         | max. | 2"          |
| Width of material max.* |      | 4"          |
| Tenon size              | min. | 3/16"       |
|                         | max. | 5/8"        |
| Angle tilt compound     |      | -10° to 45° |
| Weight                  |      | 13.2lbs     |

\*unlimited if wood repositioned

The following symbols are used throughout this manual:



Denotes risk of personal injury, loss of life or damage to the tool in case of non-observance of the instructions in this manual.



Refer to the instruction manual of your power tool.

For Technical Support  
Email: [technical@trend-usa.com](mailto:technical@trend-usa.com)



**IMPORTANT!**  
**For use with Plunge Routers only**



#### Caution

Carefully read through this entire instruction Manual and the entire router Operator's Manual before using your new Routasketch. Pay close attention to the Safety section and the Safety Symbols. If you use your Routasketch properly and only for what it is intended, you will enjoy years of safe, reliable service.



The operation of any router can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety glasses with side shields and a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always wear eye protection.

### SAFETY



Observe the safety regulations in the instruction manual of the Power Tool to be used or connected to this attachment. Also observe any applicable additional safety rules. Read the following safety instructions before attempting to operate this product.

#### PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

##### General

- Disconnect power tool, when not in use. Before servicing and when changing accessories such as bits. Disconnect power tool and attachment from power supply. Ensure the machine is switched off before plugging tool in or connecting to a power supply.
- Always mount the power tool, accessory or attachment in conformity with the present instructions.
- Keep children and visitors away. Do not let children or visitors touch the tool, accessory or attachment. Keep children and visitors away from work area.
- Make the workshop child proof with padlock and master switch.
- Dress properly. Do not wear loose clothing or jewellery, they can be caught in moving parts. Rubber gloves and non-skid footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
- Consider working environment. Do not use the product in the rain or in a damp environment. Keep work area well lit. Do not use power tools near gasoline or flammable liquids. Keep workshop at a comfortable temperature so your hands are not cold.
- The accessory or attachment must be kept level and stable at all times.
- Keep work area clean. Cluttered workshops and benches can cause injuries
- Use the attachment with the power tools and accessories specified in this manual only. Do not force the tool or attachment to do a job for which it is not designed.
- Secure idle tools. When not in use, tools should be stored in a dry and high or locked up place, out of reach of children.
- For best control and safety use both hands on the power tool and attachment. Keep both hands away from cutting area. Always wait for the spindle and bit to stop rotating before making any adjustments.
- Always keep guards in place and in good working order.
- Remove any nails, staples and other metal parts from the workpiece.
- Maintain tools and bits with care. Keep bits sharp and clean for better and safer performance. Do not use damaged bits. Follow instructions for lubricating and changing accessories. Keep handles dry, clean and free from oil and grease.
- Maintain accessories. Do not use damaged accessories. Only use accessories recommended by the manufacturer.
- Check damaged parts. Before operation inspect the attachment, the power tool, the cable, extension cable and the plug carefully for signs of damage. Check for alignment of moving parts, binding, breakage, mounting and any other conditions that may effect its operation. Have any damage repaired by an Authorised Service Agent before using the tool or accessory.
- Do not use tool if switch does not turn it on or off. Have defective switches replaced by an Authorised Service Agent.
- Don't over reach. Keep proper footing and balance at all times.
- Don't abuse the cable. Never carry power tool or accessory by cord or pull it to disconnect from the socket. Keep cord from heat, oil and sharp edges. Always trail the power cord away from the work area.
- Connect dust extraction equipment. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.
- Check all fixing and fastening nuts, bolts and screws before use to ensure they are tight and secure. Periodically check when machining over long periods.
- Stay alert. Watch what you are doing. Use common sense. Do not operate tools when you are tired, under the influence of drugs, alcohol or any medication.
- Personal Protective Equipment (PPE). All PPE must meet current legislation.
- Do not leave tools running unattended. Do not leave tool until it comes to a complete stop.
- Always clamp workpiece being machined securely.

##### Routing Safety

- Disconnect router power tool. When not in use, before servicing and when changing accessories such as bits, disconnect router and attachment from power supply.
- Ensure router bit has stopped rotating before changing it. Never use the spindle lock as a brake.
- Remove adjusting keys and wrenches. Form the habit of checking to see that keys and adjusting wrenches are removed from the router tool, bit and attachment before turning router on. Make sure bit can rotate freely.
- Check all ball bearing and blade fixing screws before use to ensure they are tight and secure. Periodically check when machining over long periods.
- When using a template guide bush ensure it cannot come into contact with collet and nut.
- Noise. Take appropriate measures for the protection of hearing if the sound pressure of 85dB(A) is exceeded. Routing sound pressure may exceed 85dB(A), so ear protection must be worn.
- Eye protection. Wear safety goggles, spectacles or visors to protect the eyes from ejected waste particles.
- Respiratory protection. Wear a face or dust mask, or powered respirator. Dust masks/filters should be changed regularly.
- Do not switch router on with the bit touching the workpiece.
- The direction of routing must always be opposite to the bits direction of rotation.
- After work, release the router plunge and allow spindle to stop rotating before putting machine down.
- Check before cutting that there are no obstructions in the path of the router. When cutting through the full thickness of the workpiece, ensure there are no obstacles beneath workpiece, and that a sacrificial work surface is used.

### Additional Safety Rules For Router Bits

- Cutting tools are sharp. Care should be taken when handling them.
- Always use bits with a shank diameter corresponding to the size of the collet installed in your tool.
- Always run router bits at the spindle speed recommended and marked accordingly. Ensure bit has reached correct speed before entering workpiece. Recommended speeds can be found on the packaging, in cutter instructions or in the Trend Routing Catalogue.
- Always use router bits in a router. Router bits must not be used in a drill. Drill and boring bits must not be used in a router. Router bits must only be used for the material cutting application for which they are designed. Do not use on metal or masonry.
- Never use bits with a diameter exceeding the maximum diameter indicated in the technical data of the power tool or attachment used.
- Do not drop bits or knock them against hard objects. Do not use bits that are damaged.
- Bits should be kept clean. Resin build up should be removed at regular intervals with Resin Cleaner®. The use of a dry lubricant (Trendicote® PTFE) will act as a preventative. Do not use PTFE spray on plastic parts.
- Router bit shanks should be inserted into the collet to the mark line on the shank. This ensures that at least  $\frac{3}{4}$  of the shank length is held in the collet. Do not over-tighten the collet nut as this will score the shank and create a weakness and fracture point.
- Observe the correct assembly instructions in the router instruction manual for fitting the collet and nut. Observe the router power tool manual instructions on fitting bits correctly.
- It is advisable to periodically check the collet and collet nut. A worn, distorted or damaged collet can cause vibration and damage the shank, and should be replaced. Worn collet nuts should be replaced.
- Do not take deep cuts in one pass; take several shallow or light passes to reduce the side load applied to the bit. Too deep a cut in one pass can stall the router.

- Very small diameter bits must be handled and used with care.
- Always return bit to its packaging after use.
- Should you experience excessive vibration during use stop immediately. Have the eccentricity of the router, router bit and clamping system checked.
- All fastening screws and nuts should be tightened using the appropriate wrench or key in accordance with the manufacturers instructions.
- When using arbor type multi-groover sets ensure that the groover cutting tips/wings are staggered at 90° to each other to reduce the cutting impact.

### Using Routers In A Fixed Position

- After work, release the router plunge to protect the bit.
- Always use a push-stick or push-block for last 12" of the cut.
- Whenever possible use a work holding device or jig to secure component being machined. Fit a splch block to the holding device or mitre fence to prevent break out on the timber.
- Ensure attachment is securely fitted to the workbench, with table surface at approximately hip height.
- Ensure a No-Volt Release Switch is fixed to or adjacent to the attachment and that it is used correctly.
- Check the feed direction of the workpiece is always opposite to the bits direction of rotation. Ensure that, when using a router table, you stand to the front right hand side of the table (when viewed from the front) and feed from right to left. When using an overhead router, stand to the front left hand side (when viewed from the front) and feed left to right.
- Do not use awkward or uncomfortable hand positions.
- Do not reach underneath table or put your hands or fingers at any time in the cutting path while tool is connected to a power supply.

### Useful Advice When Routing

- Trial cuts should be made on waste material before starting any project.

- Judge your feed rate by the sound of the motor. Feed the router at a constant feed rate. Too slow a feed rate will result in burning.
- Take many light passes rather than one deep cut to reduce the side load applied to both router and router bit.
- When using some attachments including a router table or dovetail jig, the use of a fine height adjuster is highly recommended.
- When using a template guide bush, ensure there is sufficient clearance between router bit tip and inside edge of bush. Ensure bit and guide bush are concentric.


### Router Bit Maintenance

- Composite cutting tools (brazed tip) must be maintained by a competent person i.e. a person of training and experience, who has knowledge of the design requirements and understands the levels of safety to be achieved.
- The design of composite tools must not be changed in the process of maintenance.
- Replacement parts must meet Trend specification.
- Tolerances which ensure correct clamping by the collet shall be maintained.
- When re-grinding the tool, care must be taken not to cause weakening of the body or the connection between the cutting edge and the body.




# MT/JIG USA

## ITEMS ENCLOSED

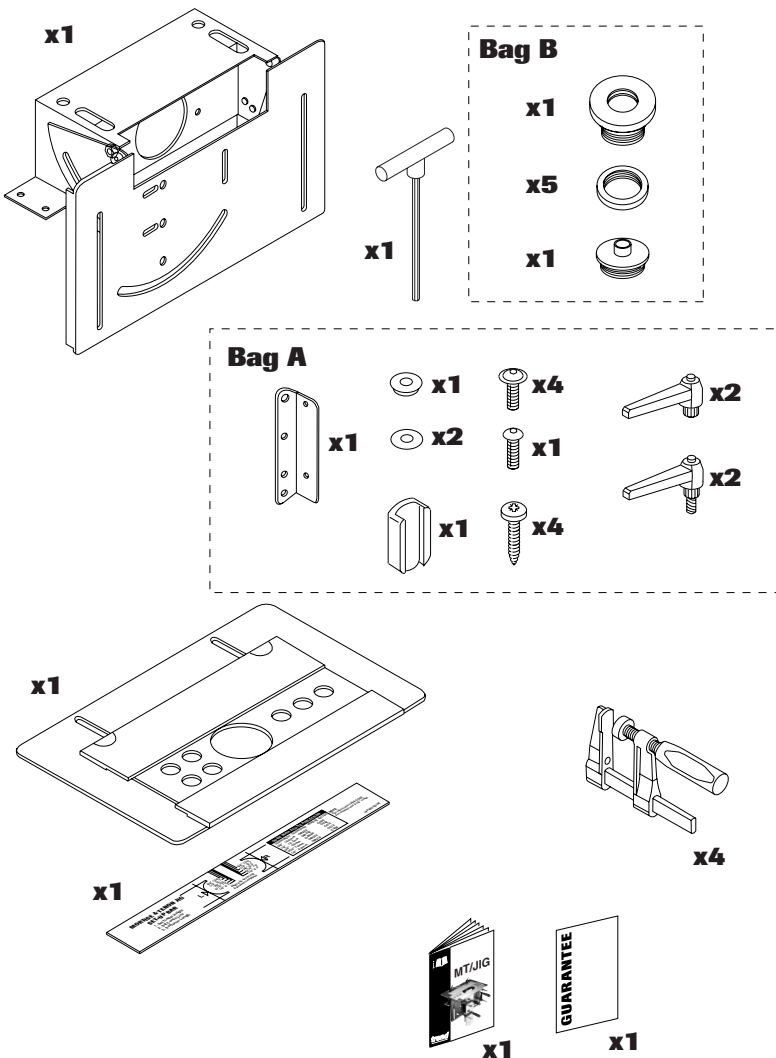

**DESCRIPTION  
OF PARTS**

- ① Female adjustable lever
- ② Top plate assembly
- ③ Template clamp (back)
- ④ Long template
- ⑤ Set-up bar
- ⑥ Template clamp (front)
- ⑦ Male adjustable lever
- ⑧ F clamp handle
- ⑨ Short template
- ⑩ Main body
- ⑪ Tilting back plate
- ⑫ Vertical guide
- ⑬ Flanged machine screw
- ⑭ F Clamp Bar
- ⑮ 2-1/8" Bush
- ⑯ Threaded ring
- ⑰ Template bushes
- ⑱ F clamp cap

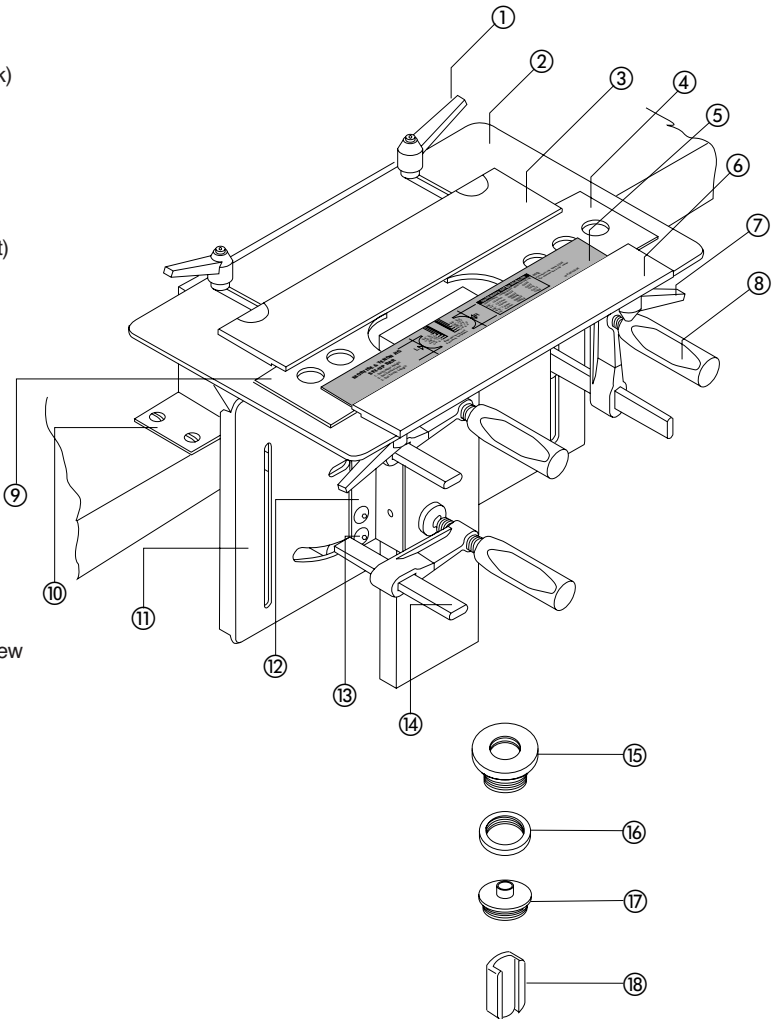


**ACCESSORIES**

**Suitable router bits**

Although standard router bits can be used having the appropriate diameter, a set of five long reach straight bits with 1/4" shank are available. Spiral bits can also be used for an improved finish.

Ref. SET/MT1X1/4TC

| Dia.  | Ref. | Set Ref. |
|-------|------|----------|
| 1/4"  | C008 | SET/MT1  |
| 5/16" | C012 |          |
| 3/8"  | C015 |          |
| 1/2"  | C022 |          |
| 5/8"  | C026 |          |

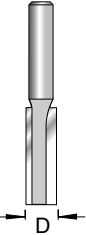


Other cutters for alternative Tenon Sizes

| Dia.  | Ref. | Template Bush |
|-------|------|---------------|
| 3/16" | C003 | 1- 5/16"      |
| 7/16" | C018 | 1- 1/16"      |
| 9/16" | C024 | 15/16"        |


**Optional Extraction Dust Kit**

For dust-free working, this kit allows connection to a 1-1/2" or 2-1/4" hose. The dust shield is only used when routing 90° tenons.


Ref. MT/DUSTKIT

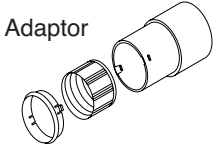

Adaptor

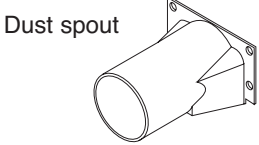


Dust spout

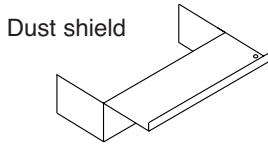


Dust shield

**ASSEMBLY & ADJUSTMENT**


① Secure the tilting back plate in its 45° position with the two hex screws.

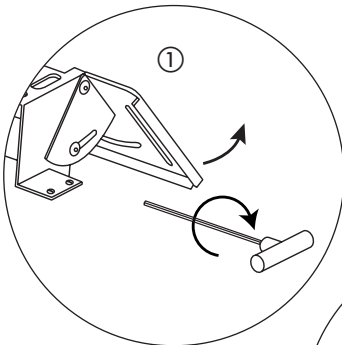


② Position the main body on the edge of the workbench or workboard and drill four 1/8" holes 5/8" deep.

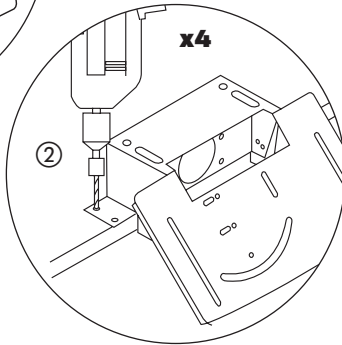

③ Secure the jig with the 4 self-tapping screws with a No.2 Pozzi screw driver.

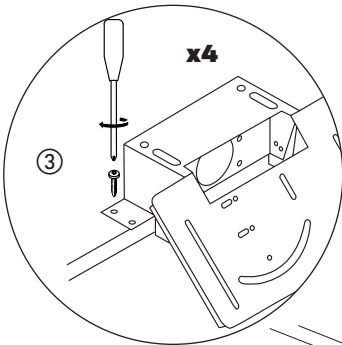


④ Fit the three F clamps and vertical guide as shown. Noting that the longer hex screw without a flange is used in conjunction with the pivot bush.

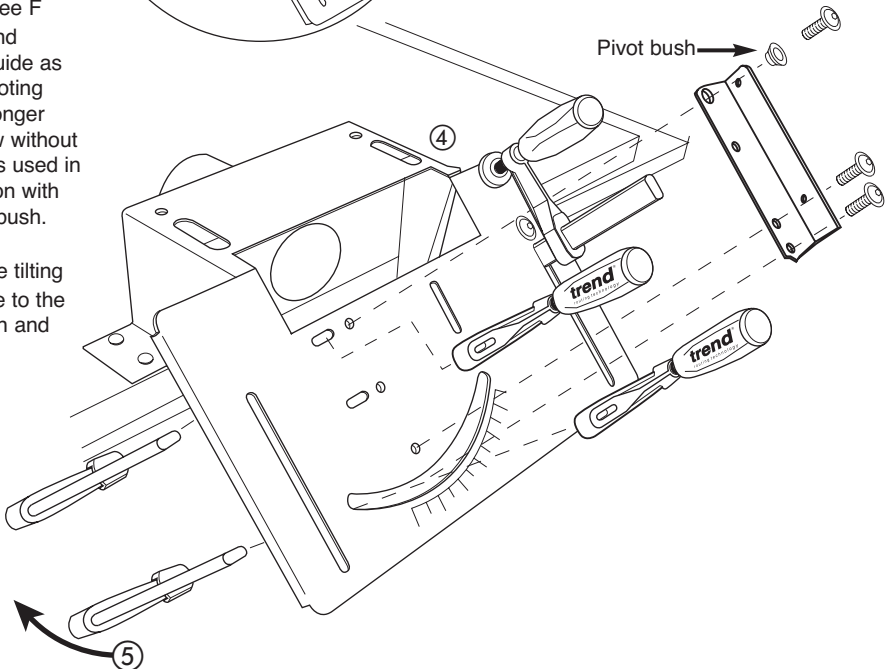


⑤ Return the tilting back plate to the 0° position and lock.

**Assembly of the Top Plate**

- ① Remove the transit nuts with a spanner and discard.
- ② Fit the two female adjustable levers. If fitting the optional dust extraction kit refer to page 11.
- ③ Turn the top plate over so that it's facing up and secure the top plate with the two male adjustable levers and washers.

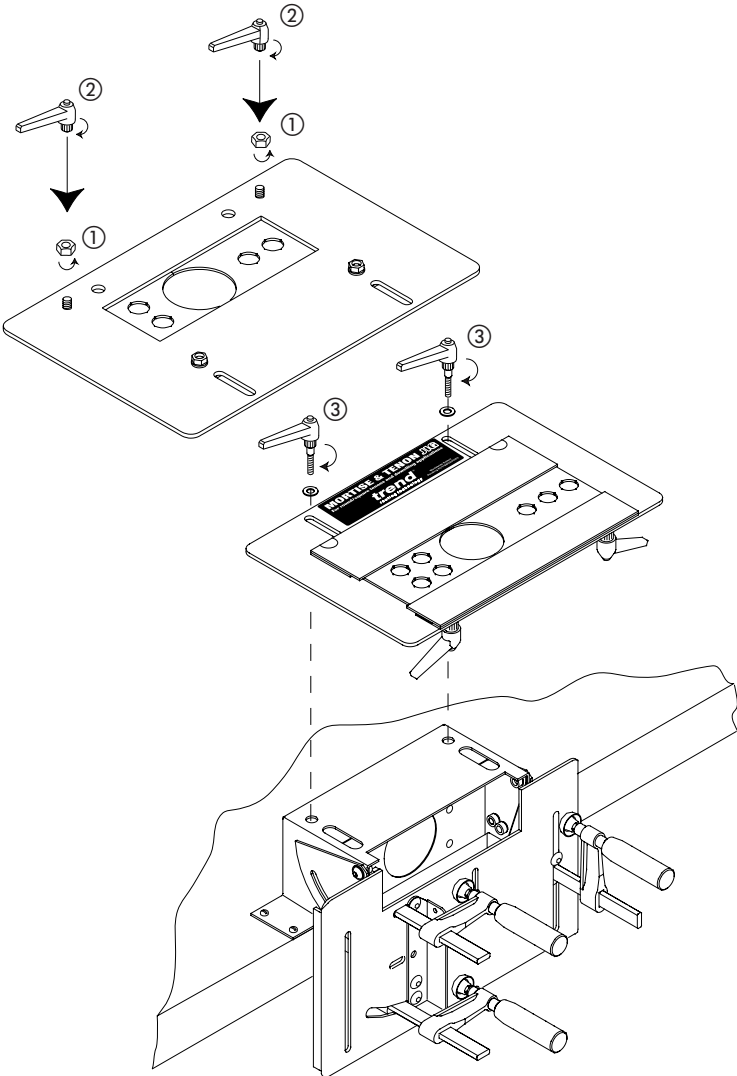

**To adjust tightness of the templates undo the nuts on the underside of the top plate. Holding the plate clamping piece by the thumb notches, gently tap the plate to reset. Tighten the nuts to secure.**

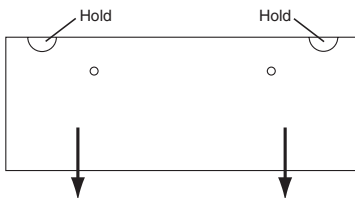




**Bit & Guide  
Bush  
Selection**

①


$$X = \frac{W}{3}$$

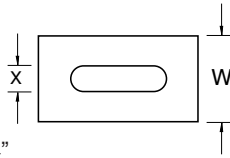


**Example**

Tenon Width (X) =  $\frac{\text{Timber width of (W) } 3\frac{1}{4}'' = 1\frac{1}{4}''}{3}$

① Calculate an appropriate tenon width 'X' for the timber width 'W' e.g. X = 1/4" and choose the nearest appropriate tenon width from the chart below.

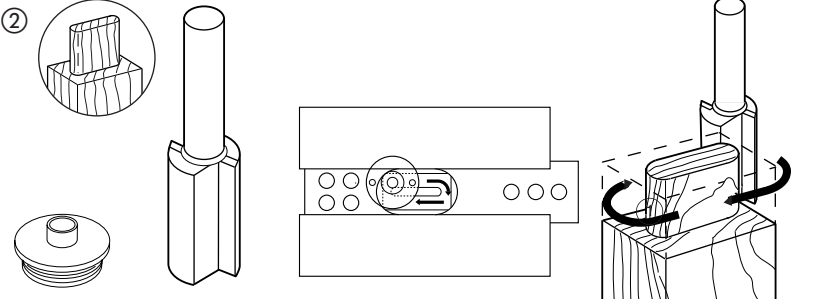

② For the tenon choose the appropriate guide bush diameter 'D' from the chart below for the tenon width, e.g. D = 1 1/4". Tenon bit will always be Ref. C026.

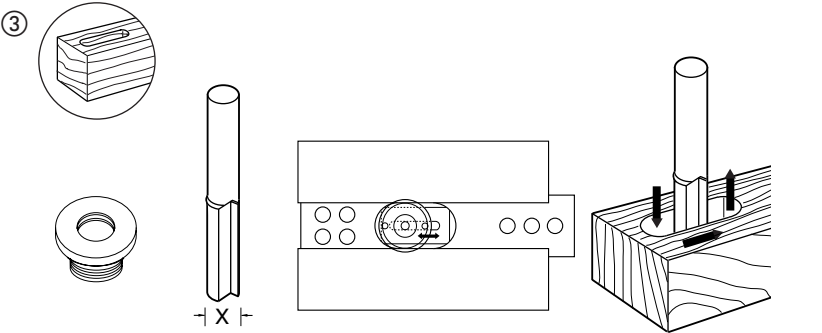


③ For the mortise choose the bit to suit the tenon width 'X' e.g. C008. Guide bush will always be the 2 - 1/8" bush.

| <b>TENON WIDTH</b><br>Imperial<br><b>X</b> | <b>TENON</b>                    |                 |          | <b>MORTISE</b>  |          |
|--|---------------------------------|-----------------|----------|-----------------|----------|
|  | Guide Bush Diameter<br><b>D</b> | Guide Bush Ref. | Bit Ref. | Guide Bush Dia. | Bit Ref. |
| 1/4"                                       | 1 1/4"                          | GB318           | Use      | Use             | C008     |
| 5/16"                                      | 1 3/16"                         | GB302           | C026     | 2-1/8"          | C012     |
| 3/8"                                       | 1 1/8"                          | GB286           | for      | for             | C015     |
| 1/2"                                       | 1"                              | GB254           | all      | all.            | C022     |
| 5/8"                                       | 7/8"                            | GB222           | cuts.    |                 | C026     |
| <b>Other sizes possible.*</b>              |                                 |                 |          |                 |          |
| 3/16"                                      | 1 5/16"                         | GB333           |          |                 | C003     |
| 7/16"                                      | 1 1/16"                         | GB27            |          |                 | C018     |
| 9/16" (14.                                 | 1 5/16"                         | GB238           |          |                 | C024     |

\*Guide bushes not included with jig.

**Fitting the  
Template Guide  
Bush**

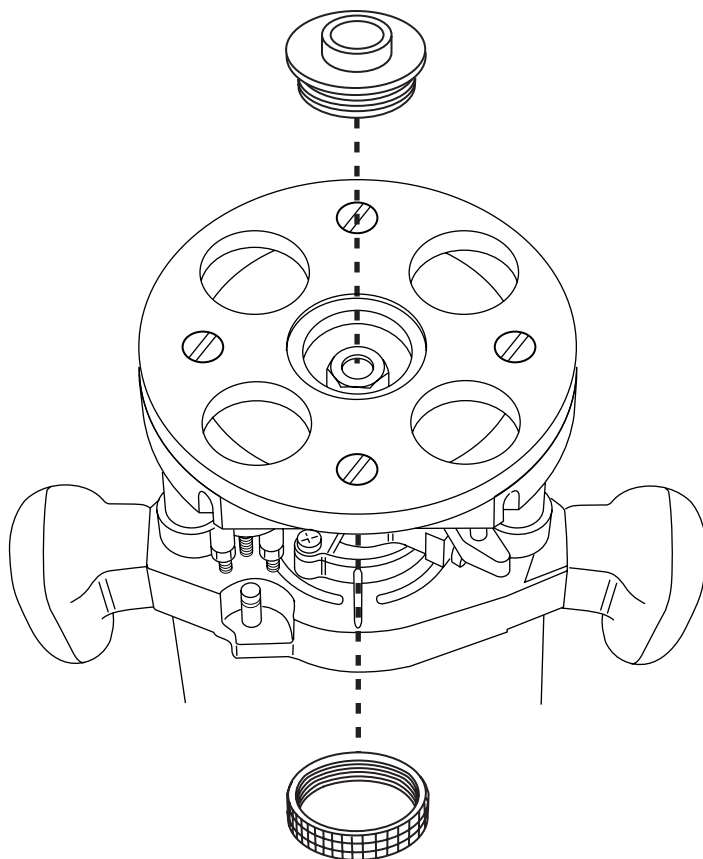

**Fitting the  
Optional Dust  
Extraction Kit.**


**MT/DUSTKIT**

① Fit the dust spout using the 4 bolts, shake-proof washers and nuts.

② Assemble the ring, fitting and body of the adaptor onto the 1-1/2" hose if required.


③ Fit the two magnets by gently knocking them into the front edge on the underside of the top plate with a wooden mallet until flush.

④ The optional dust shield should only be fitted when cutting 90° tenons. It is held in place by magnets.

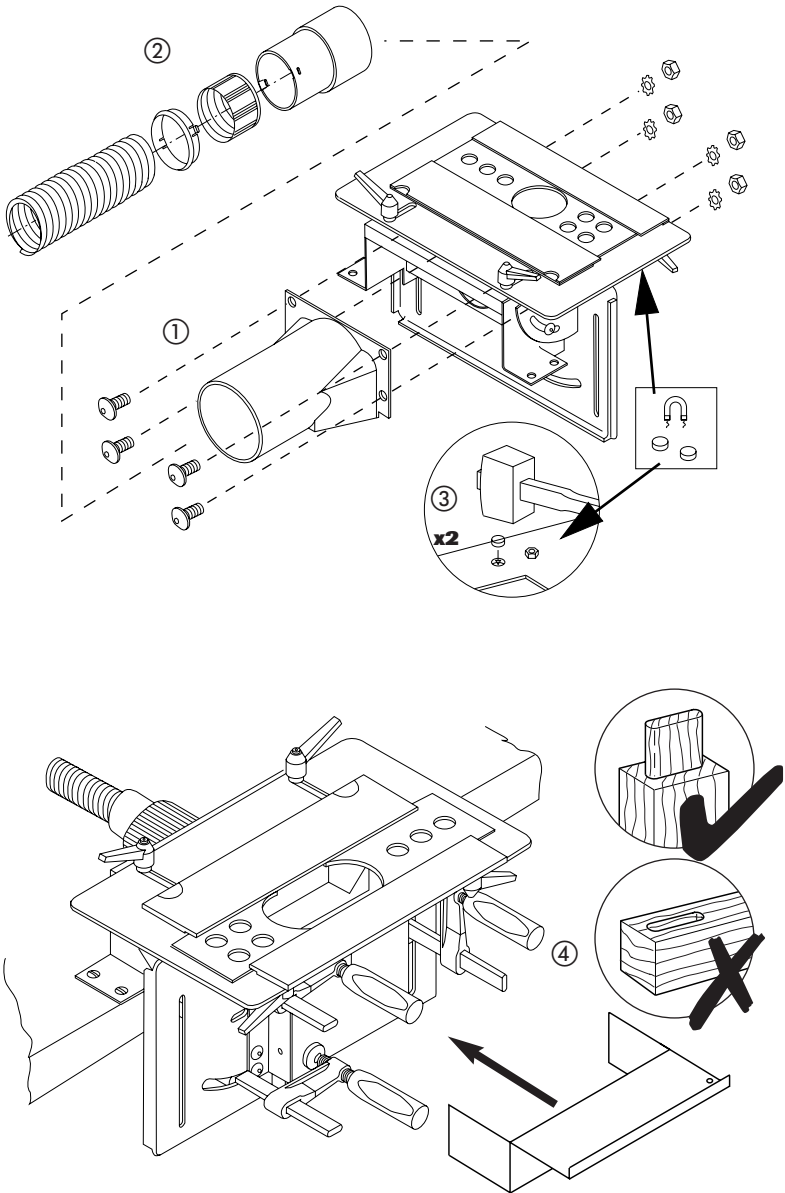

**TIMBER PREPARATION  
& MARKING OUT**

**Marking Out  
the Tenon**

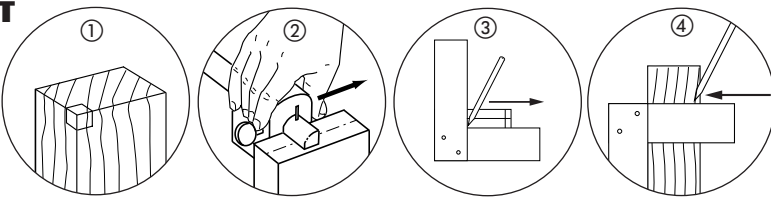



① It is essential that the timber is square all round. Study the drawings and select the appropriate type of tenon.

② Mark up the centre line on the end of the first piece of timber using a marking gauge.



③ Mark the tenon end marks using a set square. Generally aim for the end tenon marks to be equal to the width of the tenon (X). This may not always be possible for side angled tenons as the length of the tenon and the angle required may cause restrictions.

④ Mark out the length of the tenon. Generally keep the tenon as long as possible for increased gluing surface. For through tenons, make the tenon length equal to the timber width plus 1/8" for trimming afterwards



**Straight tenon**

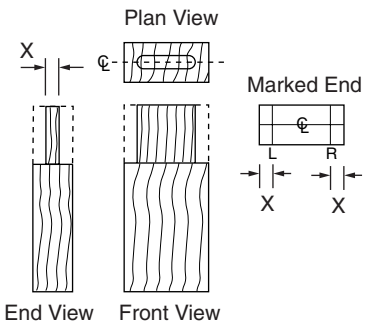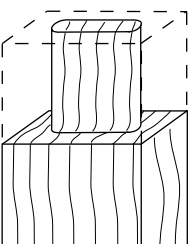

**30° Side angled tenon**

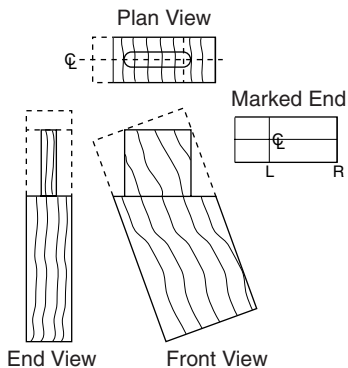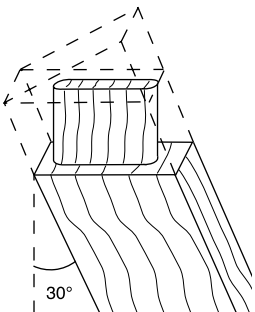


**15° Front angled tenon**

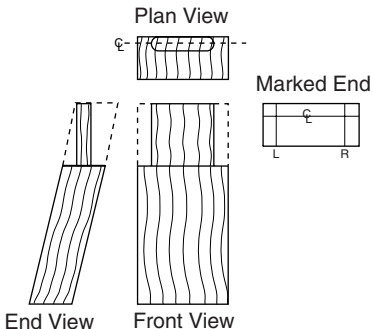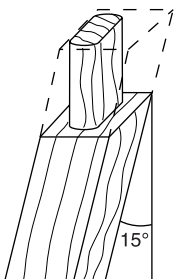

**When mounting timber in the jig keep the face side towards the jig.**


**OPERATION**

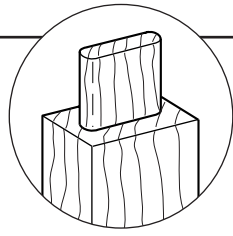

**Set Timber Height**




- ① Place set-up bar on templates and push it against touching clamping plate (A).
- ② & ③ Place timber up against vertical guide (B) and raise until it touches downstand of set-up bar.
- ④ Tighten F clamp handles securely.

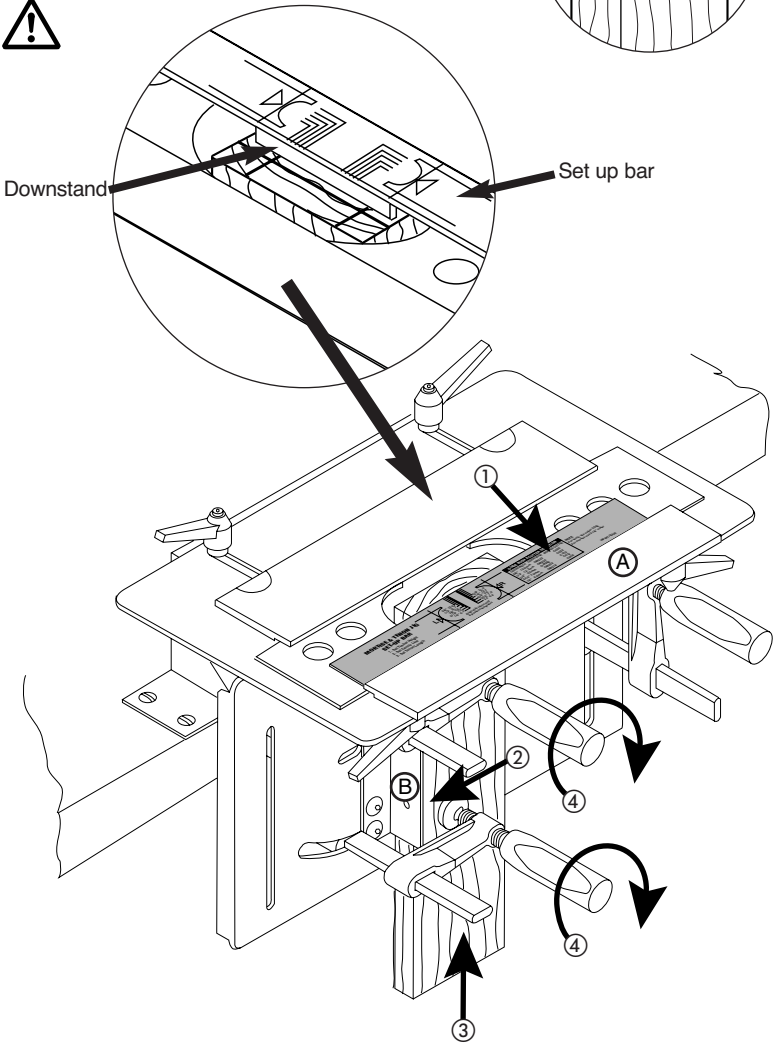





**MT/JIG USA**

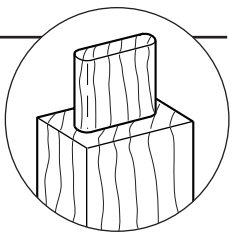



**Set Tenon Length**

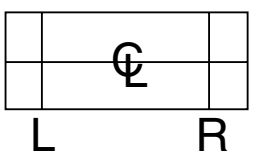


- ① Release levers.
- ② Align mark on set-up bar with relevant left hand tenon mark. E.g. 1/4" mark if using 3/4" timber.
- ③ Slide left hand template to the right until it contacts the down stand of the set up bar.
- ④ Tighten lever.
- ⑤ Repeat procedure ① to ④ for right hand template using relevant right hand mark on set-up bar.

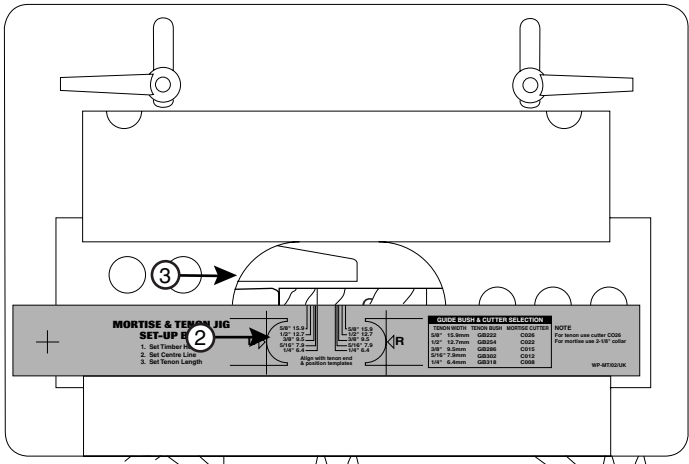

**NOTE:**  
**Problems with tenons of 5/8" may occur as corners of the timber may remain after normal routing procedures. This can be overcome by routing material A and B prior to routing the tenon. First move the top plate approximately 1/4" forwards and rout away material A. Then move the top plate 1/4" rearwards of the tenon centre line and rout away material B. Then continue to set-up the top plate and rout as normal.**

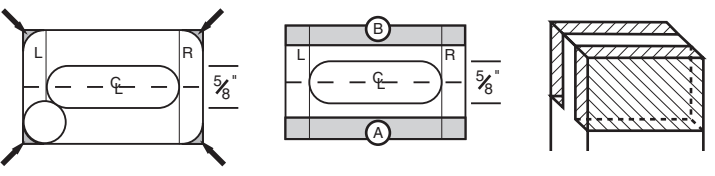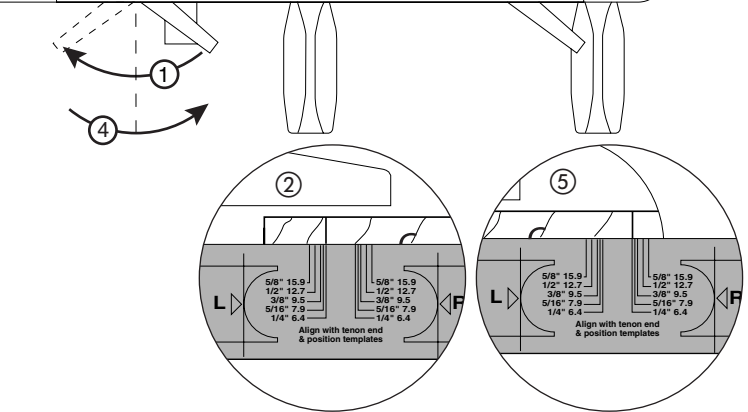


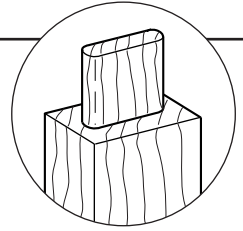


**Set Centre Line**



- ① Release levers.
- ② Adjust position of top plate until the down stand of the set-up bar aligns with the centre line.
- ③ Tighten levers.

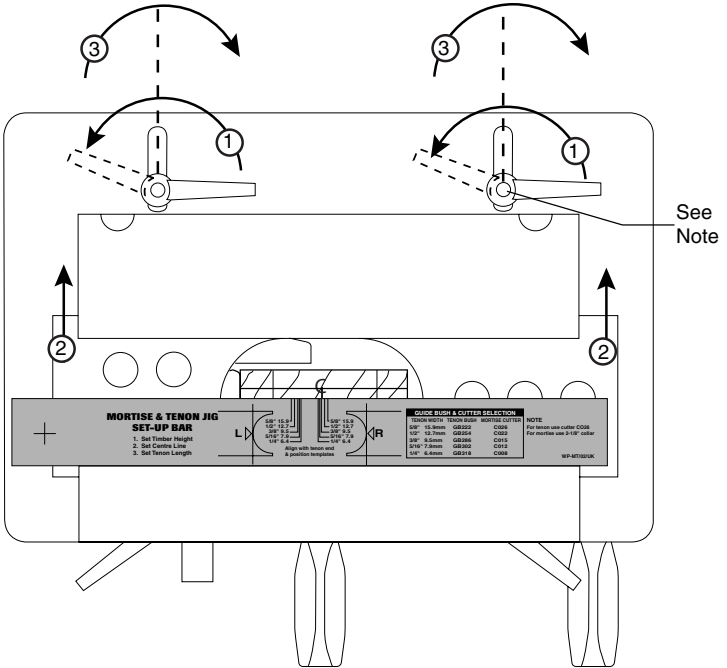



**NOTE:**  
If routing a long mortise on maximum size timber it may be necessary to remove the right hand male adjustable lever and replace it with an unused F clamp flanged machine screw Ref. WP-SCW/73.

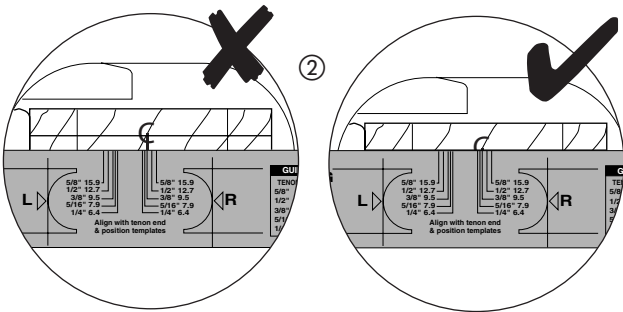



**Routing Procedure**




① After fitting the C026 bit and appropriate guide bush, lower cutter down until it touches end of timber and lock off plunge of router.

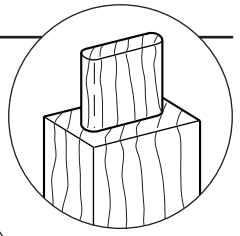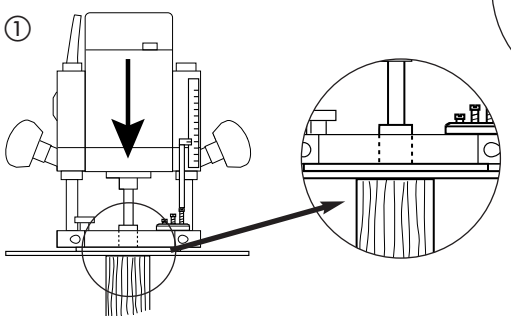

② Raise and lock the depth stop to the length of the tenon required.

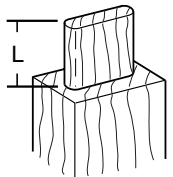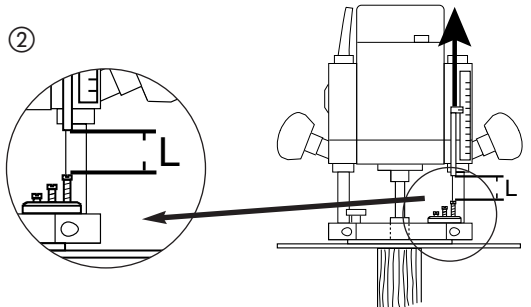


③ Plunge and rout in a clockwise direction at a depth of no more than 3/16" in repeated passes until the full depth is reached as set by the depth stop. However care should be taken to ensure the guide bush is kept firmly pressed against the circles of the templates and edges of the clamping plates. Should some splintering of the timber occur then pre-scribing the shoulder line with a sharp knife is advisable.

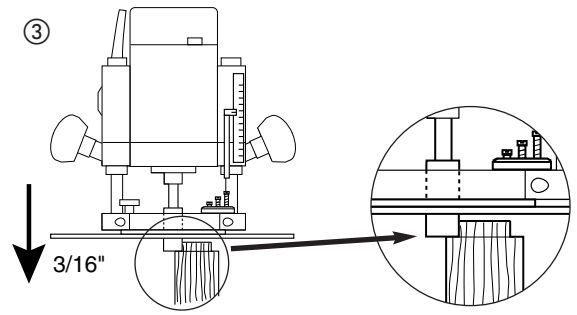


**Retract bit into the router base before raising the router up from the jig.**




**Take shallow passes at a slow steady pace with a sharp cutter to prevent snatching.**

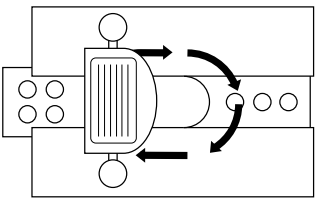





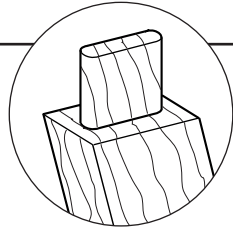



**Side Angled Tenon**

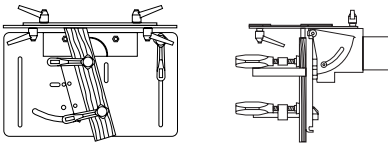

- ① Remove bolt (A) if fitted. Undo bolt (B). Remove the lower F clamp head. Adjust the position of the vertical guide as required.

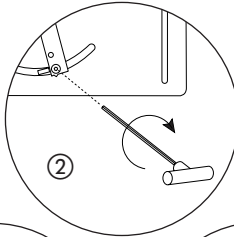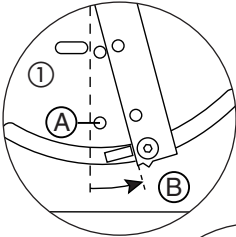

- ② Tighten the bolt (B) with the hex key and refit the F clamp head.

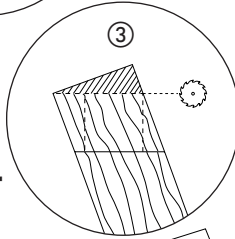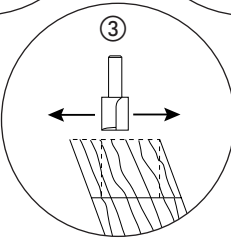


or

- ③ Rout the end of the timber parallel to the top plate or cut it at the appropriate angle on a snip-off saw.





- ④ Fit and clamp the timber at the correct height using the set-up bar. (See p.13)

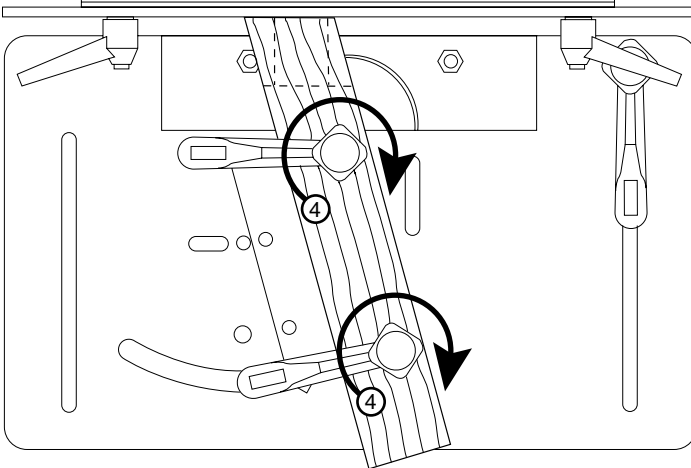




Set the templates to the required tenon length. (See p.14)

Set the top plate to the centre line. (See p.15)





- ⑤ Set the depth of cut and rout in increasing depths to complete the tenon. (See p.16)

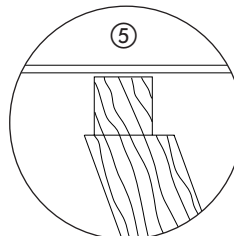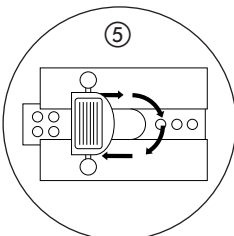

**Front Angled Tenon**

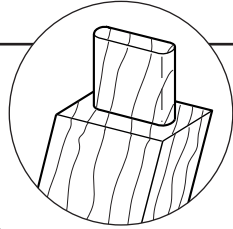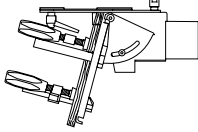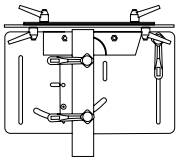

- ① Remove the two side bolts. Adjust the tilting back plate to the position required.
- ② Tighten the two side bolts with the hex key.
- ③ Rout the end of the timber parallel to the top plate or cut at the appropriate angle on a snip-off saw.

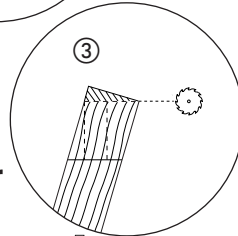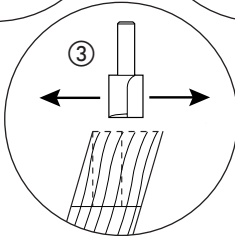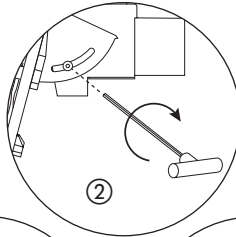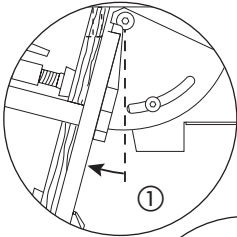


or

- ④ Fit and clamp the timber at the correct height using the set-up bar. (See p.13)



Set the templates to the required tenon length. (See p.14)

Set the top plate to the centre line. (See p.15)

- ⑤ Set the depth of cut and rout in increasing depths to complete the tenon.

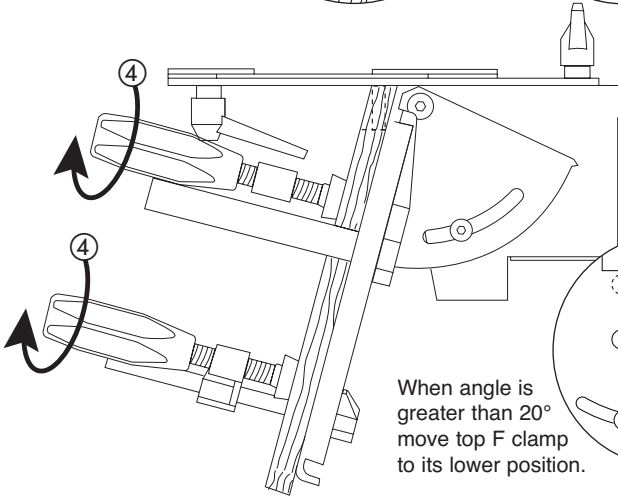

When angle is greater than 20° move top F clamp to its lower position.

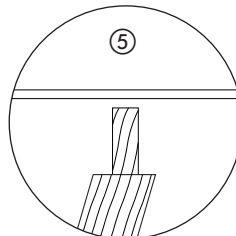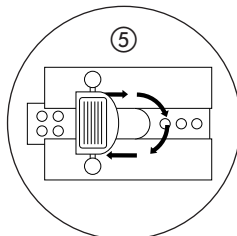

**Setting Up for the Mortise**



**(A)**  
① Clamp the timber for the mortise horizontally flush underneath the top plate.


② When narrow timbers are to be used and when the mortise is at the end of the timber, the fourth F clamp can be used to secure it. The plastic cap should be fitted as shown.

③ A scrap piece of timber can also be clamped vertically to give support and to assist in positioning of the horizontal timber.






**(B)** This alternative set-up with fourth F clamp fitted in position on the left slot of the tilting back plate can be used.

**(C)** Wider timber can be also accommodated by using the top clamp of the vertical guide.

**(D)** Or removing the vertical guide and clamps and using a clamp in the left slot of the tilting back plate.

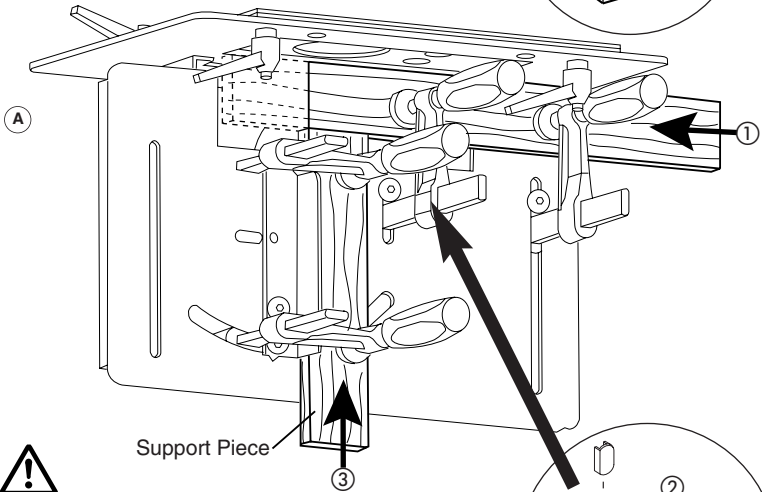



**When cutting at the end of the timber it is advisable to add extra support or alternatively use a longer length of timber and then cut it to length.**

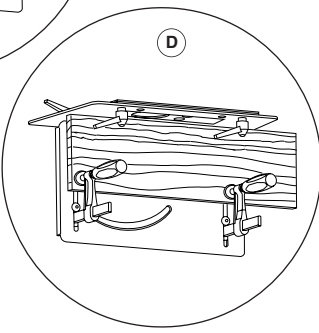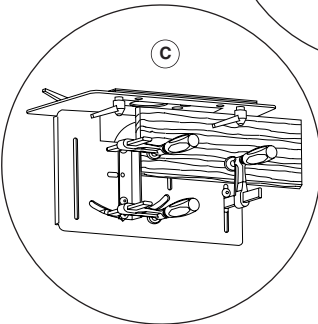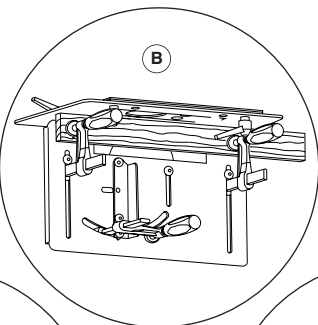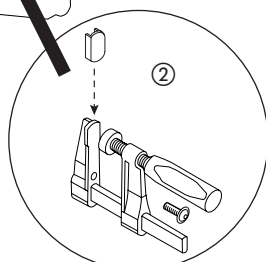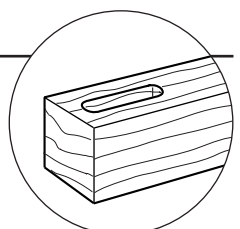


**Cutting the Mortise**




① After fitting appropriate bit and 2-1/8" template guide bush. Lower bit down until it touches end of timber and lock off plunge of router.

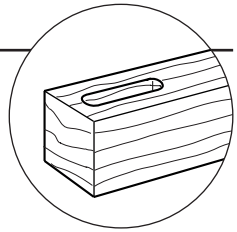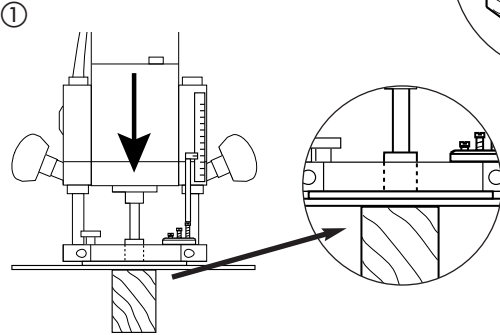


② Raise and lock the depth stop to the length of the tenon required plus 1/16".

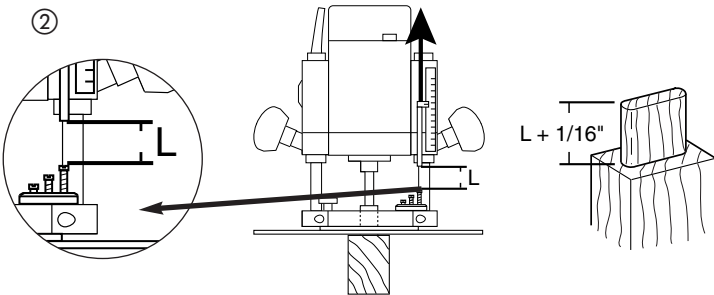

③ Plunge and rout backwards and forwards at a depth of no more than 3/16" in repeated passes until the full depth is reached as set by the depth stop.

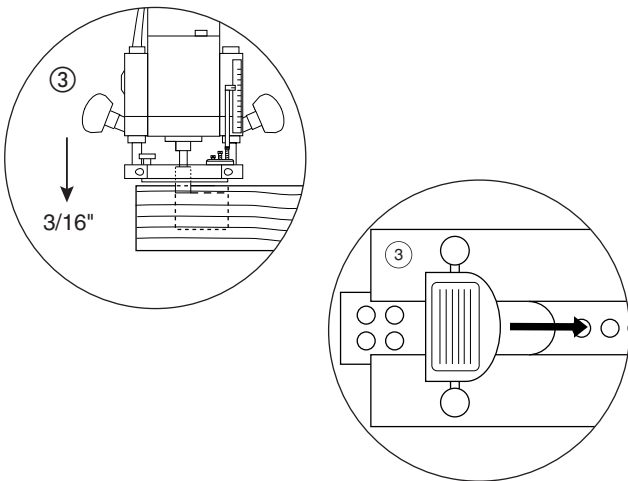

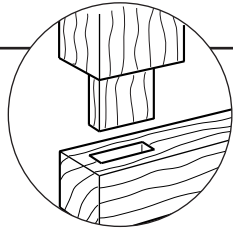


**Square Mortise & Tenons**




**Tenons**

- ① Release locking levers.
- ② Turn each template around. Set-up positions of top plate and templates as for round tenons.


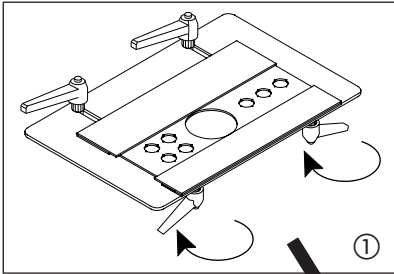


- ③ Rout in a clockwise direction following the template.

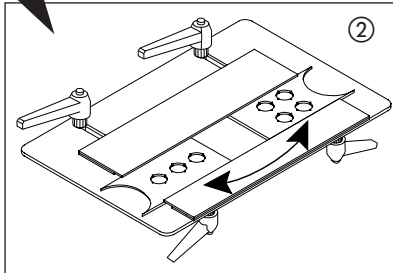

**Mortise**



- ④ The mortise is routed in the same way. Square the ends of the mortise with a suitable size of chisel.

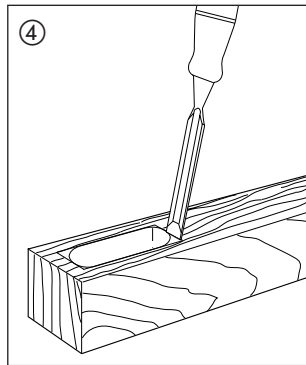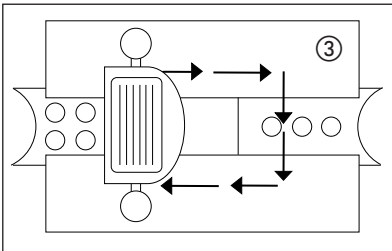


**Dowelling**




① Select and fit the 5/8" guide bush and a straight router bit to suit the diameter of the dowels being used.

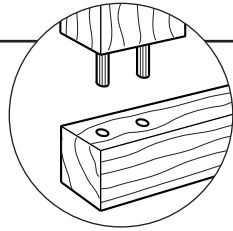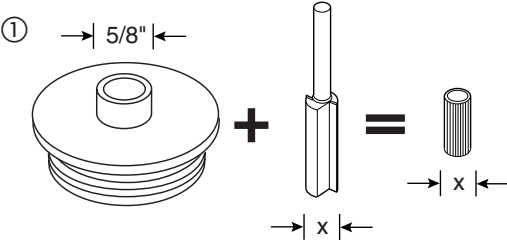


② Select the short or long template depending on the formation of holes to be used.

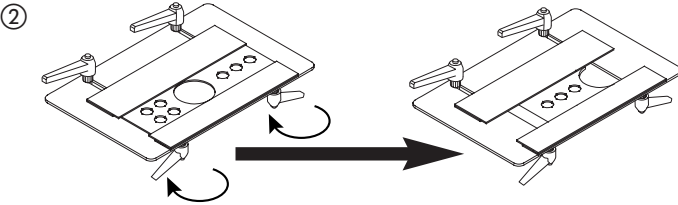

③ Mark the timber centre line and dowel positions. Note the template hole centres are at 1" centres.

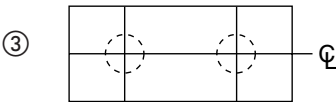



④ Set-up and secure the timber in the same way as for mortise and tenons. But align the top plate using the centre line notches on the template holes. Set the cutter depth to slightly more than half the dowel length.

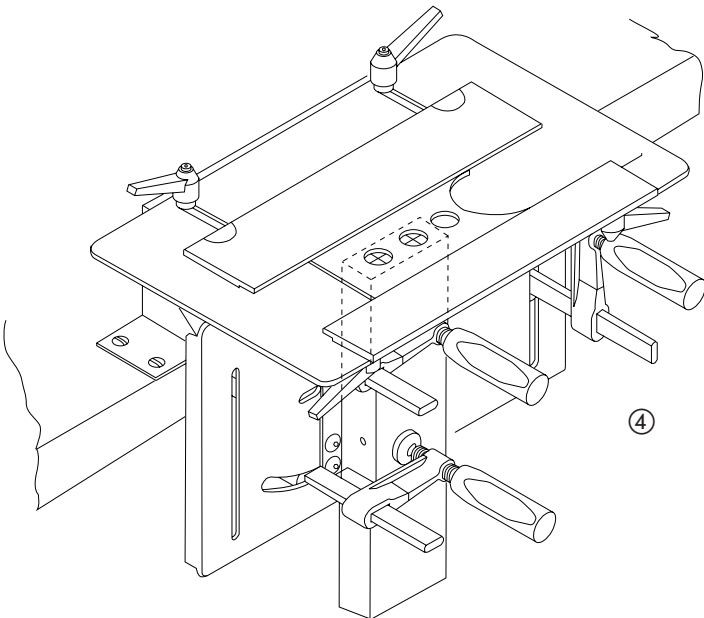



Locate the guide bush in each hole and rout the holes in a series of plunge cuts to prevent waste from packing around the cutter.

**Dowelling the Horizontal Timber Section**

- A** ① Position the horizontal timber tight to the underside of the top plate.
- ② Then clamp it securely using a vertical timber piece as a support.
- ③ Plunge rout the holes as before.

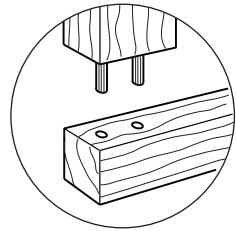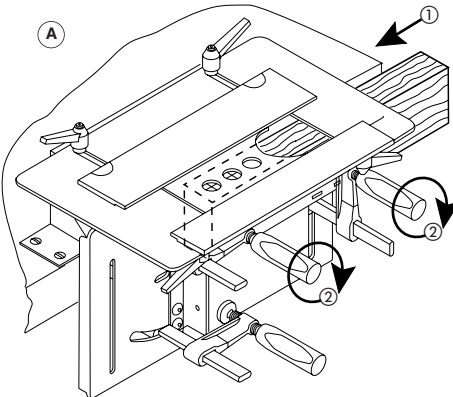

- B** Use the short plate for an alternative formation of holes.

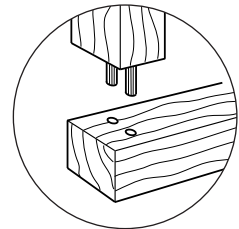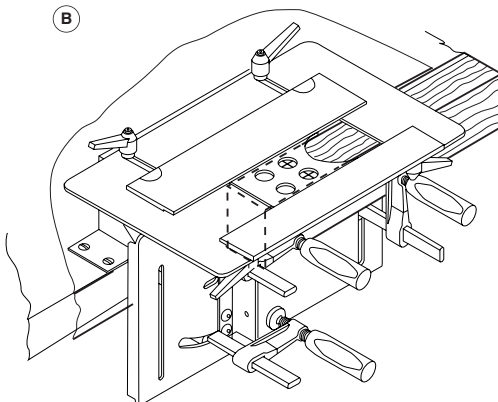

**MAINTENANCE**

This jig has been designed to operate over a long period of time with a minimum of maintenance. Continual satisfactory operation depends upon proper tool care and regular cleaning.

■ **Cleaning**

Regularly clean the jig with a soft cloth.

■ **Lubrication**

Your jig requires no additional lubrication.

**RECYCLING**

Jig, accessories and packaging should be sorted for environmentally friendly recycling.

**GUARANTEE**


The jig carries a manufacturers guarantee in accordance with the conditions on the enclosed guarantee card.


| <b>MT/JIG USA - SPARE PARTS LIST</b>  |             |   | <b>v2.0 06/2004</b> |
|---------------------------------------|-------------|---|---------------------|
| <b>No.</b>                            | <b>Qty.</b> | <b>Desc.</b>                                      | <b>Ref.</b>         |
| 1                                     | 4           | F Clamp for MT/JIG                                | WP-MT/01            |
| 2                                     | 1           | MT/JIG Set-up Bar                                 | WP-MT/02/USA        |
| 3                                     | 1           | Label Trend MT/JIG                                | WP-MT/03            |
| 4                                     | 1           | Main Body   | WP-MT/04            |
| 5                                     | 1           | Vertical Guide                                    | WP-MT/05            |
| 6                                     | 1           | Inner Body  | WP-MT/06            |
| 7                                     | 1           | Tilting Back Plate                                | WP-MT/07            |
| 8                                     | 1           | Top Plate   | WP-MT/08            |
| 9                                     | 1           | Back Clamp Plate Packing Piece                    | WP-MT/09            |
| 10                                    | 3           | Pivot Bush  | WP-MT/10            |
| 11                                    | 1           | F Clamp Square Cap                                | WP-MT/11            |
| 12                                    | 1           | Back Clamp Plate                                  | WP-MT/12            |
| 13                                    | 1           | Front Clamp Plate Packing Piece                   | WP-MT/13            |
| 14                                    | 1           | Front Clamp Plate                                 | WP-MT/14            |
| 15                                    | 1           | Template Long                                     | WP-MT/15            |
| 16                                    | 1           | Template Short                                    | WP-MT/16            |
| 17                                    | 2           | Adjustable Lever M6 x 15mm                        | CR/KB/PK8           |
| 18                                    | 3           | Machine Screw Button M6 x 16mm Skt                | WP-SCW/75           |
| 19                                    | 2           | Adjustable Lever M6 Female                        | CR/KB/PK9           |
| 20                                    | 2           | Hex Nut M6  | WP-NUT/06           |
| 21                                    | 2           | Washer M6 Form C                                  | WP-WASH/12          |
| 22                                    | 6           | Machine Screw Button Flange M6 x 12mm Skt         | WP-SCW/73           |
| 23                                    | 1           | Guide Bush Set Imperial 8 pc USA                  | WP-MT/23/USA        |
| 26                                    | 1           | T Handle Hex Key 4mm x 150mm                      | HK/T/04             |
| 27                                    | 4           | Self Tapping Screw Pan No.10 x $\frac{3}{4}$ Pozi | WP-SCW/108          |
| 28                                    | 2           | Clamping Bar Shims                                | WP-MT/28            |
| 29                                    | 1           | Manual  | MANU/MT/USA         |
| <b>DUST EXTRACTION KIT (OPTIONAL)</b> |             |   |                     |
| 30                                    | 1           | Dust Kit Complete                                 | MT/DUSTKIT          |
| 31                                    | 1           | Dust Shield                                       | WP-MT/31            |
| 32                                    | 1           | Dust Spout 2 $\frac{1}{4}$ "                      | WP-SRT/16           |
| 33                                    | 1           | Magnet Pack 10mm x 3mm (Pack of 4)                | MAG/PACK/2          |
| 34                                    | 4           | Machine Screw Button Flange M6 x 12mm Skt         | WP-SCW/73           |
| 35                                    | 4           | M6 Internal Shakeproof Washer                     | WP-WASH/31          |
| 36                                    | 4           | Nut Hex M6  | WP-NUT/06           |
| 37                                    | 0           | Hose Adaptor 2 $\frac{1}{4}$ "-1 $\frac{1}{2}$ "  | CRT/3               |
| 38                                    | 1           | Adaptor Body                                      | WP-CRT/97           |
| 39                                    | 1           | Adaptor Fitting                                   | WP-CRT/98           |
| 40                                    | 1           | Adaptor Clip                                      | WP-CRT/99           |
| <b>BIT SETS (OPTIONAL)</b>            |             |   |                     |
| 41                                    | 0           | Router Bit Set Imperial 5pc                       | SET/MT1             |



**MT/JIG USA- SPARE PARTS DIAGRAM**

v2.0 06/2004

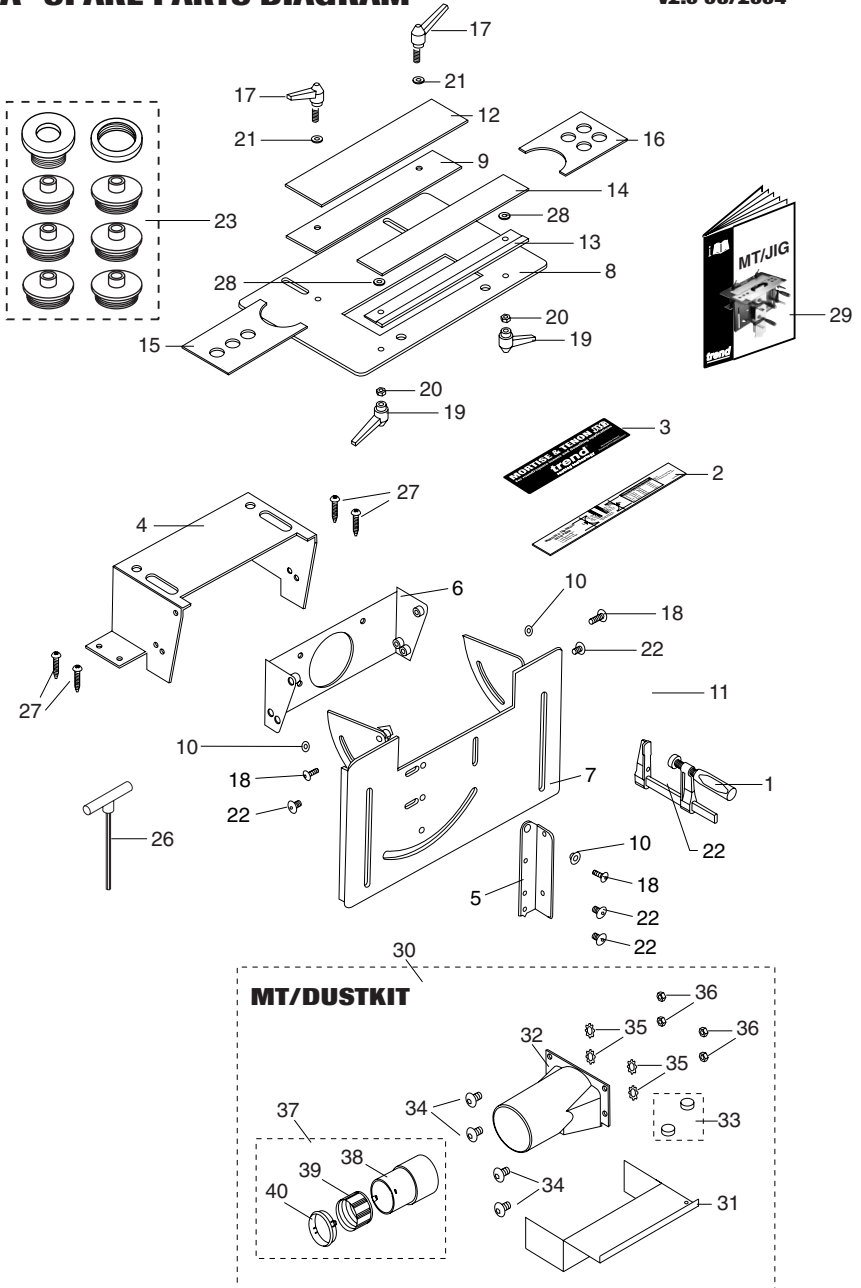

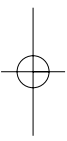


MANU/MT/USA v2.0



**Trend Machinery & Cutting Tools Ltd.**  
Email: \_\_\_\_\_sales@trend-usa.com  
Web: \_\_\_\_\_www.trend-usa.com


© Copyright Trend 2004. No part of this publication may be reproduced, stored or transmitted in any form without prior permission. Our policy of continuous improvement means that specifications may change without notice. Trend Machinery and Cutting Tools cannot be held liable for any material rendered unusable or any form of consequential loss. E&OE  
® All trademarks acknowledged.

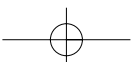



# MT/JIG

## USA

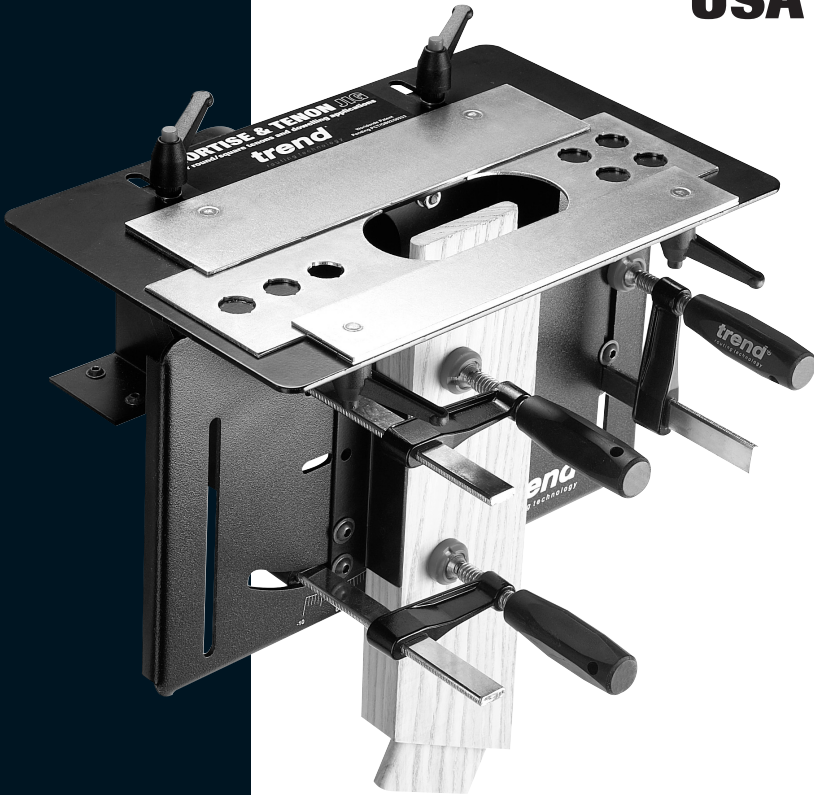

**trend**<sup>®</sup>  
routing technology

International Patent No.:  
PCT/GB02/00253