




T8






EN Original Instructions







P.8



Fig. A

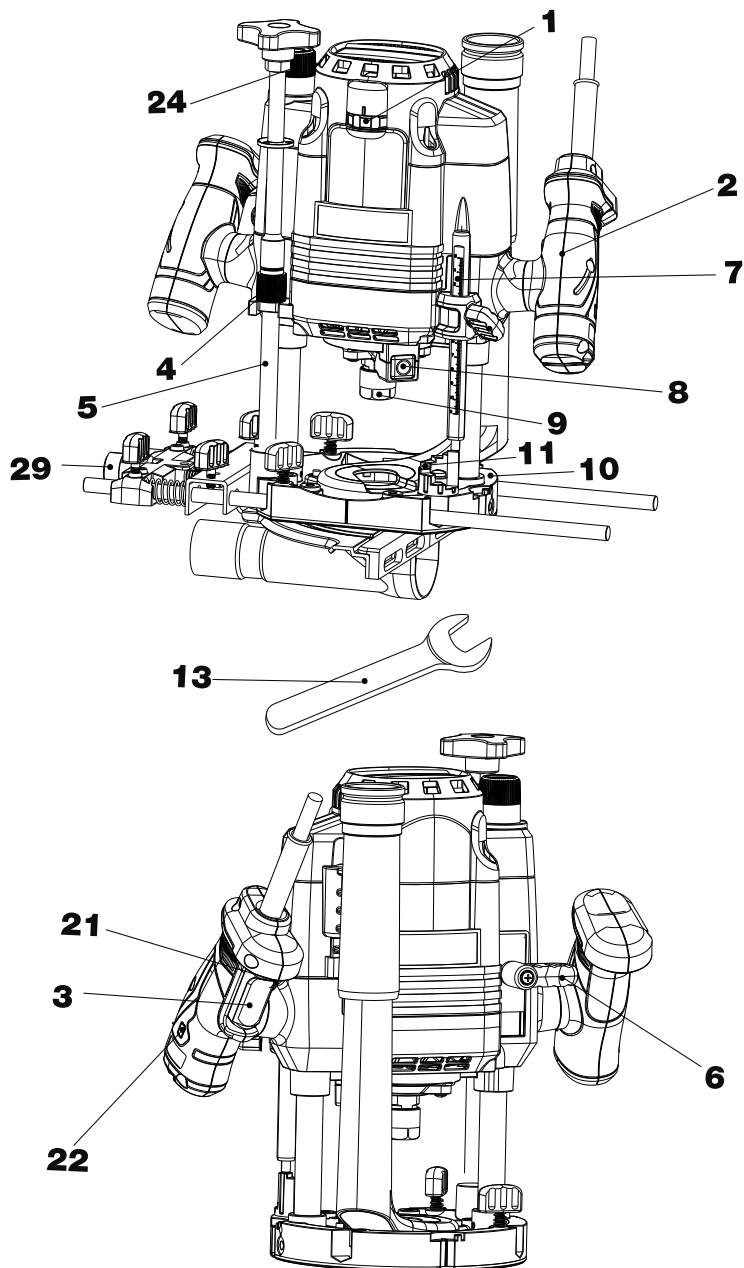

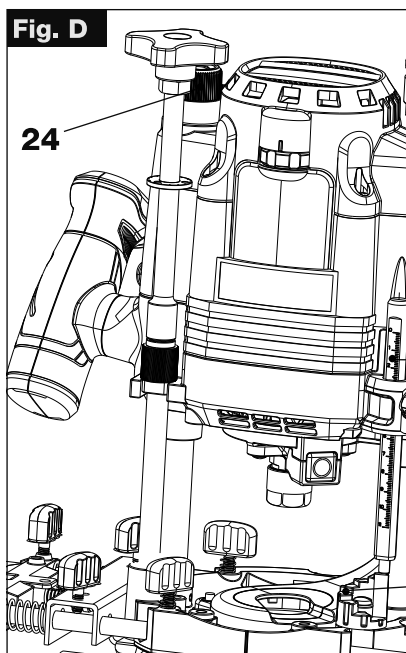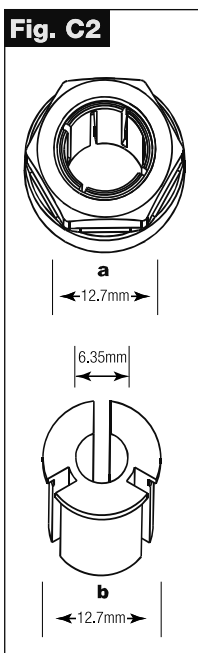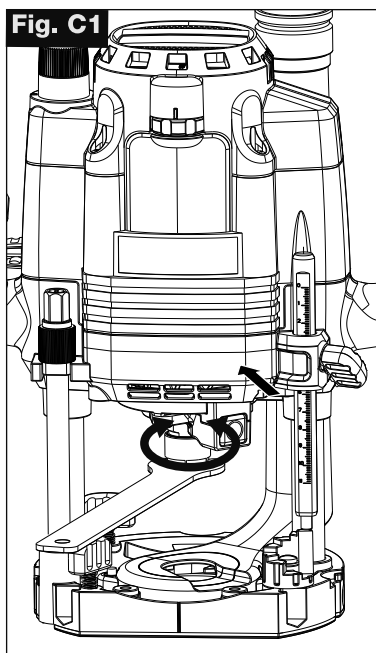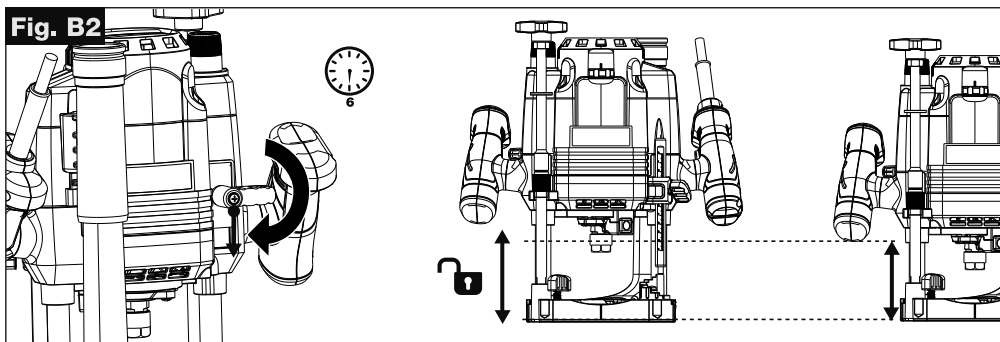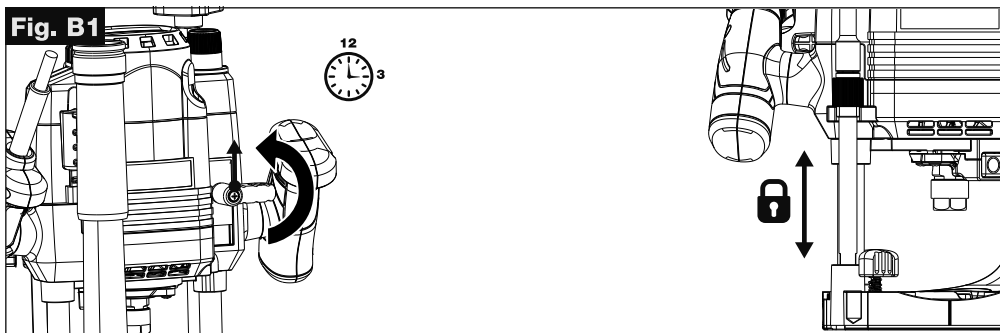

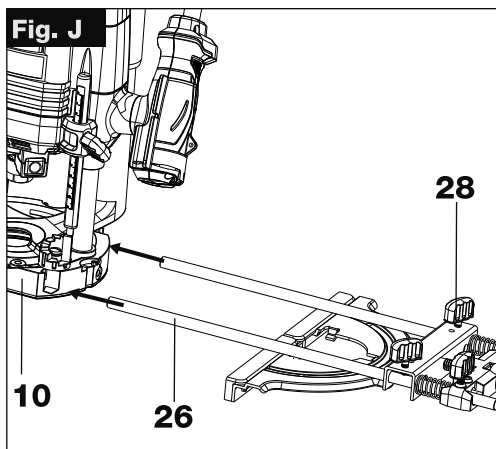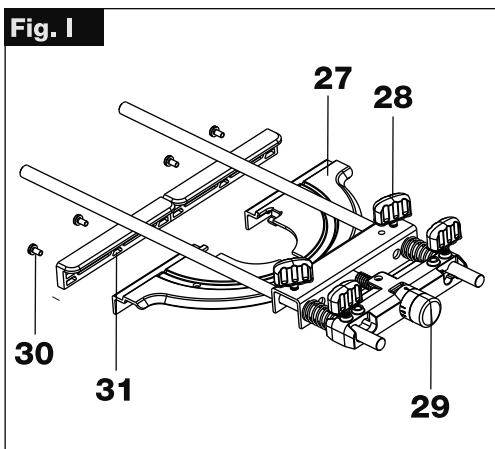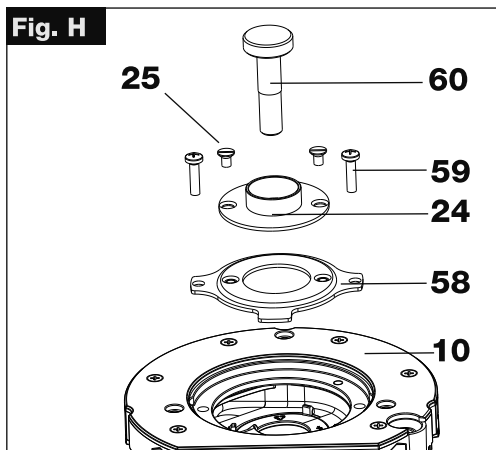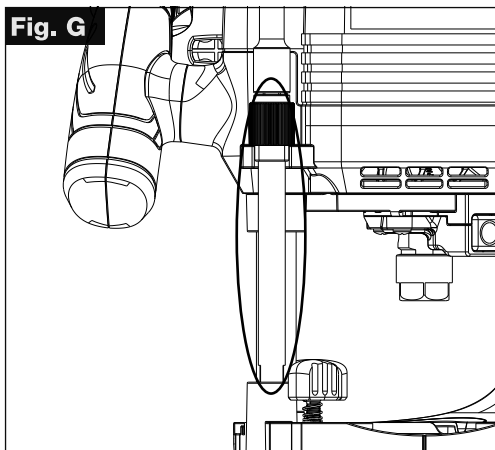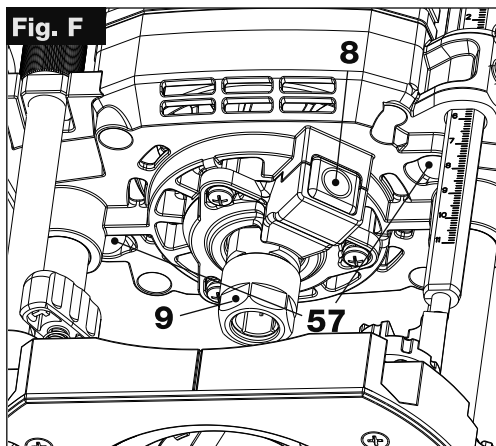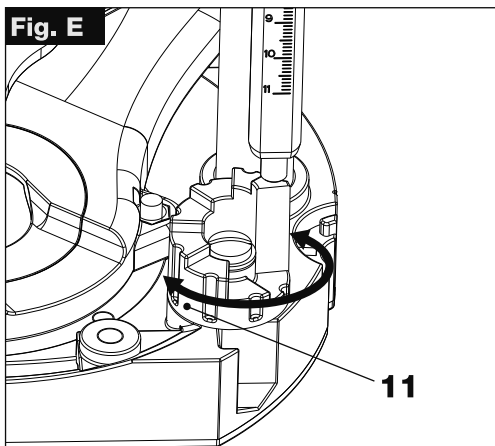

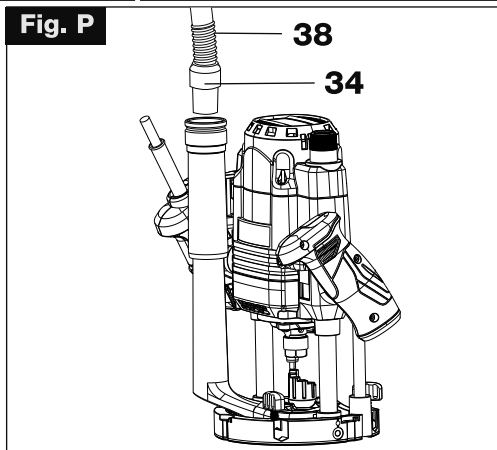
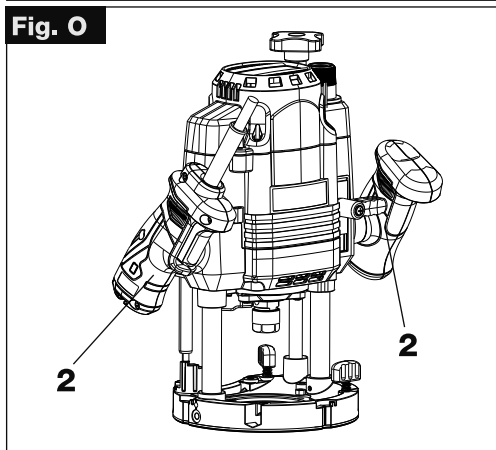
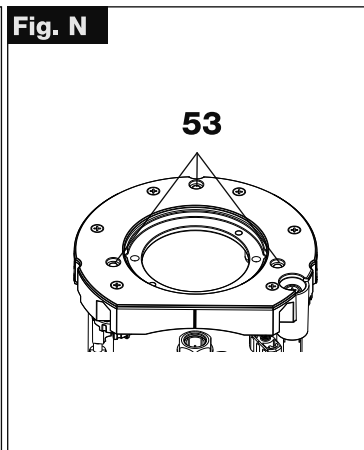
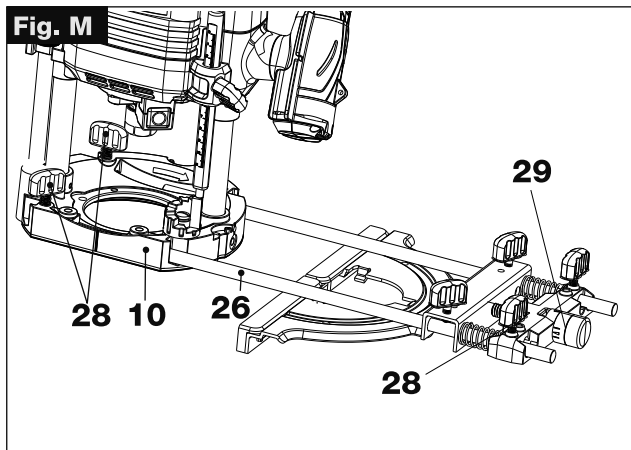
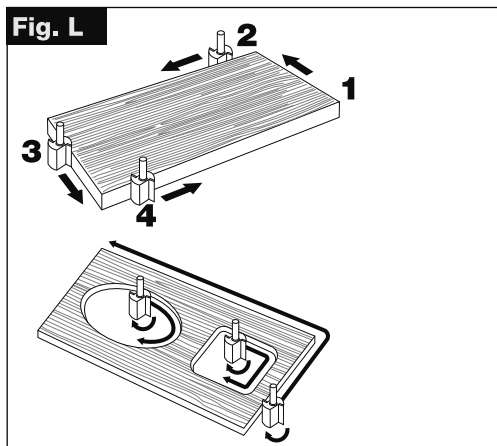
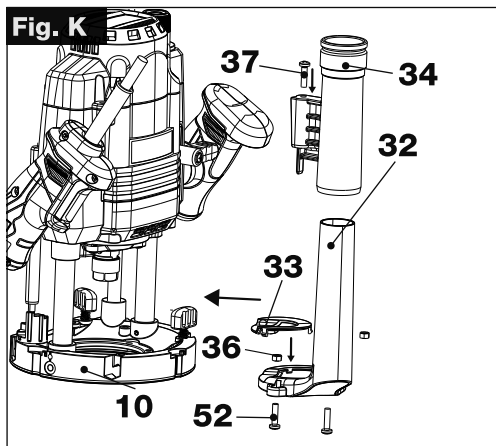


Fig. Q

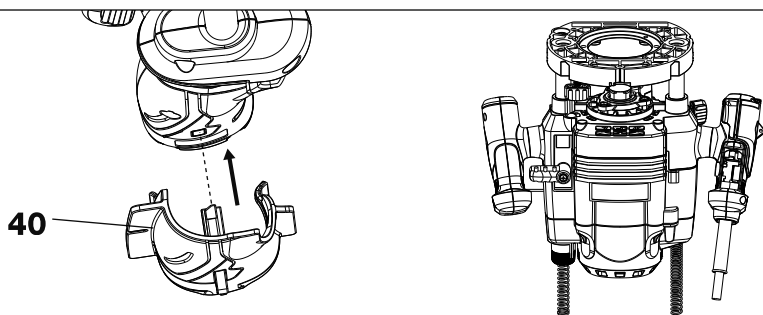


Fig. R

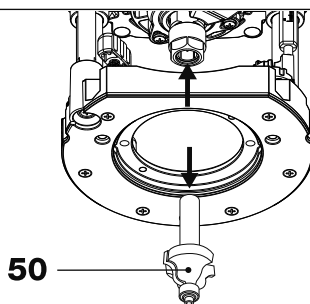


Fig. S1

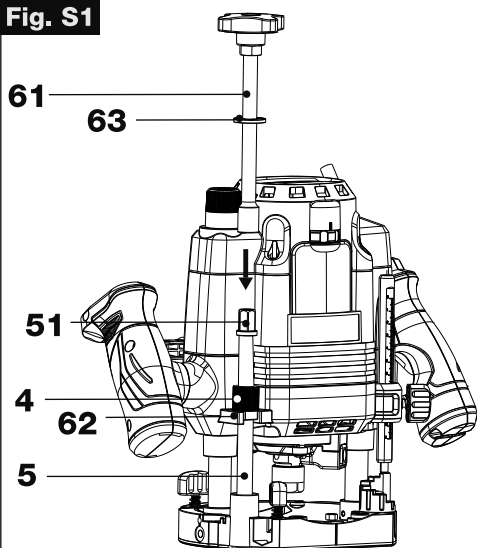


Fig. S2

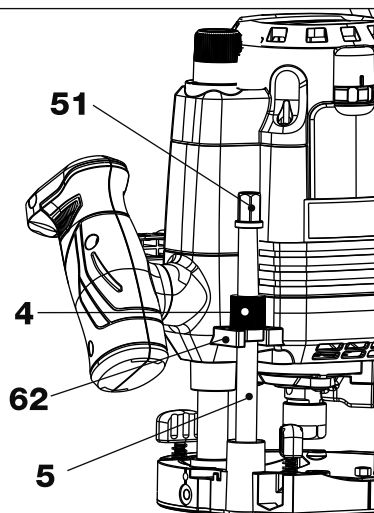


Fig. S3


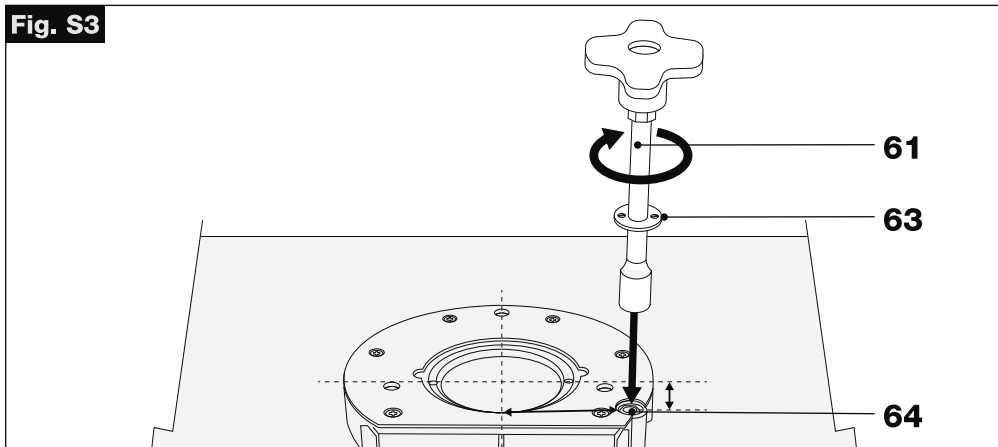


Fig. T

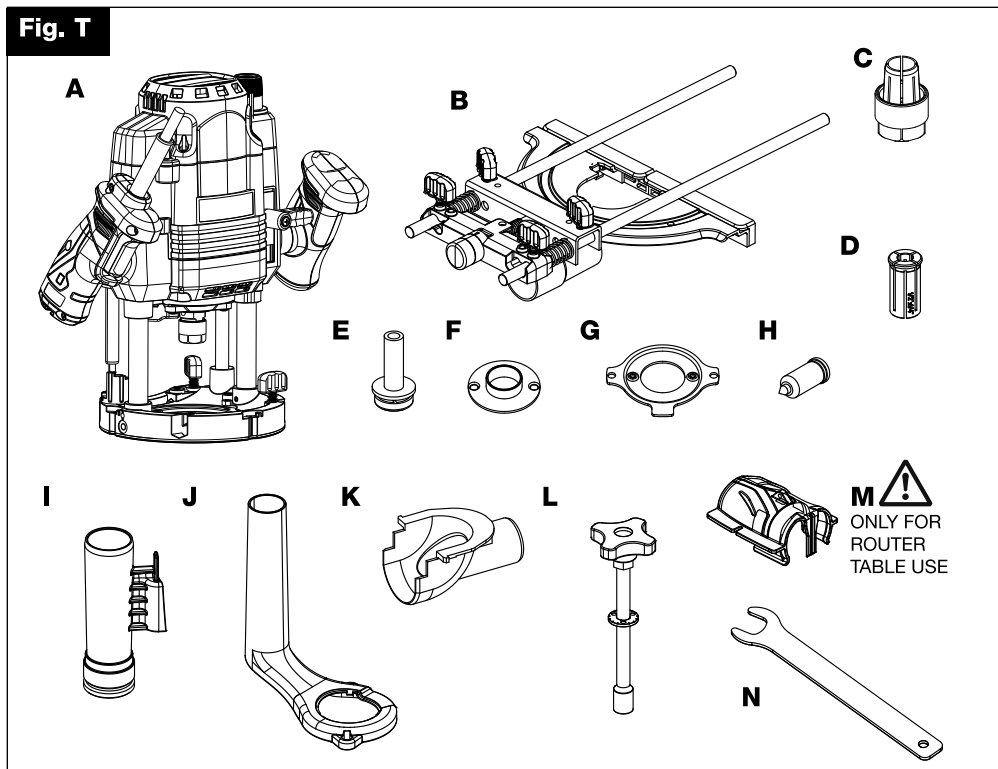

EN - T8E/T8EL

Thank you for purchasing this Trend product, we hope you enjoy many years of creative and productive use.

TECHNICAL DATA

		T8E	T8EL
Voltage	V AC	230-240	110
Type		1	
Power input	W	2200	
No load speed	min 1	10000	26000
Max Plunge Depth	mm	80mm	
Max cutter diameter (Portable Router)	mm	50	
Max cutter diameter in table	mm	65	
Collet size for UK and ROI	inch	1/2 + 1/4 sleeve	
Weight	kg	5.8	
Noise values and vibration values (triaux vector sum) according to EN62841 2 17:			
L _{PA} (emission sound pressure level)	dB(A)	94.1	94.1
L _{WA} (sound power level)	dB(A)	105.1	105.1
K (uncertainty for the given sound level)	dB(A)	3	3
Vibration emission value a _{h,nv} =	m/s ²	3.8	3.8
Uncertainty K =	m/s ²	1.5	1.5

The vibration and/or noise emission level given in this information sheet has been measured in accordance with a standardised test given in EN62841 and may be used to compare one tool with another. It may be used for a preliminary assessment of exposure.

WARNING: The declared vibration and/or noise emission level represents the main applications of the tool. However if the tool is used for different applications, with different accessories or poorly maintained, the vibration and/or noise emission may differ. This may significantly increase the exposure level over the total working period.

An estimation of the level of exposure to vibration and/or noise should also take into account the times when the tool is switched off or when it is running but not actually doing the job. This may significantly reduce the exposure level over the total working period.

Identify additional safety measures to protect the operator from the effects of vibration and/or noise such as: maintain the tool and the accessories, keep the hands warm (relevant for vibration), organisation of work patterns.



WARNING: To reduce the risk of injury, read the instruction manual.

Definitions: Safety Guidelines

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.



DANGER: Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.



WARNING: Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.



NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.



Denotes risk of electric shock.



Denotes risk of fire.



GENERAL POWER TOOL SAFETY WARNINGS



WARNING: Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

The term "power tool" in the warnings refers to your mains- operated (corded) power tool or battery-operated (cordless) power tool.

1) Work Area Safety

- a) Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical Safety

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) T8ELK Version must only be used with a suitable 110V step down transformer.**
- c) Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.

d) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

e) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

f) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

g) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

3) Personal Safety

a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

h) Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

4) Power Tool Use and Care

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and/ or the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged,

have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits, etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

h) Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Safety Instructions for Routers

a) Hold the power tool by insulated gripping surfaces only, because the cutter may contact its own cord. Cutting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electrical shock.

b) Use clamps or another practical way to secure and support the workpiece to a stable platform. Holding the work by your hand or against the body leaves it unstable and may lead to loss of control.

c) Keep handles dry, clean and free from oil and grease. This will enable better control of the tool.

d) Maintain a firm grip with both hands on the tool to resist starting torque. Maintain a firm grip on the tool at all times while operating.

e) Keep hands away from cutting area above and below the base. Never reach under the workpiece for any reason. Keep the router base firmly in contact with the workpiece when cutting.

f) Never touch the bit immediately after use. It may be extremely hot.

g) Be sure that the motor has stopped completely before you lay the router down. If the bit is still spinning when the tool is laid down, it could cause injury or damage.

h) Be sure that the router bit is clear of the workpiece before starting the motor. If the bit is in contact with the workpiece when the motor starts, it could make the router jump, causing damage or injury.

i) The permitted speed of the cutting bit must be at least equal to the maximum speed marked on

the power tool. If cutting bits run faster than their rated speed, they may break and fly off.

j) Always follow the bit manufacturer's speed recommendations as some bit designs require specific speeds for safety or performance. If you are unsure of the proper speed or are experiencing any type of problem, contact the bit manufacturer.

k) Do not use cutters larger than 50mm (2") unless the router is fitted in a router table.

Do not use cutters larger than 65mm (2 9/16") in this tool.

RESIDUAL RISKS



WARNING: We recommend the use of a residual current device with a residual current rating of 30mA or less.

In spite of the application of the relevant safety regulations and the implementation of safety devices, certain residual risks cannot be avoided. These are:

- Impairment of hearing.
- Risk of personal injury due to flying particles.
- Risk of burns due to accessories becoming hot during operation.
- Risk of personal injury due to prolonged use.

SAVE THESE INSTRUCTIONS



Electrical Safety

The electric motor has been designed for one voltage only. Always check that the power supply corresponds to the voltage on the rating plate.



Your tool is double insulated in accordance with EN62841; therefore no earth wire is required.

110V machines are intended to be used with a safety transformer manufactured to BS EN 61558 and BS 4343. Never work without this transformer in place.

If the supply cord is damaged, it must be replaced only by Trend Tool Technology Ltd or an authorised service organisation.

Mains Plug Replacement (U.K. & Ireland Only)

If a new mains plug needs to be fitted:

- Safely dispose of the old plug.
- Connect the brown lead to the live terminal in the plug.
- Connect the blue lead to the neutral terminal.



WARNING: No connection is to be made to the earth terminal. Follow the fitting instructions supplied

with good quality plugs. Recommended fuse for 230V U.K. plug: 13A.

Fitting a Mains Plug to 110V Units (U.K. and Ireland Only)

- The plug fitted should comply with BS EN 60309 (BS4343), 32 Amps.

 **WARNING:** Always ensure that the cable clamp is correctly and securely fitted to the sheath of the cable.

Using an Extension Cable

An extension cord should not be used unless absolutely if an extension cable is required, use an approved 3-core extension cable suitable for the power input of this tool (see **Technical Data**). The minimum conductor size is 1.5mm²; the maximum length is 30m.

When using a cable reel, always unwind the cable completely.

PACKAGE CONTENT - (Fig. T)

- 1 x Router **(A)**
- 1 x Micro adjustable side fence **(B)**
- 1 x ½" Collet **(C)**
- 1 x ¼" Collet sleeve **(D)**
- 1 x Centring pin **(E)**
- 1 x 30mm guide bush **(F)**
- 1 x Guide bush adaptor **(G)**
- 1 x Trammel pin **(H)**
- 1 x Vertical dust adaptor **(I)**
- 1 x Cyclone dust adaptor **(J)**
- 1 x Under fence dust adaptor **(K)**
- 1 x 2-in-1 Height adjuster **(L)**
- 1 x Power lock on clip **(M)**


ONLY FOR ROUTER TABLE USE


- 1 x 22mm Spanner **(N)**
- 1 x Moulded carry case
- 1 x Instruction manual


- Check for damage to the tool, parts or accessories which may have occurred during transport.
- Take the time to thoroughly read and understand this manual prior to operation.


MARKINGS ON TOOL


The following pictograms are shown on the tool:

 Read instruction manual before use.


 Wear ear protection.

 Wear eye protection.

 Visible radiation. Do not stare into light.

 Double insulation

Description - (Fig. A)

 **WARNING:** Never modify the power tool or any part of it. Damage or personal injury could result.

1. Speed control wheel
2. Main handles
3. On/off trigger switch
4. Thumb wheel
5. Manual height adjustment
6. Plunge lock lever
7. Depth stop rod
8. Spindle lock button
9. Collet assembly
10. Base plate
11. Multiple position turret stop
13. Spanner
21. Trigger release button
22. Red hole
23. Fine height adjuster

Intended Use

The T8 router has been designed for professional heavy duty routing of wood, wood based materials and plastics.

These routers are intended for routing grooves, edges, profiles and slots as well as copy routing.

DO NOT use under wet conditions or in the presence of flammable liquids or gases.

The T8 is a professional power tool.

The T8 is designed so that they can be installed into a router table. The router may only be installed in tables that meet the legal safety requirements for router tables.

DO NOT let children come into contact with the tool. Supervision is required when inexperienced operators use this tool.

- **Young children and the infirm.** This appliance is not intended for use by young children or infirm persons without supervision.
- This product is not intended for use by persons (including children) suffering from diminished physical, sensory or mental abilities; lack of experience, knowledge or skills unless they are supervised by a person responsible for their safety. Children should never be left alone with this product.



CAUTION: Before operating any of the controls, read the following sections.

Plunge Lock Lever (Fig. B1-B2)

1. Lever (6) Position (12-3 O'clock)

Plunge setting is locked and cannot move.

2. Lever (6) Position (6 O'clock)

Plunge lock is disengaged.

Perfect for fast repositioning and surface registration when used with a jig.

How to fit the 6.35mm sleeve - (Fig. C2)

This router is supplied with a 6.35mm collet sleeve as an accessory.

To fit the 6.35mm collet sleeve (b) simply slide it into the 12.7mm collet (a).

The 6.35mm collet sleeve has a flange to ensure insertion to correct depth.

NOTE: 1. Do not attempt to remove the 12.7mm collet from the collet nut.

Multiple Position Turret Stop - (Fig. E)



WARNING: Do not change the turret stop while the router is running. This will place your hands too near the cutter head.

The turret stop (11) limits the downward distance that the tool can be plunged. It serves to define the depth of cut by limiting the travel of the depth stop rod (7).

1. The cutting depth can be set by turning the appropriate height on the turret stop.
2. The turret is rotatable with stepped stops.
3. It is the interaction of the depth stop rod and the turret stop that determine the routing depth.
4. Refer to section Setting the Routing Depth for instructions on how to use the turret stop in an actual operation.

Height Stop Rod and Height Stop Thumb Wheel - (Fig. G)

T8 Height Stop Rod and Height Stop Thumb Wheel (Fig. G)

The manual height adjustment rod (5) and thumb wheel (4) limit how high the unit can travel up the rails. The system is adjustable to limit the rise of the plunge regardless of the position of the plunge release lever to full up where the bottom of the collet is 80mm (3 5/32") above the workpiece.

NOTE: It is easier to move the height stop thumb wheel UP if the plunge release lever is locked and easier to move the thumb wheel down if the unit is first moved down by releasing the plunge release lever and then tightening it.

ASSEMBLY AND ADJUSTMENTS



WARNING: To reduce the risk of serious personal injury, turn tool off and disconnect tool from power source before making any adjustments or removing/ installing attachments or accessories. An accidental start-up can cause injury.

Installing and Removing a Cutter - (Fig. C1, F)



WARNING: Do not tighten the collet without a cutter fitted.



WARNING: Always use cutters with shanks which match the diameter of the collet.



WARNING: Do not use cutters larger than 50mm (2") unless the router is fitted in a router table.



CAUTION: Care should be taken when removing cutter to avoid cuts to fingers.

Installing a Cutter

1. Insert at least three fourths of the shank length of the cutter into the collet assembly (9).
2. Press the spindle lock (8) forward until the router spindle is locked.

NOTE: You may need to turn the spindle slightly to engage it.

3. Turn the collet nut counter clockwise with the supplied 22mm spanner (13) to tighten it.

Removing a Cutter

1. Press the spindle lock button (8) forward until the router spindle is lock.
2. Turn the collet nut (9) clockwise with the supplied 22mm spanner (13) to loosen.
3. Keep turning the spanner until the collet nut tightens and then loosens again. This is the fail safe mechanism releasing the collet.
4. The cutter should now slide out.

NOTE: Each time you finish using a cutter, remove it and store it in a safe place.

Fine Height Adjuster - (Fig. A, D)



CAUTION: Ensure that the plunge locking lever is unlocked. Never use unnecessary force to rotate the fine height adjuster mechanism.



CAUTION: DO NOT remove the screw on hex nuts.

The fine height adjuster can be used in portable mode or when the router is held inside a table.

Fine Adjustment

When not using a depth template, or if the depth of cut needs readjustment, it is recommended to use the fine height adjuster (24).

1. Adjust the depth of cut as described in Adjusting the Depth of Cut.
2. Rotate the fine height adjuster (24) to the required position.

Fitting Guide Bush and Inner Plate - (Fig. H)

The routers have a unique built-in line up system for the template guide bush. This system ensures that the guide bush is exactly concentric to the router cutter to ensure accurate work.

1. Turn the router upside down.
2. Fit inner plate (58) into the recess in the router base plate (10). For T8 the raised side of the inner plate must be away from router base. Loosely fit the two pan head machine screws (59) through the inner plate and into the tapped holes. **DO NOT TIGHTEN SCREWS.**
3. Fit the 30mm guide bush (24) to the inner plate (58). Fit guide bush with the two M5 countersink machine screws (25). Tighten these screws.
4. The line-up pin (60) is stepped for 1/2" or 12mm collet (9) sizes. (For the 1/2" collet simply push the line-up pin further down into the 1/2" collet).
5. Fit line up pin (60) into the collet (9) depending on the size fitted) in the router, lightly tighten collet nut to hold the line up pin (60).
6. Release plunge lever and gently depress base until line up pin (60) projects through the 30mm guide bush (24).
7. Once in line, tighten the pan head machine screws (59) with a flat screwdriver.

Fitting the Micro Adjustable Fence - (Fig. I, J)

1. Fit the guide rod (26) to the router base (10).
2. Slide the parallel fence (27) over the rods.
3. Tighten the wing bolts (28) temporarily.

Adjusting the Micro Adjustable Fence - (Fig. A, I, J)

1. Draw a cutting line on the material.
2. Lower the router carriage until the cutter is in contact with the workpiece.
3. Position the router on the cutting line.
4. Slide the parallel fence (27) against the workpiece and tighten the wing bolts (28).
5. Adjust the parallel fence using the fine adjustment knob (29). The outer cutting edge of the cutter must coincide with the cutting line.
6. If required, loosen the screws (30) and adjust the strips (31) to obtain the desired guiding length.

Dust Extraction - (Fig. A, K, P)

Dust from materials such as lead containing coatings and some wood types, can be harmful to one's health. Breathing in the dust can cause allergic reactions and/or lead to respiratory infections of the user or bystanders.

Certain dust, such as oak or beech dust, is considered carcinogenic, especially in connection with wood treatment additives.

Observe the relevant regulations in your country for the materials to be worked.

The vacuum cleaner must be suitable for the material being worked.

When vacuuming dry dust that is especially detrimental to health or carcinogenic, use dust class M vacuum cleaner.

Connecting Dust Extraction Adaptor - (Fig. K)

The dust extraction adaptor consists of a main section (32), a cover (33), an extraction tube adaptor (34), one extraction tube screw (37), two base screws (52) and two nuts (36).

1. Slide the cover (33) onto the main section (32) until it clicks into place.
2. Place the main section (32) on the base and secure with two screws (52) and nuts (36).
3. Remove screw (37) from the top of the router and use this screw to assemble the extraction tube adaptor (34) to the router.

Connecting Dust Extractor Hose - (Fig. P)



WARNING: Risk of dust inhalation. To reduce the risk of personal injury, **ALWAYS** wear an approved dust mask.



WARNING: ALWAYS use a vacuum extractor designed in compliance with the applicable directives regarding dust emission when sawing wood. Vacuum hoses of most common vacuum cleaners will fit directly into the dust extraction outlet.

Connect a dust extractor hose (38) to the extraction tube adaptor (34).

A dust extraction tube adaptor (34) is supplied with your tool. Vacuum hoses on most vacuum extractors will fit directly into the dust extraction spout.

NOTE: When using dust extraction, be sure that the dust extractor is out of the way and secure so that it will not tip over or interfere with the router or workpiece. The dust extractor hose and power cord must also be positioned so that they do not interfere with the router or workpiece. If the dust extractor or dust extractor hose cannot be positioned properly, it should be removed.

OPERATION



Instructions for Use



WARNING: Always observe the safety instructions and applicable regulations.



WARNING: To reduce the risk of serious personal injury, turn tool off and disconnect tool from power source before making any adjustments or removing/ installing attachments or accessories. An accidental start-up can cause injury.

Proper Hand Position - (Fig. O)



WARNING: To reduce the risk of serious personal injury,

ALWAYS use proper hand position as shown



WARNING: To reduce the risk of serious personal injury,

ALWAYS hold securely in anticipation of a sudden reaction.

Proper hand position requires both hands on the main handles (2).

Using the Router - (Fig. A, L)



CAUTION: Turn the router on before plunging the cutter head into the workpiece.



CAUTION:

- Excessive cutting may cause overload of the motor or difficulty in controlling the tool, the depth of cut should not be more than 15mm (19/32") at a pass when cutting grooves with a 8mm (5/16") diameter bit.
- When cutting grooves with a 20mm (25/32") diameter bit, the depth of cut should not be more than 5mm (3/16") at a pass.
- For extra deep grooving, make two or three passes with progressively deeper bit settings.



CAUTION: After long periods of working at low speeds, allow the machine to cool down by running it for three minutes at maximum speed, with no load.

All common routing tasks can be performed with the plunge cut router on all types of wood and plastic:

- Grooving
- Rebating
- Recessing
- Veining
- Profiling

To prevent overload of the tool by using the wrong speed selection, follow the recommended settings below:

MATERIAL	CUTTER DIAMETER		
	10 – 30mm	30 – 50mm	50 – 65*mm
SPEED SELECTION			
Hardwood	11 - 5	6 - 2	5 - 2
Softwood	11 - 6	11 - 5	5 - 2
Chipboard Faced	11 - 6	11 - 4	n / a
Plastic	11 - 5	11 - 4	n / a

* Do not use cutters larger than 50 mm (2") unless the router is fitted in a router table.

NOTE: Only carbide tipped cutters should be used on panels faced with plastic laminates. The hard laminates will quickly dull steel cutters.

NOTE: For better plunge sliding movement, frequently clean the columns of dust or debris. If the plunging movement is not moving as smooth as desired, lubricate the columns with a dry Teflon lubricant.

1. After setting the cutting depth as described, locate the router such that the bit is directly over the place you will be cutting.

2. With the router running, lower the unit smoothly down into the workpiece. **DO NOT JAM THE ROUTER DOWN.**

- When the tool reaches the pre set depth, turn the screw **(23)** to lock.
- When you have finished routing, push the plunge lock lever **(6)** to unlock and let the spring lift the router directly out of the workpiece.
- Always feed the router opposite to the direction in which the cutter is rotating. Refer to Fig. L.

On/Off Trigger Switch - (Fig. A)



WARNING: To reduce the risk of serious personal injury, turn unit off and disconnect it from power source before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

- To turn the unit on, press the lock-off button and then squeeze the on/off trigger switch **(3)**. Continue to squeeze the trigger switch for continuous running.
- To turn the unit off release the trigger.

Variable Speed Dial - (Fig. A)



WARNING: If the speed control ceases to operate, or is intermittent, stop using the tool immediately. Please contact Trend Tool Technology Ltd or authorized service facility for repair.

NOTICE: The router is equipped with electronics to monitor and maintain the speed of the tool while cutting. In low and medium speed operation, the speed control prevents the motor speed from decreasing. If you expect to hear a speed change and continue to load the motor, you could damage the motor by overheating. Reduce the depth of cut and/or slow the feed rate to prevent tool damage.

Refer to the Speed Selection Chart to choose a router speed. Turn the speed dial **(1)** to control router speed. The lowest speed is 10000 and the highest speed is 26000 rpm using the speed dial **(1)**.

- Turn the speed dial to the required position. The dial is numbered from 1 – Max, and corresponds to router speeds of 10,000 rpm to 26,000 rpm.
- Use the slower settings for large diameter cutters and the faster settings for small diameter cutters.
- The correct setting will also depend on the density of the material, depth of cut and feed speed of the router.

NOTE: A noticeable loss of motor rpm means motor overload

SPEED SELECTION CHART	
DIAL SETTING	APPROXIMATE RPM
1	10,000
2	11,500
3	13,000
4	14,500
5	16,000
6	18,000
7	20,000
8	21,500
9	23,000
10	24,000
Max	26,000

The speeds in this chart are approximate and are for reference only. Your router may not produce the exact speed listed for the dial setting.



WARNING: Always follow the cutter manufacturer's speed recommendations as some bit designs require specific speeds for safety or performance.

If you are unsure of the proper speed or are experiencing any type of problem, contact the cutter manufacturer.

LED Worklights - (Fig. F)



CAUTION: Do not stare into worklight. Serious eye injury could result.

Two LED worklights **(57)** are located next to the collet assembly **(9)**.

- The worklights **(57)** will constantly illuminate when the router is connected to the mains power supply.
- To switch off the worklights the router must be disconnected from mains power supply.

NOTE: The worklight is for lighting the immediate work surface and is not intended to be used as a flashlight.

Moulding Natural Timbers



WARNING: When routing always lock the plunge locking lever.

When edge moulding natural timbers, always mould the end grain first, followed by the long grain. This ensures that if there is breakout, it will be removed when the long grain is routed.

Setting the Routing Depth - (Fig. A, E)

1. Place the router with cutter fitted on to the workpiece.
2. Loosen the fine adjuster lock screw (23).
2. Set the multiple position turret stop (11) as required.
3. Tighten the fine adjuster lock screw (23).
4. Push down the plunging lock lever (6) to start plunging.
5. Lower the router slowly until the cutter touches the workpiece.

NOTE: By rotating the turret stop, eight depth settings can be quickly made.

Direction Of Feed - (Fig. L)



WARNING: Avoid climb-cutting (cutting in direction opposite than shown in Fig. L). Climb-cutting increases the chance for loss of control resulting in possible injury. When climb-cutting is required (backing around a corner), exercise extreme caution to maintain control of router. Make smaller cuts and remove minimal material with each pass.

The direction of feed is very important when routing and can make the difference between a successful job and a ruined project. Fig. L show proper direction of feed for most cuts.

1. When routing along an edge, the direction of the router travel should be against that of the rotation of the cutter. This will create the correct cutting action and prevent the cutter from snatching. It will also pull the router towards the workpiece and the side fence or guide bearing will be less likely to wander from the edge of the workpiece.

Feed Speed

The speed at which the cutter is fed into the wood must not be too fast that the motor slows down, or too slow that the cutter leaves burn marks on the face of the wood.

NOTE: Practice judging the speed by listening to the sound of the motor when routing.

Using a Side Fence - (Fig. M)



CAUTION: Ensure working position is comfortable and at a suitable working height.

1. Ensure the wing bolts (28) are fully released. Slide the guide rods (26) into the routing base (10) and tighten the wing bolts.
2. Adjust the fence fine adjustment knob (29) to the required distance and clamp in place with the wing bolts (28).
3. Then lower the cutter height until the cutter is just above the workpiece.

4. Fine adjustments are possible by loosening the wing bolt (28) and adjusting the side fence fine adjustment knob (29).

5. Tighten the wing bolt (28) to secure the position.

NOTE: One revolution of the side fence fine adjustment knob (29) equals 5/64" (2,0 mm) of side feed.

6. Lower the cutter onto the workpiece and set the cutter height by to the required distance. Refer to Setting the Router Depth.

7. Switch the router on and after the cutter reaches full speed, gently lower the cutter into the workpiece and lock the plunge.

8. Feed along the workpiece, keeping sideways pressure to ensure the side fence does not wander away from the workpiece edge and downward pressure on the inside hand to prevent the router from tipping.

9. When finished, raise the router, secure with the plunge locking lever (6) and switch the router off.

NOTE: When starting the cut, keep the pressure on the front cheek until the back cheek contacts the workpiece edge.

NOTE: At the end of the cut, keep pressure on the back cheek until the cut is finished. This will prevent the router cutter swinging in at the end of the workpiece and nipping the corner.

Side Fence Routing - (Fig. I, J)

The side fence is used to guide the router when moulding, edge profiling or rebating the edge of a workpiece or when routing grooves and slots in the center of the workpiece, parallel to the edge.

The edge of the workpiece must be straight and true.

The strips (31) are adjustable and should be set ideally with a 3 mm / 1/8" gap each side of the cutter.

Guiding Off a Batten

Where an edge guide cannot be used, it is also possible to guide the router along a batten clamped across the workpiece (with an overhang at both ends).

Freehand Routing



WARNING: Make shallow cuts only! Use cutters with a max. diameter of 12mm.

Your router can also be used without any sort of guide, e.g. for signwriting or creative work.

Table Mode - (Fig. A, Q)



WARNING: Before the T8 is installed into the router table, check that the router table meets all of the legal safety requirements for router

tables. Read all safety warnings, instructions, and specifications provided with the router table.

Failure to follow all instructions and safety rules may result in electric shock, fire and/or serious injury.



WARNING: To reduce the risk of serious personal injury, turn unit off and disconnect it from power source before making any adjustments or removing/ installing attachments or accessories. An accidental start-up can cause injury.



WARNING: Do not use the T8 as a handheld router if the Power Lock-On Clip is installed.

Installing the Power Lock-On Clip

1. Ensure the router and NVR (No volt Release) switch is disconnected from the power supply.

2. Push the Clip (40) onto the right-hand side handle (2) by guiding the pin into the red hole (22) and ensuring that the lower guide is located correctly into the bottom of the handle.

3. Press the Trigger Release button (21) and squeeze the On/Off Trigger (3). The trigger will stay depressed, and the power is now locked on.

4. Install the router in the table according to the table manufacturer's instructions and connect power plug to the NVR switch.

5. Secure the safety strap from the clip to the leg of the router table, ensuring that the buckle strap is a safe distance away from the cutter.



WARNING: Do not secure the safety strap to the router

6. Switch on the power supply to the NVR. The router is now ready for use.

NOTE: The power on/off function of the router is now controlled by the NVR switch and will start-up at the preset speed as soon as the NVR is turned on.

7. To disengage the power lock-on feature simply remove the clip by pulling it off the handle.

Fitting the Fine Height Adjuster - (Fig. S1)

The fine height adjuster (Quick Raiser) (61) for the T8 can be used portably or when the router is held inverted in a table. If a suitable size access hole is drilled into the router table top, the height adjustment can also be adjusted from above the table top.

To set up for fine height adjustment:

1. Plunge router and lock lever down.
2. Rotate the knurled nut (4) down the stud until it is

close to the router casting fork (62).

3. Align the base of the knurled nut (4) so that it will locate in the fork (62).

4. Release plunge locking lever.



CAUTION: DO NOT use a powered drill to drive the T8 Quick Raiser assembly. Only use the supplied handle. Ensure that the plunge locking lever is unlocked. Never use unnecessary force to rotate the Quick Raiser mechanism. Do not undo Torx® screw on hex nuts.

Using the Without Fine Height Adjuster - (Fig. S2)

In portable use the knurled nut (4) should be wound to the top of the stud and hand tightened against the hex cap. The base of the knurled nut (4) should be aligned with the fork (62) in the router casing.



CAUTION: In normal plunge mode, ensure the base of the knurled nut is aligned correctly with the forks of the lower motor housing. This will enable the cutter to retract into the base safely.

For Portable Use:

1. Place the fine height adjuster handle (61) onto the top threaded spindle hex nut (51).
2. Rotate handle clockwise to raise motor body and reduce cutter depth.
3. Rotate handle anti-clockwise to lower motor body and increase cutter depth.

For Router Table Use - (Fig. S3)

1. Ensure router is fitted into the router table, see opposite page.
2. Place fine height adjuster handle (61) through router table hole onto bottom threaded spindle hex nut (64).
3. Rotate handle clockwise to raise motor body and raise cutter height.
4. Rotate handle anti-clockwise to lower motor body and lower cutter height.

One revolution corresponds to 1,5mm. The height adjuster handle dial (63) can be reset to zero.

Prior to Operation

1. Check that the cutter is correctly installed in the collet.
2. Set the cutting depth.
3. Connect a dust extractor.
4. Make sure the plunge limiter is always locked before switching on.

Routing with Bearing Guided Cutters - (Fig. R)

Where a parallel guide or guide bush are inappropriate, it is possible to use bearing guided cutters (50) for cutting shaped edges.


Trend offer a wide range of bearing guided cutters for various applications. Please see trend-uk.com for details.

Trend Base Configuration - (Fig. N)


This router has three threaded holes (53) built into the base that allows it to attach to other Trend accessories.

MAINTENANCE

Your power tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool care and regular cleaning.

 **WARNING:** To reduce the risk of serious personal injury, turn tool off and disconnect tool from power source before making any adjustments or removing/ installing attachments or accessories. An accidental start-up can cause injury.


Repairs


 **WARNING:** To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment (including power cord repairs, and brush inspection and replacement, when applicable) should be performed by a Trend service centre or a Trend authorized service centre. Always use identical replacement parts.

Lubrication

- Your power tool requires no additional lubrication.

Cleaning

 **WARNING:** Blow dirt and dust out of the main housing with dry air as often as dirt is seen collecting in and around the air vents. Wear approved eye protection and approved dust mask when performing this procedure.

 **WARNING:** Never use solvents or other harsh chemicals for cleaning the non-metallic parts of the tool. These chemicals may weaken the materials used in these parts. Use a cloth dampened only with water and mild soap. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.

Optional Accessories


 **WARNING:** Since accessories, other than those offered by Trend Tool Technology Ltd, have not been tested with this product, use of such accessories with this tool could be hazardous. To reduce the risk of injury, only Trend Tool Technology Ltd recommended accessories should be used with this product.

Consult your dealer for further information on the appropriate accessories.

Storage

- After use return the tool to its storage box.

ENVIRONMENTAL PROTECTION

 Recycle raw materials instead of disposing as waste.
Accessories and packaging should be sorted for environmental-friendly recycling.

Separate collection. This product must not be disposed of with normal household waste.

Household User

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by retailer when you purchase a new product. Please call Trend Customer Services for advice as to how to dispose of unwanted Trend electrical products in an environmentally safe way or visit www.trend-uk.com

Business Users

Please call Trend Customer Services for disposal of unwanted Trend electrical products.

WARRANTY

The jig carries a manufacturer's warranty in accordance with the conditions on our website www.trend-uk.com

For the location of your nearest Trend Service Agent, please call Trend Customer Services or see our stockist locator at www.trend-uk.com

**UK UK DECLARATION OF
CA CONFORMITY**

The undersigned, representing the following manufacturer

Manufacturer:

Trend Tool Technology Ltd, Watford, England WD24 7TR declares that the product(s):

Product Identification:

Product: Plunge Router

Brand: Trend

Model: T8E (240V) & T8EL (110V)

Conforms to the following UK Regulations

- The Supply of Machinery (Safety) Regulations, 2008, S.I. 2008/1597 (as amended),
- Electromagnetic Compatibility Regulations, 2016, S.I. 2016/1091 (as amended),
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, S.I. 2012/3032 (as amended),

and the following Designated Standards:

S.I. 2008/1597: EN 62841-1+2015+AC:15
EN 62841-2-17:2017

S.I. 2016/1091: EN 55014-1:2021
EN 55014-2:2021
EN 61000-3-2:2019+A1:2021 (not T8EL 110V)
EN 61000-3-3:2013+A1:2019+A2:2021 (not T8EL 110V)

The undersigned is responsible for compilation of the technical file and makes this declaration on behalf of Trend Tool Technology Ltd.



Neil McMillan
Technical Director

Trend Tool Technology Ltd,
Odhams Trading Estate,
Watford, WD24 7TR,
England

Place of issue: Watford England
Date of issue: 14/04/2023

EN		EU - Declaration of Conformity	
Router	Product Ref.		
We declare under our sole responsibility that the stated products comply with all applicable provisions of the directives and regulations listed below and are in conformity with the following standards. Technical file at: *			
Router	T8E	2006/42/EC 2011/65/EU & (EU) 2015/863 2014/30/EU	EN 62841-1:2015+AC:15 EN 62841-2-17:2017 EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1:2021 EN 61000-3-3:2013+A1:2019+A2:2021
	T8EL	2006/42/EC 2011/65/EU & (EU) 2015/863 2014/30/EU	EN 62841-1:2015+AC:15 EN 62841-2-17:2017 EN IEC 55014-1:2021 EN IEC 55014-2:2021
		  *Trend Tool Technology Ltd 3rd Floor, Kilmore House, Park Lane, Spencer Dock, Dublin 1, Ireland Neil McMillan Technical Director Trend Tool Technology Ltd Unit 6 Odhams Trading Estate, St. Albans Road, Watford, Herts, WD24 7TR, England, United Kingdom Place Watford, England Date of issue: 14/04/2023	

LEAF/CE/DOC/T8E



Trend Tool Technology Ltd.
Watford, WD24 7TR, England
Tel: 0044(0)1923 249911
technical@trendm.co.uk
www.trend-uk.com

EU Importer:
Trend Tool Technology Ltd.
3rd Floor, Kilmore House, Park Lane,
Spencer Dock, Dublin 1, Ireland

© Trend Tool Technology Ltd. 2023.
© All trademarks acknowledged E&OE

No part of this publication may be reproduced, stored or transmitted in any form without prior permission. Our policy of continuous improvement means that specifications may change without notice. Trend Tool Technology Ltd. cannot be held liable for any material rendered unusable, or for any for of consequential loss. E&OE.

