



INSTRUCTIONS FOR

BENCH GRINDER 200MM 450W/230V HEAVY-DUTY

MODEL NO: **BG200/99.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Wear a mask

1. SAFETY

1.1. Electrical Safety

- WARNING!** It is the user's responsibility to check the following:
Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey dealer.
If used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested. Electrical safety information, it is important that the following information is read and understood.
- ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- ✓ Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- ✓ Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.
- ✗ **DO NOT** pull or carry the appliance by the power cable.
- ✗ **DO NOT** pull the plug from the socket by the cable.
- ✗ **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

This product is fitted with a BS1363/A 13 Amp 3 pin plug.

If the cable or plug is damaged during use, switch the electricity supply and remove from use.

Ensure that repairs are carried out by a qualified electrician.

Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.

a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.

b) Connect the BROWN live wire to the live terminal 'L'.


c) Connect the BLUE neutral wire to the neutral terminal 'N'.

Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.

Sealey recommend that repairs are carried out by a qualified electrician.

1.2. General Safety

- WARNING!** Disconnect the grinder from the mains power, and ensure the grinding wheels are at a standstill before attempting to change accessories, service or perform any maintenance.
Note: With the exception of "Abrasive Wheels Regulations" safety instructions will also apply to use of a wire brush on appropriate models.
- ✓ Maintain the grinder in good condition and check moving parts alignment regularly.
- ✓ Replace or repair damaged parts. Use recommended parts only. Non authorised parts may be dangerous and will invalidate the warranty.
- ▲ **DANGER! DO NOT** use a damaged stone as it is dangerous and may cause damage or serious personal injury.
- WARNING!** Only persons qualified under the "Abrasive Wheels Regulations" and holding a current grinding wheel certificate are to change or dress grinding stones. Unplug grinder from mains power and refer to chapter 5 "Grinding Stones" for details.
- WARNING!** Keep all guards and holding screws in place, tight and in good working order. Check regularly for damaged parts.
A guard or any other part that is damaged should be repaired or replaced before tool is used. The safety guard is a mandatory fitting where grinder is used in premises covered by the Health & Safety at Work Act.
- ✓ Locate grinder in an adequate working area for its function, keep area clean, tidy and free from unrelated materials. Ensure adequate lighting.
- ✓ Before each use check grinding wheel for condition. If worn or damaged replace immediately.
- WARNING!** Always wear approved eye or face protection when operating the grinder.
- ✓ Use breathing protection in accordance with COSHH regulations if fumes or dust pose a hazard. Wear ear defenders if necessary.
- ✓ Keep hands and body clear of the workpiece when operating the grinder.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non slip shoes.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings, and other loose jewellery, and contain and/ or tie back long hair.
- ✓ Keep children and unauthorised persons away from the working area.
- ✗ **DO NOT** force the grinder to achieve a task it was not designed to perform.
- ✗ **DO NOT** operate the grinder if any parts are damaged or missing as this may cause failure or possible personal injury.
- WARNING! DO NOT** grind, or sand any materials containing asbestos.
- ✗ **DO NOT** switch the grinder on whilst the wheel is in contact with the work piece.
- ✗ **DO NOT** get the grinder wet or use in damp or wet locations or areas where there is condensation.

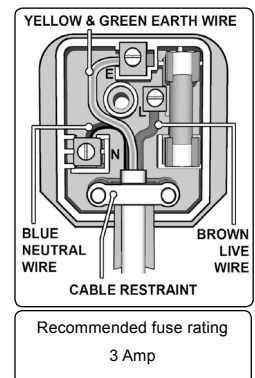

- ✗ **DO NOT** use grinder where there are flammable liquids, solids or gases such as paint solvents, including waste wiping or cleaning rags etc.
- ✗ **DO NOT** touch the workpiece close to the ground surface as it will be very hot. Allow to cool. The workpiece may also be very sharp.
- ✗ **DO NOT** operate the grinder when you are tired, under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** leave the grinder operating whilst unattended.
- ✓ When not in use switch the grinder off, and disconnect from the mains power supply, and clean the machine and working area.

2. INTRODUCTION

High power induction motor suitable for workshop use. High duty cycle performance is particularly recommended for frequent use applications. Equipped with fully CE approved safety guards and wheel location flanges to meet current EU abrasive wheel regulations. Motor and switchgear meet CE low voltage and EMC directives. Fitted with an ASTA/BS approved safety plug.

3. SPECIFICATION

Model no:**BG200/99.V2**
 Motor:600W/230V
 No Load Speed: 3000rpm
 Axle Diameter: 16mm
 Supplied with:2 x Stones
 Weight:20kg

4. ASSEMBLY

- 4.1. Unpack the product and check contents against the list below. Should there be any damaged or missing parts contact your supplier immediately.
1. Grinder
 2. Eye shield Support Plate x 2
 3. Eye shield x 2
 4. Right & Left Hand Tool Rests
 5. Screws & Washers

WARNING! Before assembly check to ensure grinder is unplugged from mains.

4.2. Eye shield.

4.2.1. Attach eye shield support plates (fig.1) and (fig.4) to the grinding wheel covers with screws and washers.

4.2.2. Fit eye shields (fig.1) to support plates with screws, nuts and washers.

4.3. Tool Rest.

4.3.1. Take tool rest (fig 2) and align it with bolt holes on the inside of the grinding wheel cover.

4.3.2. Secure rest with screws, knobs and washers as shown, ensuring gap between wheel and rest is a maximum of 2mm.

4.3.3. Set spark arrestor gap of approximately 2mm see (fig.5)

4.3.4. When both rests and spark arrestors have been fitted turn the grinding wheels by hand to confirm clearance.

4.4. Installation.

4.4.1. The grinder should be mounted on a firm, fireproof surface.

4.4.2. The grinder is supplied with suction feet but may also be bolted or screwed to the work bench using the base holes provided.

5. GRINDING WHEELS

5.1. **MANDATORY SAFETY INSTRUCTIONS.** (The following instructions must be observed together with those in Section 1).

DANGER! Use of a damaged wheel (stone) is dangerous and may cause damage and/or personal injury.

WARNING! Ensure grinder is unplugged from mains supply before attempting to change grinding wheel (stone). Only persons qualified under the "Abrasive Wheels Regulations" and holding a current grinding wheel certificate are authorised to change and dress grinding wheels (stones).

✓ *Grinding wheels used with this machine must be of an adequate speed rating and suitable for the material to be ground.*

✓ *Ensure the maximum speed specification of the wheel is higher than that indicated on the machine data plate.*

✓ *Check that grinding wheels are secure and that wheels are not worn or damaged, that there are no fissures or cracks. If damaged replace immediately.*

✓ *Ensure replacement wheel is not damaged in any way such as cracks, deformations or splinters etc. Also check the mounting flanges for deformation, burrs or chips. Damaged flanges must **NOT** be used as they may produce high stresses in the wheel causing it to break. **DO NOT** over tighten a wheel. Never tamper with a wheel in order to adapt it to a different size shaft.*

✓ *Install a new wheel as in 4.2. Once mounted on the grinder test the wheel before use by facing the grinder in a safe direction (point it away from yourself, others and vulnerable items) and run for a short time. Dress the wheel if necessary.*

5.2. Wheel Changing Procedure.

WARNING! Unplug grinder from the mains power supply before changing wheel.

5.2.1. Remove the eye shield support plate, loosen and pull the tool rest out as far as possible.

5.2.2. Remove the three screws and the corresponding nuts washers and lock washers from the side of the wheel cover and remove.

5.2.3. Hold grinding wheel firmly - protect your hands with a cloth, or wear gloves. Unscrew retaining nut (fig.3.1).

Note: *The nut on the right side of the grinder has standard right-hand thread (undo anti-clockwise). The left side nut has a left-hand thread and must be loosened by turning clockwise. It may be necessary to strike the wrench sharply in the loosening direction, with a soft-faced hammer, to loosen the nut.*




5.2.4. Remove grinding wheel washer (fig.3.2), blotter (3), wheel (4), 2nd blotter (5) and washer (6) from main spindle (7).

5.2.5. Carefully inspect the new wheel before installing to ensure there are no fissures, chips, or cracks.

WARNING! DO NOT USE A DAMAGED WHEEL.

5.2.6. Inspect the blotters - if they are damaged, replace them. The grinder must never be used without genuine wheel blotters.

5.2.7. Install the new wheel by reversing steps above. **Ensure washers (2 & 6) are installed correctly with the concave side against the blotter.**

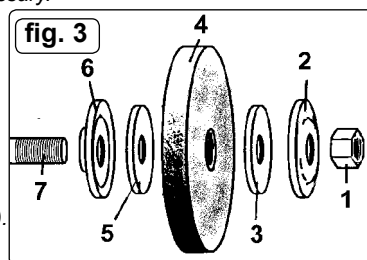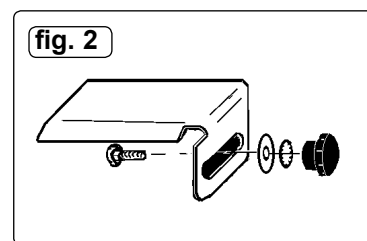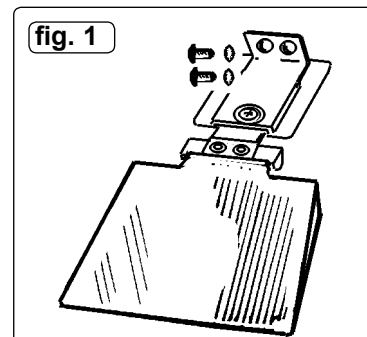





- 5.2.8. Hold wheel steady and secure locking nut. **DO NOT** over-tighten as this may crack the wheel.
- 5.2.9. Replace wheel cover, replace eye shield, re-adjust tool rest to not more than 2mm from wheel and tighten securely.

6. OPERATION

- 6.1. **Pre-use Inspection.**
 - **WARNING! INSPECT THE GRINDER BEFORE USE. ENSURE THE GRINDER IS UNPLUGGED FROM THE MAINS POWER BEFORE COMMENCING THE INSPECTION.**
- 6.1.1. Check the tool rests are securely fixed and are not more than 2mm from the grinding wheels.
- 6.1.2. Check that eye shields are in good condition, secure and that you can see through them clearly.
- 6.1.3. Turn the grinding wheels by hand and check for any damage. Check they do not touch the tool rests and are correctly aligned.
- 6.1.4. If any of the above checks fail, replace, repair, or adjust as necessary before starting the grinder.
- 6.2. **Wheel Use.**
- 6.2.1. The grinder is supplied with two aluminium oxide wheels, one coarse and one fine. Fine is preferred for hard materials and coarse for soft materials.
- 6.2.2. If the surface of the wheel becomes "loaded" (coated with particles of the material being ground) it is probably the wrong grade for the job. **Important reminder: Only a person holding a grinding wheel certificate may install wheels. See Section 5.**
- 6.3. **Using the Grinder.**
 - **WARNING! Before commencing work, ensure you read, understand and apply the Section 1 Safety Instructions.**
- 6.3.1. Plug grinder into the mains power supply.
- 6.3.2. Adjust the eye shield to give maximum protection.
- 6.3.3. Switch on the grinder and bring the workpiece slowly into contact with the rotating wheel.
- 6.3.4. When the task is complete unplug the grinder from the mains power supply and clean the machine ready for next use.

7. MAINTENANCE

- **WARNING! Ensure the grinder is unplugged from the mains power supply before performing any maintenance or service.**
- 7.1. As the grinding wheels wear, adjust the positions of the tool rests. Each rest must be set not more than 2mm from the grinding surface.
- 7.2. Regularly remove the grinding wheel covers and clean out any dust and dirt.
- 7.3. The machine motor and bearings are sealed units and require no regular maintenance. Should you require assistance, contact your local service agent.

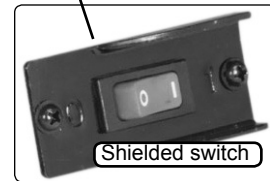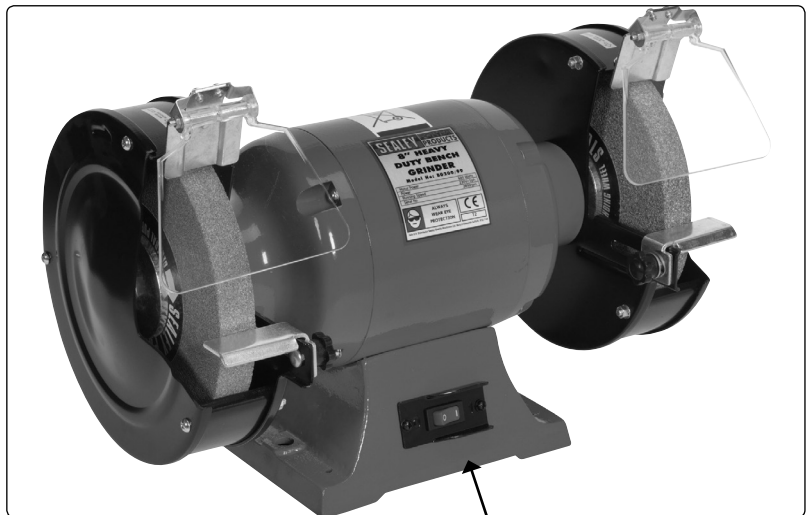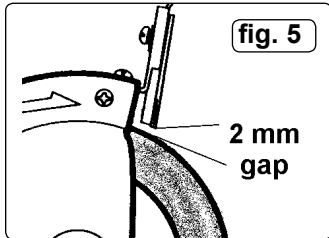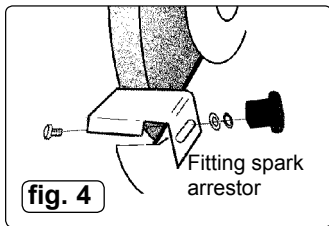

Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.

WEEE Regulations

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group.
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk.
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk