

baridi

Baridi Double Door, Back Bar Drinks Fridge/Cooler, 190L Capacity - Hinged/Sliding Doors



Model No: DH272, DH273

Thank you for purchasing a Baridi product from the Dellonda range. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully and note any safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to instructions



Indoor use only



WARNING!
flammable material

SPECIFICATION

	DH272	DH273
Capacity	190L or 262 x 330ml cans	
Climate Class*	0, 1, 2, 3, 4, 6	
Colour	Black	
Electrical Class	Class 1	
Energy Efficiency Class	E	
Foaming Gas	Cyclopentane	
Frequency	50Hz	
Internal Dimensions (W x D x H):	780 x 405 x 740mm	780 x 405 x 740mm
IP Rating	IPX0	
Weight	52kg	
Power Cable Length	1.5m	
Plug Type	3-Pin BS	
Dimensions (W x D x H)	865 x 495 x 870mm	865 x 510 x 870mm
Rated Current	1.5A	
Refrigerant	R600a (68g)	
Temperature Range	0 - 10°C	
Voltage	220-240V	
Volume	190L (nett)	
Noise Level	45dB	
Max. Load Capacity (Each Shelf)	19kg	

* The climate class indicates the environment which the product has been tested.
The product has been tested in the following conditions of (Dry Bulb Temperature °C / Relative Humidity % RH)
0 = (20°C/50%RH)
1 = (16°C/80%RH)
2 = (22°C/65%RH)
3 = (25°C/60%RH)
4 = (30°C/55%RH)
6 = (27°C/70%RH)

SAFETY

ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:
- Check all electrical equipment and appliances to ensure that they are safe before using.
- Inspect power supply leads, plugs and all electrical connections for wear and damage.
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- **DO NOT** use worn or damaged cables, plugs or connectors.
- Ensure that any faulty item is repaired or replaced immediately by a Dellonda qualified technician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- Dellonda recommend that an RCD (Residual Current Device) is used with all electrical products.
- **Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
- **DO NOT** pull or carry the appliance by the power cable.
- **DO NOT** pull the plug from the socket by the cable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Dellonda recommend that an RCD (Residual Current Device) is used with all electrical products.
IMPORTANT: Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
 - **DO NOT** pull or carry the appliance by the power cable. **DO NOT** pull the plug from the socket by the cable.
- GENERAL SAFETY**
- Children shall **NOT** play with the appliance.
 - Cleaning and user maintenance on the appliance shall not be made by children without supervision.
 - **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
 - The appliance shall be disconnected from its power source during service and when replacing parts.
 - Before switching on your fridge for the first time, read the information in this user manual carefully.
 - Please keep this booklet in a safe place for future reference. If you ever sell your fridge, hand this user manual to the new owner.
 - The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions. The user is liable for any material damage or bodily injury (product liability) caused by using the refrigerator carelessly or failing to follow instructions.
 - **DO NOT** use damaged appliances. If you are in any doubt, consult a qualified engineer.
 - Connection and installation of your fridge are to be carried out in strict compliance with the relative instructions in this manual.
 - For safety, the appliance must be properly earthed in accordance with specifications.



- The refrigerant used in this appliance is flammable. **DO NOT** damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If the refrigerant comes into contact with the eyes, it may cause serious eye injury.
- **WARNING!** Always remember to disconnect from mains supply before cleaning. Always check that the plug and cable are undamaged.
- All repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous. Never try to repair the refrigerator yourself.
- Ensure your chosen location has a flat and stable surface. The unit may be levelled by turning both of the stabilisers in the front corners. Check the unit is level using a spirit level. For stability, please ensure stabilisers are fully wound to floor.
- **WARNING!** Keep clear of obstruction all ventilation openings in the appliance enclosure or the structure for building in.
- **DO NOT** position this appliance with its rear panel directly against a wall. Maintain a gap of at least 50mm between the appliance and any adjacent wall.
- Position the fridge away from heat sources, where the units is well ventilated and protected from moisture, or extremes of heat or cold. The fridge may not function properly if the temperature rises above +30°C.
- Ensure all vents are clear of obstruction particularly if the unit is built-in.
- Make sure there is a suitable power outlet with proper grounding to power the fridge.
- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **DO NOT** use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **DO NOT** use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Electrical equipment should not be placed under the unit or where refrigerant could gather in the event of a leak.

OPERATION

BEFORE FIRST USE

IMPORTANT! ALLOW THE REFRIGERATOR TO STAND UPRIGHT FOR 24 HOURS BEFORE CONNECTING TO MAINS SUPPLY.


- **DO NOT** position this appliance with its rear panel directly against a wall. For good circulation and operating efficiency, the ventilation grilles must never be blocked.
 - Remove all packaging and place the fridge on a stable, secure flat surface. Position the fridge away from heat sources, where the unit is well-ventilated and protected from moisture, or extremes of heat or cold. The fridge may not function properly if the temperature rises above +30°C.
 - **NEVER USE AN EXTENSION LEAD:** If the mains cable will not reach the nearest socket, either rearrange your layout or ask a qualified electrician to fit a new socket.
 - If power is cut off, wait for at least 5 minutes before plugging the unit in again to avoid damaging the compressor.
 - **DO NOT** place combustible, explosive or volatile articles, corrosive acid or alkali, or liquid in glass containers into the fridge.
 - Ensure your chosen location has a flat and stable surface. The unit may be levelled by turning both of the stabilisers in the front corners. Check the unit is level using a spirit level.
- NOTE:** It is not recommended to operate the fridge on settings that run below 4°C/MAX. Such settings will cause content at the rear of the fridge close to evaporator to freeze, and will result in unnecessary strain on the cooling systems, and undue high energy consumption.

OPERATION

- Place the shelves on their supports.
- Check the fridge is working properly before installing and filling it.
- Never put warm or hot foods directly into the fridge.

ELECTRONIC THERMOSTAT

- The digital display will show the internal cabinet temperature. **NOTE:** This may fluctuate as the refrigerator cycles on/off this is not a fault.
 - When the refrigerator is in cooling mode the light under the cooling symbol will illuminate.
 - When the refrigerator cycles off the light will not be illuminated.
 - 1. To turn on press the ON/OFF button.
 - 2. To turn off press and hold the ON/OFF button for 6 seconds the display will disappear.
- NOTE:** If the unit is unplugged, turned off or power is lost you must wait 3 to 5 minutes before restarting the unit.
- If you attempt to restart without waiting, the refrigerator will not start and may damage the compressor.

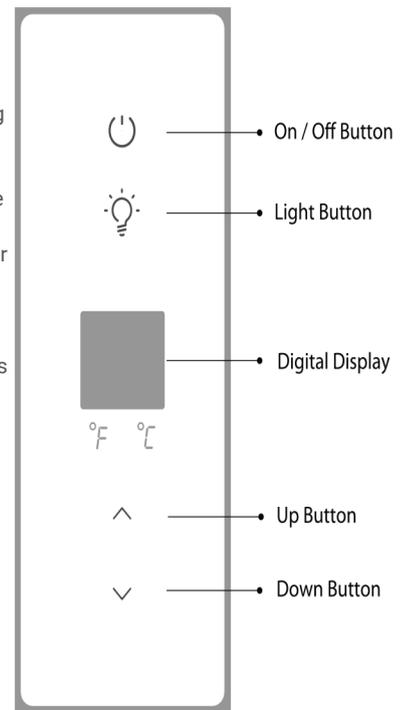

MAINTENANCE

- **WARNING!** Disconnect from mains supply before performing maintenance.

DEFROSTING

- Ice may build up on the evaporator if the unit is put to work constantly for a period of time.
- When ice begins to build up to approx 10 mm or 1/5 inch thick, defrost is required.

- Empty the cabinet of the products that must stay cold. Switch the thermostat to 'OFF' position.
- The ice will start to melt. When the ice has melted and drained away, dry off any residual moisture with a soft cloth.
- Switch on the power again via thermostat.

Please note it will take around 12 hours for the fridge and contents to get back down to temperature.

CLEANING

1. UNPLUG your fridge and remove any stock to a suitable back-up fridge.
2. Wash the inner compartment with warm water and neutral detergent. **DO NOT** allow the control panel, cables or plug to get wet. NEVER use corrosive detergents, wire brushes, or abrasive scourers to clean your chiller. NEVER use metal or sharp implements to remove debris.
3. Dry all surfaces thoroughly.
4. To ensure trouble-free operation the condenser should be cleaned every three months where appropriate using a vacuum cleaner. The condenser is located behind lower grill of the cabinet. In exceptionally dusty locations the condenser should be cleaned more often.
5. Use mild soapy water to clean the gasket and seals.

REPLACING LIGHT STRIP

WARNING! Disconnect from mains supply.

- Remove the screws on both ends of the light. Gently pull down the light. Carefully remove the wires.
- Connect the wires and install the new light, replace the screws to fix in position.

STORAGE

- Store upright in a dry, child free place, out of direct sunlight.

TRANSPORT

- Follow directions on carton. **DO NOT** clamp on the front or sides.



Environment Protection, Waste Electrical and Waste Electronic Equipment Regulations (WEEE)



Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Baridi, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Baridi, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757575 • **Email:** support@baridi.co.uk • **Web:** www.baridi.co.uk