

INSTRUCTIONS FOR:

ROADSTART UNIT

MODEL No: RS125.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: BEFORE USING THIS PRODUCT, PLEASE READ THE INSTRUCTIONS CAREFULLY. MAKE CAREFUL NOTE OF SAFETY INSTRUCTIONS, WARNINGS AND CAUTIONS. THIS PRODUCT SHOULD ONLY BE USED FOR ITS INTENDED PURPOSE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.



Refer to Instruction Manual



Protect from Rain



Warning: Explosive Material



Warning: Electricity



Use in Well Ventilated Areas



Keep Away From Sources of Ignition; Battery Could Explode

IMPORTANT WARRANTY INFORMATION: KEEP YOUR ROADSTART HEALTHY

Read and understand the general safety and operating instructions before use. The following information is intended to help you keep the product in top working order.

NOTE – The battery in this unit is a consumable item and its ability to accept charge will reduce over time. We will warrant it against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear.

If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery even if it is less than one year old.

You can help prolong the life cycle of the battery by following a few simple guidelines.

- Plug in your new RoadStart to the mains transformer and make an INITIAL charge lasting 72 hours.
- Ensure the unit is fully charged before storage.
- **DO NOT** leave the RoadStart for longer than 2 months without putting it on charge.
- DO NOT attempt to start a vehicle when the RoadStart battery voltage is reduced to less than 7V.
- DO NOT drop or handle the RoadStart roughly this will break or disconnect the battery terminals rendering the battery useless and the
 warranty void.
- DO NOT use any other charger, other than the one supplied, to recharge the battery.

1. SAFETY INSTRUCTIONS

IMPORTANT: To reduce the risk of a battery explosion, follow these instructions and those published by the battery manufacturer and the manufacturer of any equipment you intend to use in the vicinity of the battery. Remember to review warning marks on all products and on engines.

1.1. PERSONAL PRECAUTIONS

- ✓ Ensure there is another person within hearing range, or close enough to come to your aid should a problem arise, when working near a lead-acid battery.
- ✓ Have fresh water and soap nearby in case battery acid contacts skin, clothing or eyes.
- ✓ Wear safety eye protection and protective clothing. Avoid touching eyes while working with a battery.
- ✓ Wash immediately with soap and water if battery acid contacts skin or clothing. If acid enters eye, flush eye immediately with cool, clean running water for at least 15 minutes and seek immediate medical attention.
- ✓ Remove personal metallic items such as rings, bracelets, necklaces and watches. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, which may cause severe burns.

1.2. IMPORTANT SAFETY INSTRUCTIONS

- Familiarise yourself with the applications, limitations and potential hazards of the RoadStart.
- ✓ Keep the unit in good working order and condition. Replace damaged parts immediately.
- ✓ Use only recommended parts. To use unapproved parts may be dangerous and will invalidate your warranty.
- The RoadStart must only be opened and checked by qualified service personnel. DO NOT disassemble the unit for any reason.
- ✓ Keep children and unauthorised persons away from the work area.
- Keep work area clean and tidy and free from unrelated materials. Ensure that there is adequate lighting.
- ✓ If the RoadStart receives a sharp knock or blow, it must be checked by a qualified service agent before being used.
- ✓ When not in use re-charge every two months.
- x DO NOT touch positive and negative clamps together as this could cause an explosion.
- x DO NOT smoke or allow a spark, or flame in the vicinity of the battery or engine.
- x DO NOT drop any metal item onto the battery as it may spark or short circuit the battery, which could cause an explosion.
- x DO NOT use RoadStart to recharge dry cell batteries that are commonly used with home appliances. These batteries may explode and cause personal injury and damage to property.
- x DO NOT charge or boost a frozen battery.
- x DO NOT use attachments other than those recommended. To do so may cause damage to the unit and other equipment and possible personal injury.
- x DO NOT pull or carry the unit by its cables and do not pull the negative and positive clamps from the battery terminals.
- x DO NOT operate in vicinity of flammable liquids or gases.
- x DO NOT recharge the unit with plugs, cables or attachments that are damaged. Replace such items immediately.
- x DO NOT use this RoadStart to perform a task for which it is not designed.
- x DO NOT store the unit in damp or wet locations or where the temperature may exceed 50°C.
- x DO NOT submerge the unit in water.
- **DO NOT** use whilst under the influence of drugs, alcohol or intoxicating medication.

- x DO NOT leave the unit in a totally discharged state for an extended period of time as this may result in permanent damage to the battery.
- x DO NOT cross-connect the power leads from the RoadStart to the battery. Ensure that positive is to positive and negative is to negative.
- ✓ Ensure that the unit is fully charged before storage.

1.3. ELECTRICAL SAFETY (with respect to mains chargers)

□ **WARNING!** It is the user's responsibility to check the following:

You must check the AC adaptor to ensure that it is safe before using. You must inspect the power supply lead, plugs and all electrical connections for wear and damage. You must ensure the risk of electric shock is minimised by the installation of appropriate safety devices. An RCCB (Residual Current Circuit Breaker) should be incorporated in the main distribution board. We recommend that an RCD (Residual Current Device) is used with all electrical products. It is particularly important to use an RCD with portable products that plug into an electrical supply not protected by an RCCB. If in doubt consult a qualified electrician. You can obtain a Residual Current Device through your Sealey dealer. You must read and understand instructions concerning electrical safety.

- 1.3.1. The *Electricity At Work Act 1989* requires all portable electrical appliances, if used on business premises, to be tested by a qualified person, using a Portable Appliance Tester (PAT), at least once a year.
- 1.3.2. The *Health & Safety at Work Act 1974* makes owners of electrical appliances responsible for the safe condition of the appliance and the safety of the appliance operator. If in any doubt about electrical safety, contact a qualified electrician.
- 1.3.3. Ensure that the insulation on all cables and the product itself is safe before connecting to the mains power supply.
- 1.3.4. Ensure that cables are always protected against short circuit and overload.
- 1.3.5. Regularly inspect power supply, leads, plugs for wear and damage and power connections to ensure that none is loose.
- 1.3.6. Check product voltage is the same as power supply to be used.

2. INTRODUCTION AND SPECIFICATION

2.1. Introduction

Composite case with battery clip storage lugs and carry handle. Easily read, colour coded analogue gauge measures battery condition and charge indicator. Test cycle button gives true battery indication. 230Volt charger with automatic power cut-off prevents damage to battery whilst charging from the mains. Fitted with 12V power socket that will accept any 12V device with a vehicle accessory plug. Supplied with mains charger and double plug adaptor lead for in-car charging.

2.2 Specification

Model:	RS125.V2
Cold Cranking Amps:	12V - 1200A / 24V - 600A
Peak Amps:	12V - 3000A / 24V - 1500A
Voltage:	12V or 24V Switchable
Auxiliary Output:	12V
Cable and Clamp Length:	1mtr
Weight:	15kg



3. CHARGING INSTRUCTIONS



WARNING! YOU MUST FOLLOW SAFETY INSTRUCTIONS

3.1. Initial Charging Procedure.


3.1.1. When first used, the RoadStart unit should be charged for a minimum of 72 hours. The RoadStart can be left plugged into the mains indefinitely as the internal PCB has an automatic float charging circuit which will not allow overcharging.

3.2. Recharging Using the Mains Adaptor.

▲ When recharging, the Voltage Selector **MUST** be set to **12V**.

- 3.2.1. The RS125 has a charging jack that is inserted into the charge port, located on the upper rear panel (fig.2).
- 3.2.2. Plug the charger (fig.4) into a 230Vac mains supply and turn on.
- 3.2.3. Charging progress can be monitored by pressing the Test Button (fig.3) and checking the Battery Meter (fig.3). Do not stop charging until the battery meter indicates that the unit is fully charged.
- 3.2.4. When not in use, the unit can be left connected to the mains charger as the internal PCB has an automatic float charging circuit which will not allow overcharging.



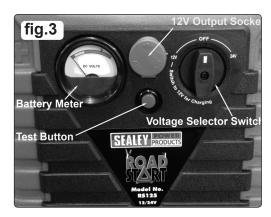


3.3. Recharging Using the Vehicle Charger.

Note: Always use the mains charging facility in preference to vehicle charging when available.

- 3.3.1. Start the vehicle engine.
- 3.3.2. Plug one end of the power lead (Fig.3) into the 12Vdc socket (Fig.2) on the unit and the other end into the vehicle vehicle accessory outlet.
- 3.3.3. Depress the test button once every hour to check the power level.

□ WARNING! DO NOT OVERCHARGE

3.3.4. The Vehicle Charging method is not an automatic charging method. Frequent monitoring of the charging process is the only safe way of ensuring the unit is not overcharged.

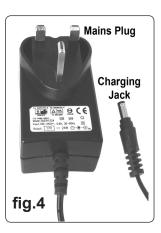

4. OPERATION



WARNING! YOU MUST FOLLOW SAFETY INSTRUCTIONS AND ENSURE THAT THE ROADSTART AND VEHICLE VOLTAGES ARE THE SAME.

4.1. Vehicle Battery Charging

NOTE: Some vehicle ignition systems must be turned to "*Accessory*" to activate the vehicle accessory socket. A defective battery may not accept a charge from the portable power source.

- 4.1.1. Plug one end of the power lead (Fig.3) into the RoadStart unit.
- 4.1.2. Plug the other end into the vehicle accessory socket.
- 4.1.3. Allow the battery to charge for thirty minutes.
- 4.1.4. Remove the power lead and start the vehicle.

4.2 Emergency Jump Starter

NOTE: For optimum performance, the unit should not be stored below 10°C when using the unit as a jump starter.

- 4.2.1. Turn off the vehicle ignition.
- 4.2.2. Ensure voltage selector switch is in 'OFF' position.
- 4.2.3. Attach the RED (positive +) clamp to the positive terminal of the battery.
- 4.2.4. Attach the BLACK (negative -) clamp to the vehicle chassis.
- 4.2.5. If the alarm buzzer sounds, it indicates that the connections are crossed: remove clamps and replace them to the correct connections.
- 4.2.6. Ensure that all cables are clear of moving belts and rotating fans.
- 4.2.7 Select either 12V or 24V with the voltage selector switch.
- 4.2.8. Maintain a safe distance from the battery whilst jump starting.
- 4.2.9. Turn on the ignition to start the vehicle.

NOTE: If the vehicle does not start after 6 seconds, allow the RoadStart unit to cool for 3 minutes, before attempting to jump start the vehicle again. If this is not done, the unit could sustain damage.

- 4.2.10. When the vehicle has started, disconnect the Roadstart from the vehicle within 15 seconds.
- 4.2.11. Return the clamps to the side storage lugs.

IN THE EVENT OF INADVERTENT CONNECTION TO 24VOLT SYSTEM WITH THE SELECTION IN THE 12VOLT POSITION DO NOT TOUCH THE VOLTAGE SELECTOR SWITCH.



DANGER OF EXPLOSION, WHICH COULD RESULT IN DAMAGE AND INJURY, IF THE ABOVE INSTRUCTIONS ARE NOT OBSERVED.

If the RoadStart is connected to the incorrect voltage, it is recommended that it is returned for inspection **BEFORE** being used again.

4.3. Alternative Vehicle Power Supply

- 4.3.1. When a vehicle battery is disconnected, the memory systems in radios, electronic ignition systems and alarms are frequently lost.
- 4.3.2. When replacing a battery the RoadStart unit can be used as an alternative power supply by connecting the unit DC extension lead into the vehicle accessory socket.
- 4.3.3. This will prevent loss of memory in the systems outlined in Paragraph 4.3.1.
- WARNING! The positive battery cable will be live and MUST be insulated (e.g. in a heavy duty plastic bag).

4.4. Multipurpose Power Supply

- 4.4.1. The RoadStart units can be used as a multipurpose power supply to power up any equipment with a built-in 12VDC male adaptor.
- 4.4.2. Used with an inverter, the RoadStart unit can operate equipment usually powered by either 110VAC or 230VAC. The Sealey Catalogue contains a range of suitable inverters.

NOTE: The inverter power draw must not exceed 300 Watts.

4.5. The number of times that the RoadStart can be used between charges depends on a number of factors, for instance: the type and size of engine being started, the state of charge and the ambient temperature will all affect the endurance of the unit.

5. TROUBLESHOOTING

PROBLEM	SOLUTION
Alarm buzzer sounds.	Check for cross connection and rectify.
RoadStart has been charging for 20 hours or more and there is no change in the charge level.	Check charger to verify if it is charging. The charger should be warm if operating correctly. Check all connections.
Charge meter reads low, but when the AC adaptor is plugged in the needle flicks to the right.	The internal battery of the RoadStart needs to be replaced.
RoadStart is fully charged but has no output.	Check the connection between the cables and clamps. Ensure that they are tight and free from corrosion. Clean and re-crimp if neccessary.

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to: www.sealey.co.uk, email: sales@sealey.co.uk or phone: 01284 757500.



Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted and taken to a recycle centre for disposal of in a manner which is compatible with the environment.

When the product is no longer required, it must be disposed of in an environmentally protective way.

Battery Removal

NOTE: The RoadStart battery is a sealed, lead-acid type. By law, it must be removed and recycled, or disposed of properly, according to national and/or local regulations.

- 1. Place the RoadStart unit front side down.
- 2. Remove the screws from the rear panel and lift off from the unit enclosure.
- 3. Disconnect the wires from the two battery terminals, taking care to avoid accidental arcing of the terminals.
- Lift the batteries out of the casing.

Disposal

Take the battery to a recycling centre that handles sealed, lead-acid batteries.

If there is no recycling centre in the area, contact the local environmental agency for disposal instructions.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.




Sole UK Distributor, Sealey Group, Kempson Way, Suffolk Business Park, Bury St. Edmunds, Suffolk, IP32 7AR



01284 757500



www.sealey.co.uk



sales@sealey.co.uk

© Jack Sealey Ltd Original Language Version

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

RS125 V2 | Issue: 3(L) - 24/07/15