

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS


1.1. ELECTRICAL SAFETY. **WARNING! It is the user's responsibility to read, understand and comply with the following:**

You must check all electrical equipment and appliances to ensure they are safe before using. You must inspect power supply leads, plugs and all electrical connections for wear and damage. You must ensure the risk of electric shock is minimised by the installation of appropriate safety devices. An RCCB (Residual Current Circuit Breaker) should be incorporated in the main distribution board. We also recommend that an RCD (Residual Current Device) is used with all electrical products. It is particularly important to use an RCD with portable products that are plugged into an electrical supply not protected by an RCCB. If in doubt consult a qualified electrician. You may obtain a Residual Current Device by contacting your Sealey dealer. **You must** also read and understand the following instructions concerning electrical safety.


- 1.1.1. The **Electricity At Work Act 1989** requires all portable electrical appliances, if used on business premises, to be tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.
- 1.1.2. The **Health & Safety at Work Act 1974** makes owners of electrical appliances responsible for the safe condition of the appliance and the safety of the appliance operator. **If in any doubt about electrical safety, contact a qualified electrician.**
- 1.1.3. Ensure the insulation on all cables and the product itself is safe before connecting to the mains power supply. See 1.1.1. & 1.1.2. above and use a Portable Appliance Tester (PAT).
- 1.1.4. Ensure that cables are always protected against short circuit and overload.
- 1.1.5. Regularly inspect power supply, leads and plugs for wear and damage and all electrical connections to ensure that none is loose.
- 1.1.6. **Important:** Ensure the voltage marked on the product is the same as the electrical power supply to be used and check that plugs are fitted with the correct capacity fuse. A 13 amp plug may require a fuse smaller than 13 amps for certain products.
- 1.1.7. **DO NOT** pull or carry the powered appliance by its power supply lead.
- 1.1.8. **DO NOT** pull power plugs from sockets by the power cable.
- 1.1.9. **DO NOT** use worn or damaged leads, plugs or connections. Immediately replace or have repaired by a qualified electrician. A U.K. 3 pin plug with ASTA/BS approval is fitted. In case of damage, cut off and fit a new plug according to the following instructions (discard old plug safely).

(UK only - see diagram at right). **Ensure the unit is correctly earthed via a three-pin plug.**

- a) **Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.**
- b) **Connect the BROWN live wire to live terminal 'L'.**
- c) **Connect the BLUE neutral wire to the neutral terminal 'N'.**
- d) **After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight.**

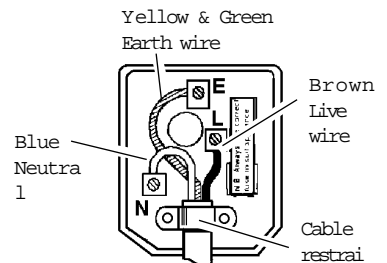

REPLACEMENT FUSES MUST BE OF THE SAME TYPE AND RATING AS THE ORIGINAL.

Double insulated products are often fitted with live (BROWN) and neutral (BLUE) wires only. Double insulated products are always marked with this symbol . **To re-wire, connect the brown & blue wires as indicated above. DO NOT connect the brown or blue to the earth terminal.**

- 1.1.10. **Cable extension reels.** When a cable extension reel is used it should be fully unwound before connection. A cable reel with an RCD fitted is recommended since any product which is plugged into the cable reel will be protected. The section of the cores in the cable reel is important. We suggest 1.5mm² section cable as a minimum but to be absolutely sure that the capacity of the cable reel is suitable for this product and for others that may be used in the other output sockets, we recommend the use of 2.5mm² section cable.

1.2 GENERAL SAFETY

- 3 Familiarise yourself with the application and limitations of the sander, as well as the specific potential hazards.
- p **WARNING!** Ensure all Health and Safety, local authority, and general workshop practice regulations are strictly adhered to.
- p **WARNING!** Disconnect from the mains power supply before changing accessories, servicing or performing any maintenance.
- p **WARNING! DO NOT** sand any materials containing asbestos.
- 3 Maintain and keep the sander in good condition (use an authorised service agent).
- 3 Check the alignment of moving parts regularly. For safest performance keep the sander clean at all times.
- 3 Before each use check all abrasive attachments for condition. If worn or damaged replace immediately.
- 3 Replace or repair damaged parts. Use recommended parts only. Unauthorised parts are dangerous and will invalidate the warranty.
- 3 Locate the sander in a suitable area, keep area clean, uncluttered and ensure there is adequate lighting.
- 3 Ensure the sander is situated on a solid work surface, adequate for supporting the weight of the sander and the workpiece.
- 3 Ensure there are no flammable or combustible materials near the work area.
- 3 Remove ill fitting clothing, ties and loose jewellery, and tie back long hair.
- 3 Maintain correct balance and footing, ensure the floor is not slippery and wear non-slip rubber soled footwear.
- 3 Keep hands and body clear of the worktable when operating the sander.
- 3 Wear approved safety eye or face protection, gloves, ear defenders and respiratory protection when operating the sander.
- 3 Avoid unintentional starting.
- 7 **DO NOT** use the sander for any purpose other than that for which it is designed.
- 7 **DO NOT** get the sander wet or use in damp or wet locations or areas where there is condensation.
- 7 **DO NOT** operate the sander when you are tired, under the influence of alcohol, drugs or intoxicating medication.
- 7 **DO NOT** leave the sander running unattended.
- 7 **DO NOT** touch the abrasive whilst operating, or whilst sander is plugged into the mains power.
- 7 **DO NOT** switch the sander on while the workpiece is in contact with the abrasive.
- 7 **DO NOT** operate the sander if any parts are damaged or missing as this may cause failure or possible personal injury.
- 7 **DO NOT** allow children or untrained persons to operate the sander. Keep them away from the work area.
- 7 **DO NOT** remove the safety guard whilst in use.
- 3 When not in use unplug from the mains power supply and make every effort to ensure the sander is childproof.

2. TECHNICAL SPECIFICATION



Belt 915 x 100mm
 Belt Speed 290m/min
 Disc Ø150mm

Disc Speed 1450rpm
 Table 190 x 125mm
 Table Tilt 45°
 Dust Extraction Port Ø38mm

Motor 245W 230V
 Weight 21kg

3. ASSEMBLY & ADJUSTMENT

- 3.1. Unpack the sander and check contents. Should there be any damaged or missing parts contact your supplier immediately.
- 3.2. Attach a sanding disc (fig 2.A) to the back plate by removing the self adhesive backing and carefully applying the disc to the plate. Note: your model may arrive with a disc already applied.
- 3.3. Insert table support rod (fig 1.1) into boss below and to left of disc (fig 2.X) and lock in place with bolt (fig 1.2).
- 3.4. The angle of the table may be adjusted by loosening locking nut (6) and positioning the angle gauge (5) accordingly.
- 3.5. The mitre gauge (fig 2.B) base bar locates in the groove in the table top (fig 1.4).
- 3.6. Bolt sander to a stable, fireproof bench or table which is strong enough to take the weight of the sander and the workpiece.

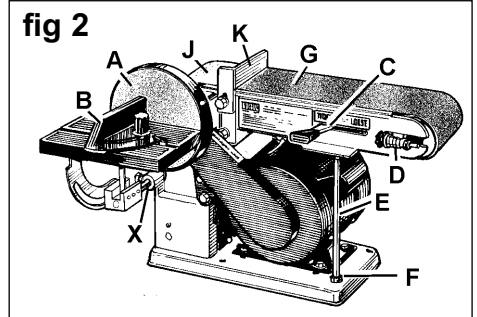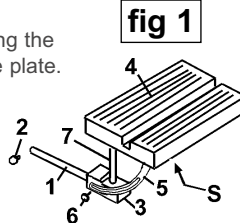

4. OPERATING INSTRUCTIONS

- p **WARNING! Before use, the sander must be bolted to a stable, fireproof bench or table which is strong enough to take the weight of the sander and the workpiece. Failure to comply with this instruction could result in damage and/or personal injury.**
- p **WARNING! Before each use rotate the sanding disc by hand to check it is undamaged and secure. Remove adjusting keys and wrenches before turning the sander on. Ensure you wear approved safety goggles, gloves, ear defenders and respiratory protection.**
- p **WARNING! DO NOT switch the sander on whilst the workpiece is in contact with the disc or belt. Keep all guards and holding screws in place, tight and in good working order. A guard or other part that is damaged should be first checked to ensure that it will operate properly and perform its intended function before the sander is used, if damaged replace part/s. The safety guards are mandatory when the sander is used in premises covered by the Health & Safety at Work Act.**

4.1. SANDING BELT (fig 2.G).


- 4.1.1. If the belt does not run centrally on the drums the tracking should be adjusted by turning knob (fig 2.D).
- 4.1.2. To stabilise the sanding bed, unscrew support rod (E) until it 'butts' up to the underside of the sanding belt bed and lock with nut (F).
- 4.1.3. The sanding belt bed (G) may be rotated through 90°, from the horizontal and locked for operating in a vertical position.
- 4.1.4. To alter the bed angle, remove the stop (K) and end guard (J). Loosen two clamp nuts located adjacent to upper pulley, (behind sanding disc).

4.2. SANDING TABLE (fig 1.4).

- 4.2.1. The table may be tilted through 45° by loosening thumb screw (6) which clamps the angle quadrant (5).
- 4.2.2. When operating sanding bed (fig 2.G) in the vertical position, mount table (fig 1.4) at the foot of the belt.
 - a. Remove table assembly and support rod (1). Loosen hex nuts on the underside of table holding table racket (7) steady, and remove bolt form angle quadrant (5) just under the table at point (S). Align the head of angle quadrant (5) with the inner screw hole on the underside of the table and secure with bolt.
 - b. Insert table support rod (1) into rear mounting hole and fix with locking bolt.
 - c. Align table as required and tighten all hex nuts and bolts.

5. OPERATING INSTRUCTIONS

- p **WARNING! Disconnect sander from the electrical supply before performing any service or maintenance.**
- 5.1. Keep the sander clean and replace a worn or damaged sanding belt or disc.
 - 5.2. To change sanding belt remove the bottom guard plate of belt bed. End guard and stop may remain in place.
 - 5.3. Push belt tension lever (fig 2.C) fully to the right. Remove old belt. Place new belt over the two drums (note direction arrows on the inside of the belt). Move the tension lever back to the left. Replace bed guard and adjust belt tracking if necessary.
 - 5.4. Replace sanding disc pad. Remove table and disc guard. Peel off of pad, and stick new pad in place.
 - 5.5. Periodically lubricate the drive bearings. DO NOT lubricate motor bearing. The motor is a sealed unit.
 - 5.6. To change the drive belt inside cover (fig 3.Z), remove disc guard (Y) and sanding pad from disc (A). Undo central screw in disc and the back hex screw by inserting long hex key through access hole in top of guard (M). Remove disc (H). Remove belt cover (Z) and replace belt. Re-assemble unit.

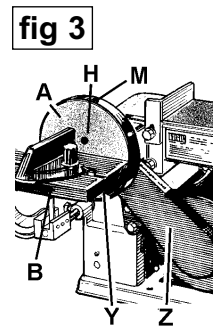

NOTE: Other service and maintenance below must be carried out by your authorised Sealey service agent.

BENCH TOP BELT/DISC SANDER Model SM14/C

73/23/EEC Low Voltage Directive
 89/336/EEC EMC Directive
 98/37/EC Machinery Directive
 93/68/EEC CE Marking Directive

Declaration of Conformity We, the sole importer into the UK, declare that the product listed here is in conformity with the following standards and directives.



Signed by Mark Sweetman

1st June 2000

The construction file for this product is held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.

For Jack Sealey Ltd. Sole importer into the UK of Sealey Quality Machinery.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor,
 Sealey Group,
 Bury St. Edmunds, Suffolk.



01284 757500



01284 703534

E-mail: sales@sealey.co.uk